

***Terrain*Tools[®]**

Terrain Tools Forestry Tutorial

Version 9

Softree Technical Systems Inc.

Document Version - December 17, 2019

The software described in this document is furnished under a license agreement or non-disclosure agreement. The software may be used or copied only in accordance with the terms of that agreement. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose other than the purchaser's personal use without the written permission of Softree Technical Systems Inc.

No warranty is expressed or implied as to the documented function or performance of the software described. The user of the software is expected to make the final evaluation of the results in the context of his own application.

Copyright Softree Technical Systems Inc. 2019. All rights reserved.

Trade Marks:

AutoCAD is a registered trademark of Autodesk.

Microsoft Windows 10, Windows 7, Microsoft Word, and Microsoft Excel are trademarks of Microsoft Corporation.

Terrain Tools® and RoadEng® are registered trademarks of Softree Technical Systems Inc.



Table of Contents

TABLE OF CONTENTS	3
1. GETTING STARTED	6
INSTALLATION	6
Documents	6
Don't Save Files (in most cases)	6
Defaults and Layouts	6
Function Groups	7
On-line Help	7
Tutorial Units	8
SCREEN LAYOUTS	8
Conventions.....	9
USER INTERFACE OPTIONS: TOOLBAR & RIBBON MODES	9
2. FUNCTIONAL OVERVIEW	11
MODULE DESCRIPTIONS	11
Survey/Map Module.....	11
Terrain Module	12
Location Module.....	13
TERRAIN FUNCTIONS	13
Window Types.....	13
Points, Features, Attributes, and Feature Properties	13
Current Feature and Point	16
3. BASIC MAPPING AND DRAFTING	17
SCALING MAPS: PARK MAP EXAMPLE	17
DRAWING FEATURES	19
Drawing Features Using the Mouse – Method One.....	19
Drawing Features Using the Mouse – Method One.....	19
Drawing Features Using the Mouse & Keyboard: Method Two.....	25
SELECTING FEATURES	26
Selecting Individual Features with the Mouse.....	26
Selecting Groups of Features with the Mouse.....	27
Selecting All Features.....	27
Inverting Selection.....	27
Selecting Features by Name.....	27
Selecting Features by Layer.....	29
LINE-TYPES	31
SYMBOLS	32
CREATING A BOUNDARY POLYGON	34
LABELS	36
Hatching.....	38
CREATING AN OUTPUT SHEET	40
Adding a Legend and Scale Bar.....	42
4. IMAGES	46
SCALING AN IMAGE	46
Tracing Image Features	50

ADJUSTING AN IMAGE	52
Moving and Resizing	53
5. FEATURES, COORDINATES AND ATTRIBUTES	57
IMPORTING DWG OR DXF FILES	57
IMPORTING SHAPE FILES	59
IMPORTING ASCII FILES	62
Setting up an Import Format.....	63
KEYBOARD COORDINATE ENTRY	68
Enter the Main Boundary	69
Enter the Easement Boundary.....	72
COORDINATE SYSTEMS AND MAP PROJECTIONS	74
Verifying a Coordinate System using Google Earth	76
6. WORKING WITH LIDAR	78
SIZE AND ACCURACY CONSIDERATIONS	78
IMPORTING LIDAR IN ASCII FORMAT	78
SETTING UP A LINEAR CORRIDOR FEATURE	79
Thinning Data on Import	83
Thinning Data After Import.....	85
Basic Grid Simplification (fast)	87
Closest Point Removal (slow).....	89
7. DIGITAL TERRAIN MODELING	91
CREATING A CONTOUR MAP.....	91
Generating Contours	91
Removing Void Areas	95
IMPROVING CONTOURING WITH BREAKLINES.....	99
CALCULATING VOLUMES.....	102
Calculating Volumes Using Two Surfaces	102
Calculating Volumes using a Single Surface.....	106
SURFACE DISPLAY	107
Slope Vectors.....	107
Shading.....	109
3D Displays.....	111
8. PROFILES AND DRAPED FEATURES	113
CREATING A PROFILE.....	114
Cross Sections - 2D and 3D Features	117
MODIFYING FEATURES IN THE PROFILE WINDOW	123
PROFILE WINDOW DESIGN AND DRAFTING: CULVERT DESIGN	124
Intersected and Projected Features.....	127
Design in the Profile Window	129
9. GRADING	134
GRADING CONCEPTS.....	134
Platform Design.....	134
Grading the Platform.....	136
Merging Terrains	140
10. TRAVERSE DATA	144

CREATING A PROFILE FROM A TRAVERSE	144
CREATING A DTM FROM A RADIAL SURVEY.....	148
11. CREATING CUSTOM SYMBOLS & LINE-TYPES	153
CREATING SYMBOLS	153
Load external Symbols.....	155
Create a New Symbol.....	156
CREATING LINE-TYPES	160
Load External Lines.....	161
12. CABLE ANALYSIS	166
ADDING CUSTOM EQUIPMENT AND LOGGING SYSTEMS	166
CABLE ANALYSIS ON A DRAPED FEATURE	169
EXPLORING MULTIPLE AREAS OF DEFLECTION.....	174
The Cable Data window and Profile Sub-windows.....	178
Configuring the Cable Data Window.....	179
Adding Profile Sub Windows	180
Single Deflection Line Output Sheets	183
Multiple Deflection Lines on a Single Output Sheet.....	186
Approximating Multi-Span Cable Yarding Scenarios	189
INDEX	195

1. Getting Started

This manual is formatted as a hands-on tutorial, which can be used by novice or experienced users. Step by step examples use prepared documents and data files to illustrate tools needed for common Terrain Tools Forest Engineer and RoadEng® tasks.

Installation

The tutorial files referred to in the following examples can be installed from Terrain Tools Forestry or RoadEng Forest Engineer install CD/Flash Drive or from Softree's Support web site:

Web

Go to the *Support-Documentation Updates* page on Softree's web site:

<https://support.softree.com/product-updates/Documentation-Tutorials>

Documents

The tutorial files (data sets) will be installed in the folder below by default:

C:\Users\Public\Documents\softree\training90\Terrain

It is possible to change this folder at install time; you can also copy it to a new location afterwards if you wish. We will refer to the install folder as **<Terrain>** in the examples below.

Recommendation: To make accessing files easier as you work through the tutorial, we suggest pinning the <Terrain> folder to your Quick Access menu. To do so, open Windows Explorer, navigate to the folder <Terrain>. Right-click on the folder, select "Pin to Quick Access". This will now make the folder available on the left-hand side of Windows Explorer (see figure below).

Don't Save Files (in most cases)

Most of the following examples end with the phrase: "... do not save changes". If you modify the tutorial files, they will no longer work with the steps in the exercise; this will prevent you, or someone else, coming back and doing the exercise again.

If a file gets modified, delete the files in the training folder. Then re-install the tutorial files (per the original steps).

C:\Users\Public\Documents\softree\training90\Terrain

Defaults and Layouts

The setup and layout files are stored the folder below by default:

C:\ProgramData\Softree\Terrain

It is possible to change this folder, so we will refer to it as **<Defaults and Layouts>** in the examples below. A folder containing training specific files has also been added to this location:

<Defaults and Layouts>

Note: You can always determine the actual **<Defaults and Layouts>** folder by running the Terrain Module, selecting menu *Module | Setup* and clicking on the *Install* tab.

If RoadEng was installed, the default folder will be:

C:\ProgramData\Softree\RoadEng9

Function Groups

Some RoadEng® and Terrain Tools® products have certain features; we classify these optional features by *function group*.

To view the features enabled with your license:

1. Select *Setup | Module Setup* and click on the *General* tab.
2. Click on the *Menus...* to open the Menu Customization Dialogue box.

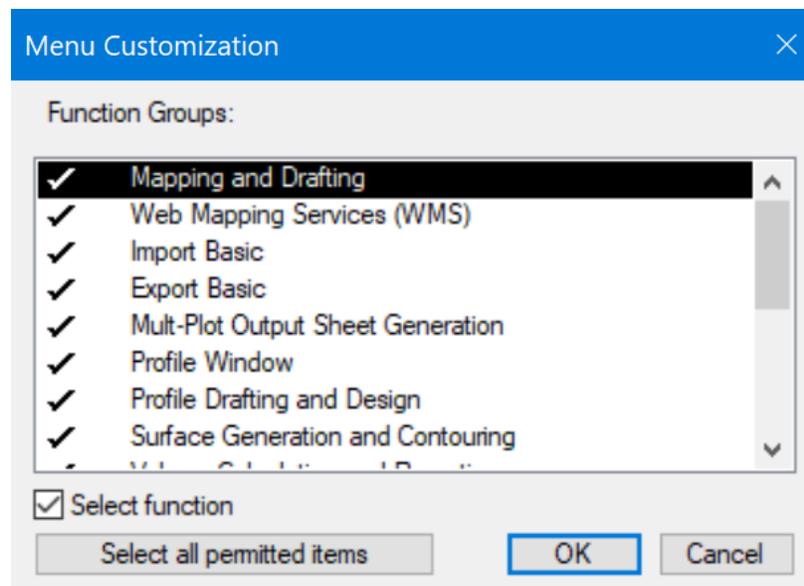


Figure 1-1 : Function groups displayed in the Menu Customisation dialogue

On-line Help

Help information is available by choosing the *Help* menu or pressing **<F1>** on your keyboard. The On-line Help includes detailed technical information about menus, dialogue boxes, and operation of the program. It may be useful to refer to the On-line Help while working through the examples in this manual.

Additional help is available through the Softree Knowledge Base:

<https://www.support.softree.com/knowledge-base>

Tutorial Units

Most examples in this tutorial are in Imperial Units (feet). To correctly follow the examples, ensure Imperial (ft) units are enabled in the *Setup | Setup Module Setup | Units* tab | Units: *Imperial (ft)*. If other units are used they will be specified at the start of the example. The procedures and concepts described apply to all unit systems.

Screen Layouts

Screen layouts are small files that save display options (window positions, labels, scales etc). Many of the examples in this training manual include a step to retrieve a screen layout; this change provides multiple view options in one quick step.

The *screen layout* drop-down control can be found in the Standard toolbar in all modules (figure below), *View | Screen Layout*:

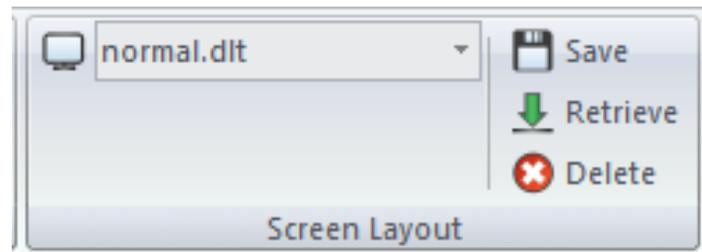


Figure 1-2: Accessing Screen Layouts Group

With the drop-down expanded, you can:

- <Right-click> on a screen layout in the *Screen Layouts* tool bar item to: Change Properties, Delete, Copy, Save
- <Right-click> on a folder (Softree or Custom) in the *Screen Layouts* tool bar item to:
 - Change properties (only the *Custom* folder can be changed here)
 - Paste a screen layout that was recently copied
 - Save new layout (define name and description)

The *Custom* folder is often defined on a network drive so that the layouts are accessible to all users.

- The *Save screen layout* button  allows you to save a screen layout anywhere but only those in the *Custom* or *Softree* folders will appear in the *Screen Layouts* tool bar.
- The *Retrieve screen layout* button  allows you to open a screen layout file anywhere including those in the *Custom*, *Training* or *Softree* folders.
- The *Delete screen layout* button  opens up the screen layout folder where you can multiple layouts to delete.
- You can change the *Softree* folder from the menu *Module | Setup, Install* tab. Do not do this unless you understand the consequences; more than just screen layouts are stored in this folder. The most common change is to put *Settings and Layouts* into your *Documents* folder (private to one user only).

Note: Screen layouts were updated in Version 9. Softree recommends ‘updating’ any legacy user screen layouts to update their behavior. Version 9 layouts work better when moved between monitors of differing screen resolutions.

To ‘update’ your screen layouts:

If your legacy screen layout contains multi-plot information, please open your legacy screen layout in the multi-plot window first:

Select *Multi-Plot* tab | *Add New* ▼ | *Retrieve Other Layout*. Select ***Multi-Plot Old Screen Layout (.dlt)*** from the file type drop-down in the *Retrieve Screen Layout Dialogue*. Select your legacy layout. Once open, press *Save Chapter* in the Multi-Plot ribbon.

Conventions

The following conventions are used throughout the manual:

- Menu functions are delimited by a line “|”.  *File* | *Open* means to click on  *Terrain File* button in the corner of the menu bar and then select *Open* from the drop-down menu. Dialogue box control (like buttons) and heading names are *italicized*.
- The symbols “< >” contain keyboard functions. For example, < shift-enter > means: hold down the *Shift* key and press the *Enter* key.
- File names and path names are ***bold and italicized***.

User Interface Options: *Toolbar & Ribbon Modes*

This tutorial was written for the new Version 9 user interface in *Ribbon Mode*.

Please ensure that your Softree Optimal program is in *Ribbon Mode*. Your screen should appear with this group bar showing,



Figure 1-3: Ribbon Mode

To switch from tool bar mode into ribbon mode: Select *View* tab | *Ribbon Mode*

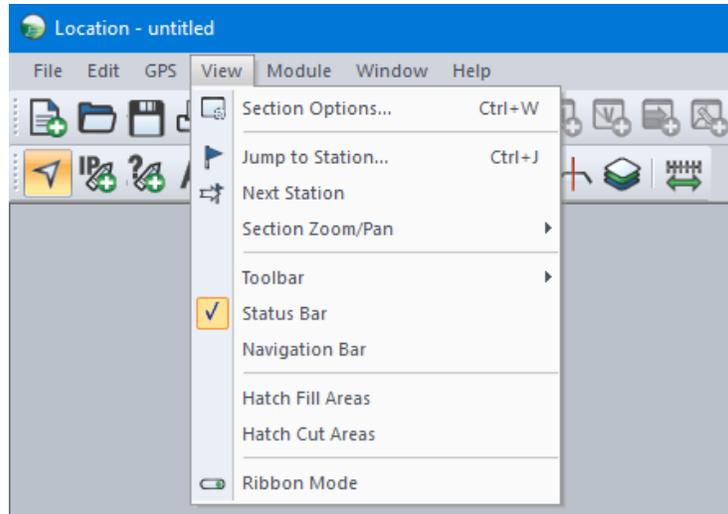


Figure 1-4: Changing to Ribbon Mode

To switch from group mode into toolbar mode: Select View tab | Switch to Toolbar Mode

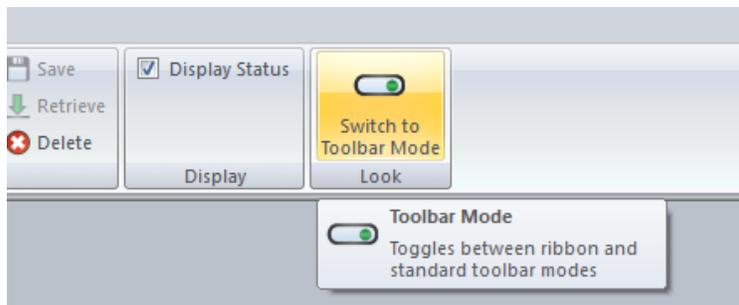


Figure 1-5: Changing to Toolbar Mode

2. Functional Overview

Softree software solutions are sold as modular products. Depending on the product you have purchased, it could include up to three *modules*:

1. **Survey/Map**
2. **Terrain**
3. **Location**

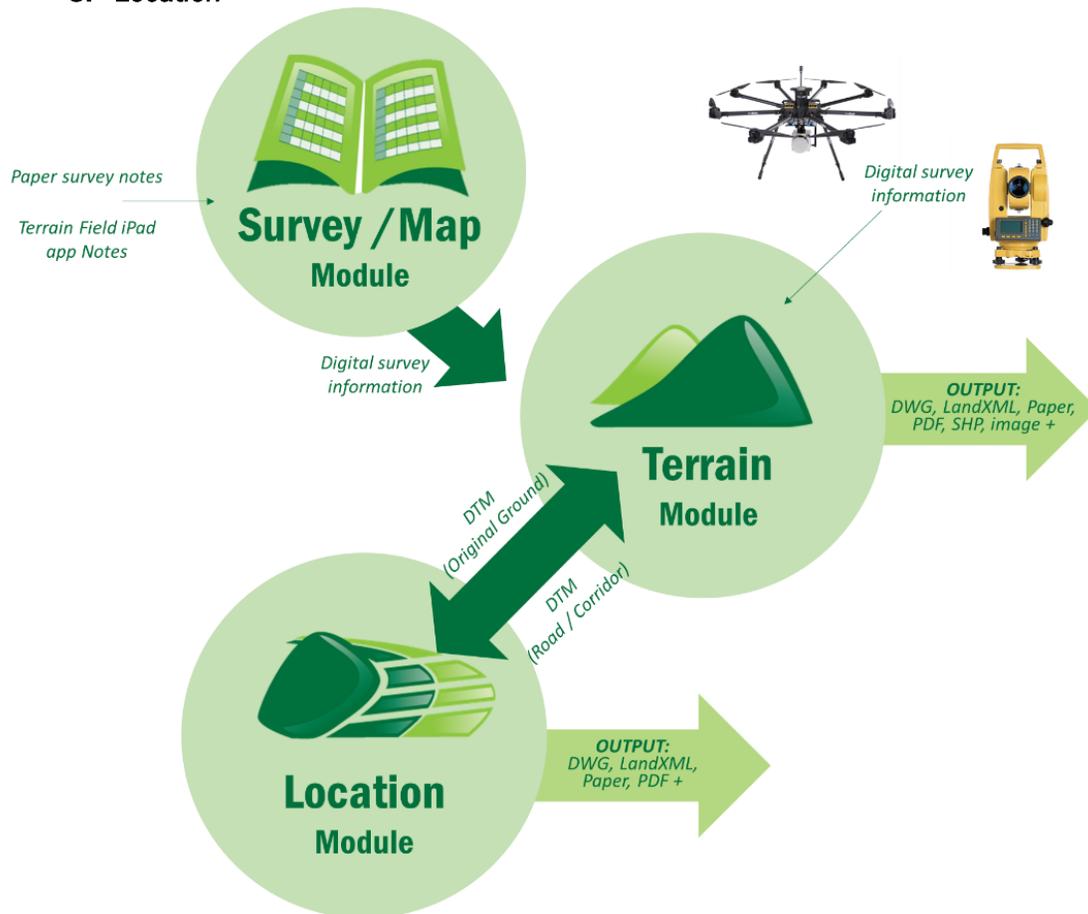


Figure 2-1: Relationship Between the Modules

Each of the modules can be started from the Windows Start menu, a desktop shortcut or from the *Setup* tab within either of the other modules.

Module Descriptions

Survey/Map Module

This module is used primarily to type paper survey notes into the computer. Azimuths, distances and slopes are entered and reduced to coordinates. Facilities exist to add perpendicular side shots to a traverse so that a group of terrain, suitable for a road design, can be easily captured with basic survey instruments.

Survey/Map also contains tools for adjusting traverses with respect to each other or to known coordinates.

Terrain Module

The Terrain Module provides basic CAD facilities for assembling and manipulating 2D and 3D points and features. Information can be imported from external sources like survey files, CAD files and image files. Three dimensional coordinates can be incorporated into a digital terrain model (DTM).

DTMs can be used for:

- Contour generation
- Section and profile display
- Volume calculations
- Pad, pit and site design (grading)
- 3D viewing
- Original ground for road design (Location module)

The Terrain module is also a capable mapping tool with control of line types, colors, symbols, hatching and labelling styles.

The Terrain Module (the focus of this tutorial manual) provides 5 main windows: Profile, Plan, 3D, Multi-Plot, and Cable; and 3 panel types: Feature Properties, and Points. The number and type of windows available depends on the *Function Groups* you have enabled. The figure below shows a typical window arrangement:

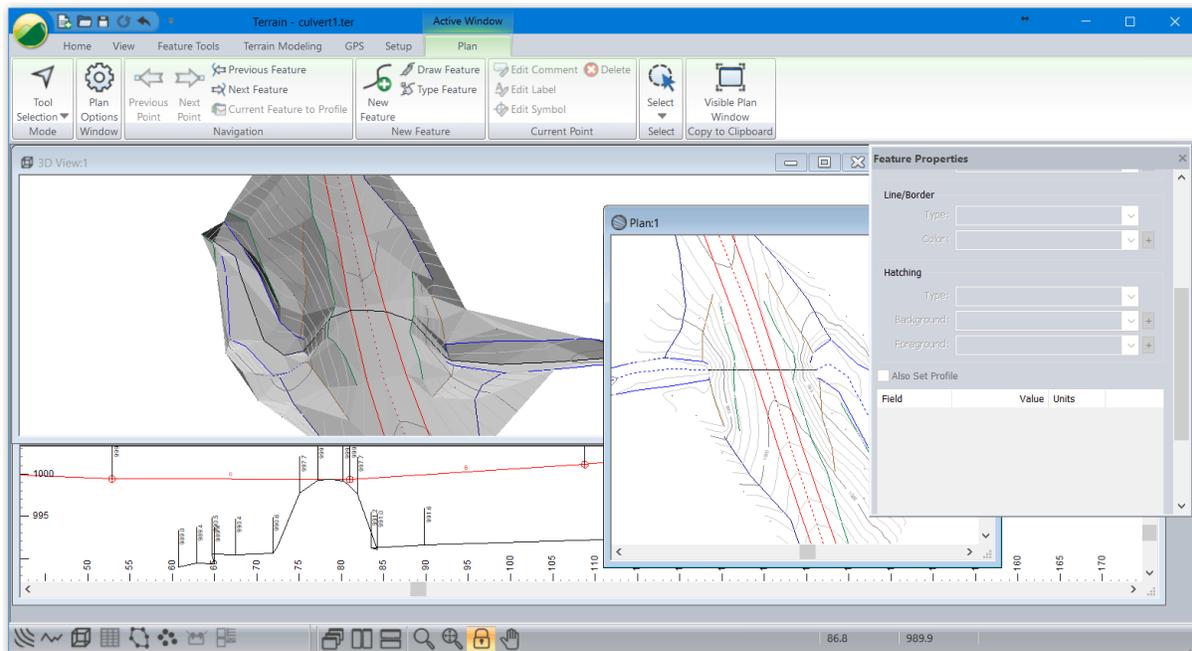


Figure 2-2: Various Windows Displayed in Terrain

Location Module

This is the module used to design road alignments. Location requires an original ground terrain (provided by the Survey/Map and/or Terrain modules). The designer controls cross section templates, alignment location and curves. Location provides real time feedback of volumes, mass haul, road footprint, cross sections, grades, etc.

Location can also export designed surfaces back to the terrain module where they can be merged into a composite surface. This is the most common way to prepare the original ground for an intersection design.

Terrain Functions

Window Types



Plan Window displays a plan View. It is used to display and edit features.



Profile Window displays a profile view of one or more selected features. This window requires that the Profile Window function group be enabled.



Feature Properties Panel displays the properties of the feature and numeric information about the current feature and point. It can be used as a floating window or as a docked panel window on the right-hand side of the screen.



Points Panel is used to report and/or modify attribute information about the current point. It can be used as a floating window or as a docked panel window on the right-hand side of the screen.



Features Panel is used to report and/or modify attribute information about the current feature. It can be used as a floating window or as a docked panel window on the right-hand side of the screen.



3D Window displays the features in a 3-dimensional view.



Multi-plot Window is used to create an output sheet containing plans, profiles, legends, scale bar, images etc. This window requires that the Multi-plot function group be enabled.

Each window can be sized, moved, maximized and minimized in the standard Microsoft fashion. All windows can be arranged using *View | Cascade, Tile Vertically, Tile Horizontally* buttons.

Text windows such as *Features* can be floating or docked to the right side of the screen. To dock a floating window, click the title bar of the window and move it over the right-hand side of the main window. The panel will dock automatically.

Points, Features, Attributes, and Feature Properties

Features

A feature is a collection of points such as a contour line, a lake boundary or a spot elevation point. Bitmap images are also considered to be features (in this case the corners are the points). Many operations in Terrain apply to features or groups of features such as formatting, moving, deleting etc. Feature attributes can be assigned to the features.

Points

Features consist of 1 or more XYZ coordinate points. Point attributes can be assigned to individual points.

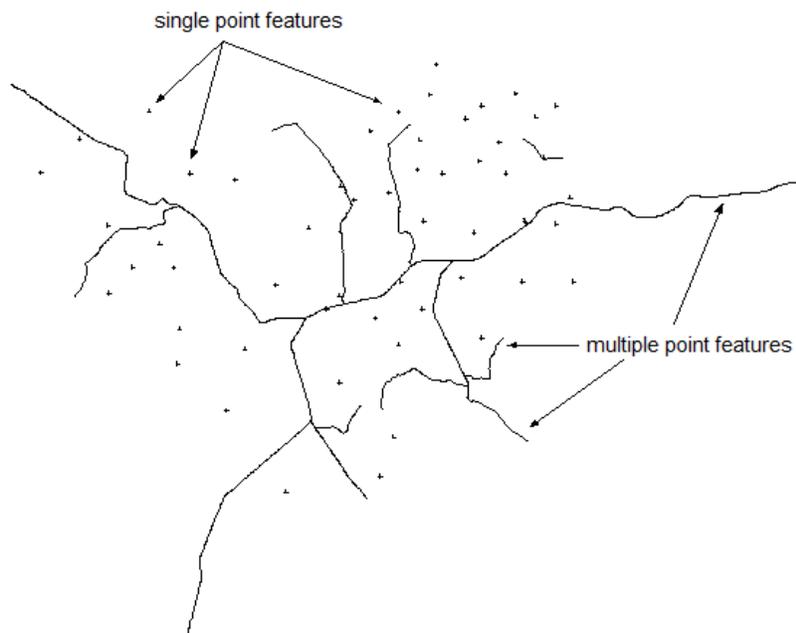


Figure 2-3: Single and Multiple Point Features

Attributes

Attributes are the properties of a particular object. They can be things like line type and color, which are editable feature attributes, or things like the number of features in a file which is a read-only attribute.

Attributes can be viewed through the Status Window, the Features Window or the Points Window. There are three broad classifications of attributes and they are as follows:

- Point Attributes - properties of a point on a feature.
- Feature Attributes - properties of a feature.
- File Attributes - properties of all the features and the file as a whole.

Attributes are grouped together in categories. Many categories are pre-defined, but you can create your own attribute definitions by adding a new category using the Attributes Setup Dialogue. An example of a pre-defined category is Format. The Format category contains feature attributes such as line type, color, and hatch. These attributes are not read-only, so you can modify them in the Features Window.

Fixed Feature Attributes (Feature Properties)

Every feature has a set of fixed attributes (additional attributes are optional). These attributes are saved in a feature header.

The following properties are saved with every feature:

<i>Feature Name</i>	Each feature has a unique name consisting of a 50-character Alphanumeric Id portion and a Numeric Id. It is possible to have more than 1 feature with the same Alphanumeric ID e.g. STREAM-1, STREAM-2 etc. The feature name is not case sensitive i.e. " RightOfWay11" = " RIGHTOFWAY11".
<i>Line-type, Color, Symbol and Hatchtype</i>	Drawing format
<i>Displayed</i>	Visibility e.g. displayed or hidden
<i>Connected</i>	Feature points are connected by lines or isolated (refer to Figure 2-4)
<i>Elevation</i>	Feature points have elevations
<i>Modeled</i>	Feature points will be included in the TIN model
<i>Breakline</i>	Feature is a breakline (TIN modeling)
<i>Negative Area</i>	Feature represents a hole with negative area. This option can be used with TIN Boundary below.
<i>TIN Boundary</i>	Feature is a TIN boundary
<i>Surface Volume Boundary</i>	Feature is used as a polygon to accumulate volumes in the volume calculations.

Note: When working with very large data sets it is not a good idea to use single point features because the memory overhead for the feature header can be significant. If possible, make sure that data are grouped into features containing a number of points (1000+).

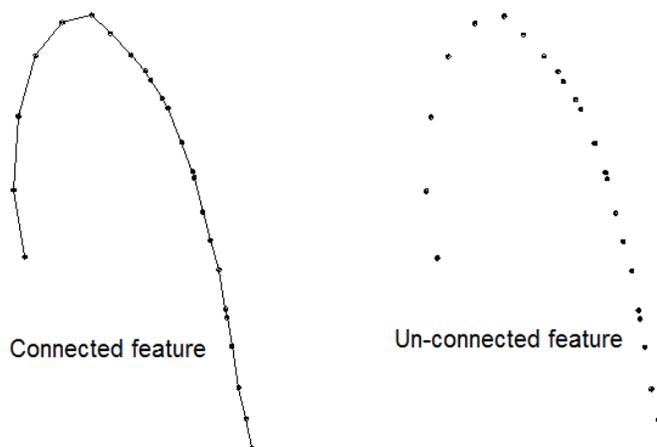


Figure 2-4: Connected and Unconnected Feature Property

Current Feature and Point

In the Terrain module, it is possible to *select* multiple features; selected features are the target of most operations (delete, move, change line-type, change properties, etc.). Often the concept of current point and current feature is used. At least one feature must be selected.

- There is no current point or feature if no features are selected. Selected features are always displayed with color magenta.
- The Current Point is displayed in the plan and profile windows with a red cross.
- The Current Feature is the selected feature containing the Current Point.
- Most of the information displayed in the Status window relates to the Current Feature and Current Point.
- Selecting with the mouse (in *selection mode* ) is a common and simple way to change the *Current Feature* and *Current Point*.

3. Basic Mapping and Drafting

This section is intended to provide the user with an introduction to the Terrain Module mapping and drafting functions. No special knowledge of surveying or mapping is required other than some basic familiarity with scales and coordinates.

To do the examples in this section the *Mapping and Drafting*, *Import Basic* and *Export Basic* function groups must be enabled.

Scaling Maps: Park Map Example

Note: See Getting Started section for file install folders <Terrain> and <Defaults and Layouts>

1.  File | Open <Terrain>\CAD\park map.terx

The Terrain Module works with natural scales. A natural scale of 1:5000 indicates 1 unit on the paper drawing = 5000 units on the ground. If working with mixed unit scale such as 1" = 200', then it must be converted to a natural scale before using it with Terrain (1":200' is the same as 1": 2400" i.e., a natural scale of 2400).

2. View | Change scale in Scale Box to **25,000**. Activate the Plan Window by clicking on the Title Bar. Experiment with the scale setting it to **15,000**, then change the scale to **25,000** and press <Enter>.

Notice the change in the screen view. Changing scales adjusts the size of map features. Labels, line-types and symbols are not adjusted and remain the same size. When creating a drawing, it is important to set the scale to the required output scale before adjusting label positions.

3. Your screen should look like the Figure 3-1. If it does not, maximize your Plan  window.

Note: Zooming functions    magnify (or shrink) the entire drawing including labels, symbols and line-types when the *Scale Lock* button  is depressed or locked. When it is not depressed the scale will change but the labels, symbols and line-types will stay the same size.

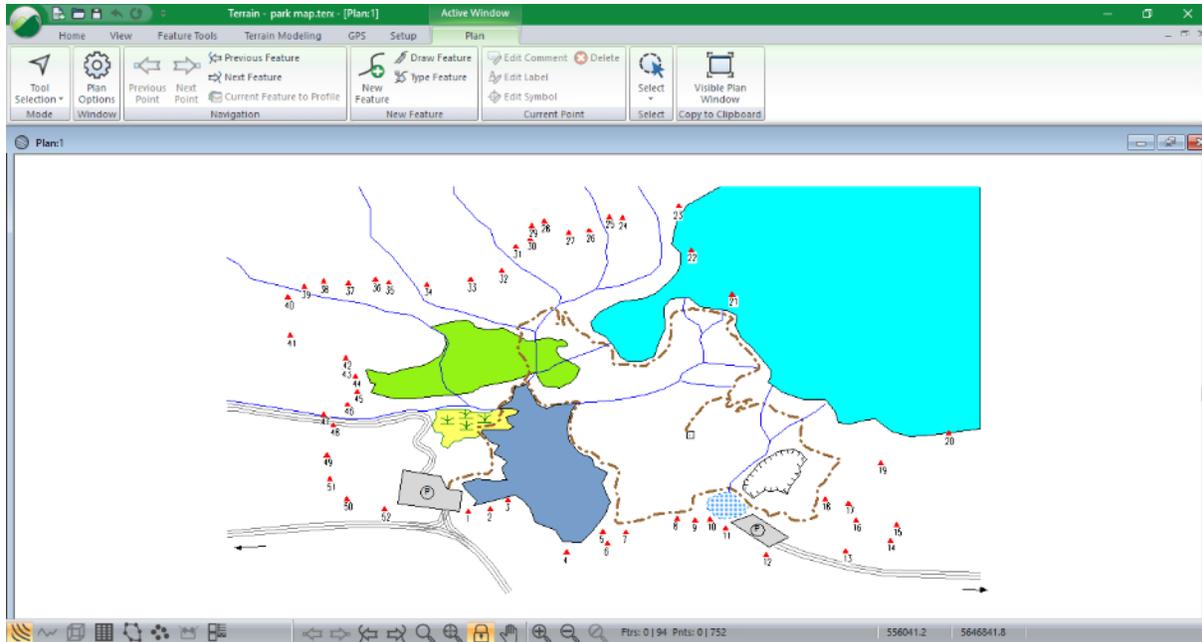


Figure 3-1: File park map.tex open in Terrain Tools

4. Turn on labels: *Plan* | *Plan Options*, select the *Labels* tab from within the *Plan Window Options* dialogue.
5. In the list of available Label options, double-click *Feature Name*. Press *OK*.

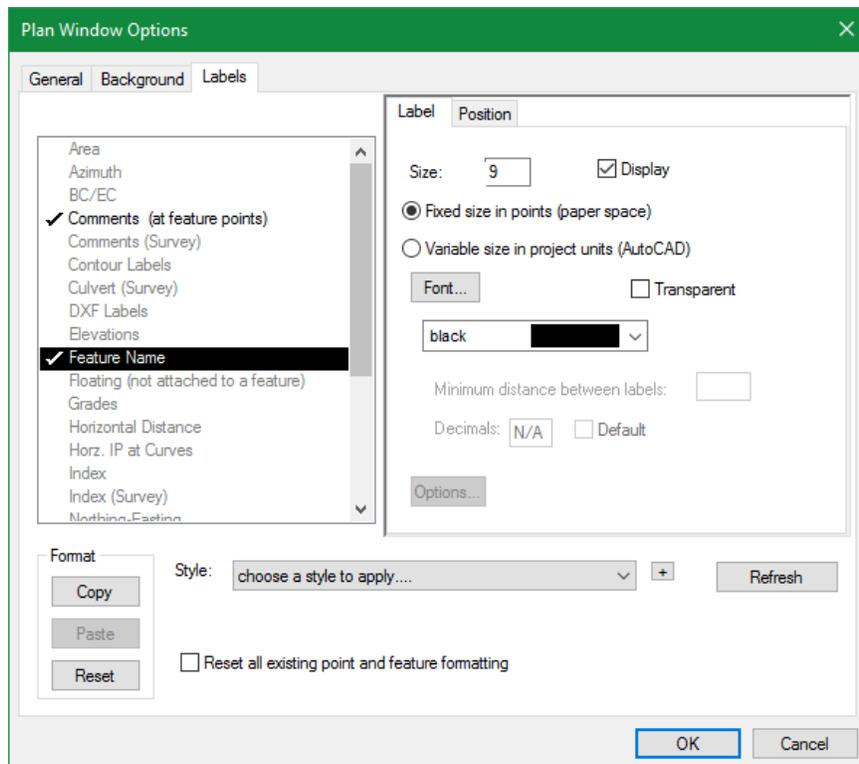


Figure 3-2: Plan Window Options - Label Control

This will have added Feature Names to every feature in your map.

6. With the *Scale Lock* button depressed (orange), click on the *View | Zoom 200%* or (*Magnification Double*) button  and *Zoom 50%* button / (*Magnification Half*) button  several times. Notice that the label and line sizes change but the scale remains the same. You can also use the mouse wheel to zoom in and out.
7. Turn off the *Lock Scale* button  Repeat the above step. Notice that the windows toolbar buttons: *Magnification Double* button  the scale halves and the *Magnification Half* button  the scale doubles. Labels and line-types stay the same size as the scale changes.
8. With the scale unlocked zoom in then lock the scale. This will keep the labels a size that will not interfere with the drawing.
9.  *File | New* to close **park map.terx**. Do not save any changes.

Drawing Features

Drawing Features Using the Mouse – Method One

Drawing Features Using the Mouse – Method One

This example demonstrates basic drawing operations using the mouse. When you are in *Edit/Insert point with mouse* mode (see *Plan* or *Home* ribbon, *Tool Selection Mode* control) the cursor looks like a pencil . However, it will change when you move the mouse over the current selected feature.



Entry mode – New points are added at either end of the current feature.



Insert mode - New points are inserted in between existing points.



Edit mode - Existing points are edited.

1.  *File | Open* <Terrain>\CAD**drawing.terx**.

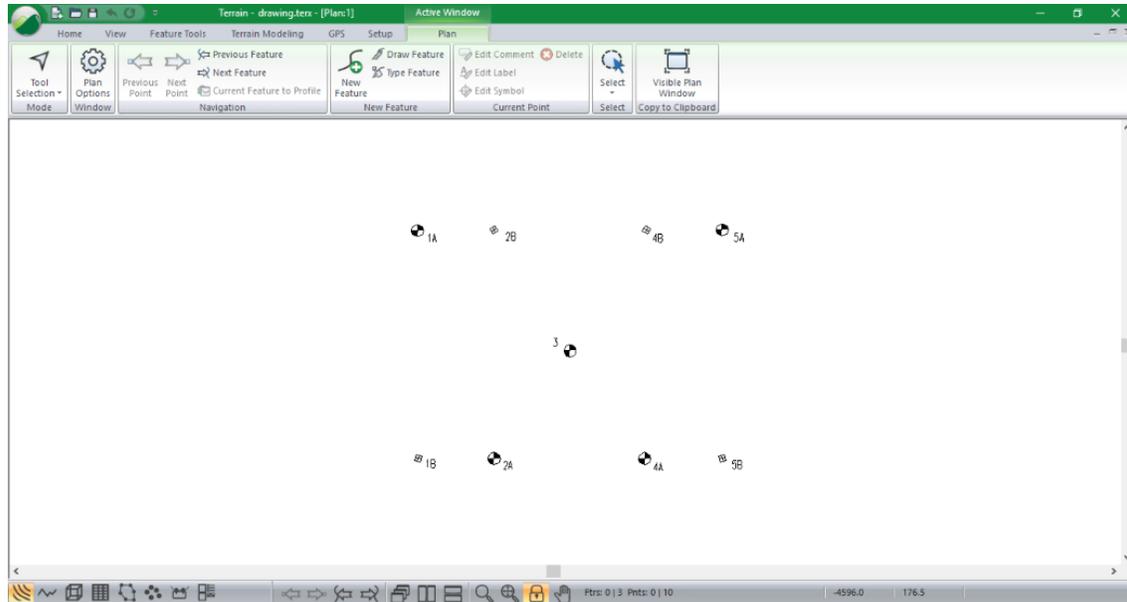


Figure 3-3: File *Drawing.tex* Open in Terrain Tools

Over the next few steps, we will create the drawing as shown in the figure below:

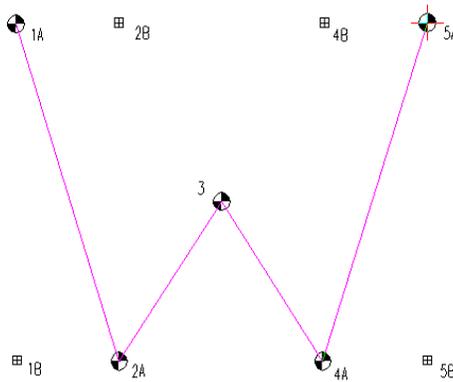


Figure 3-4: Creating a New Feature

To make this easier (and more precise), we will first turn on point snapping.

2. Select the *Plan* | *Plan Options* button  to open the *Plan Options* dialogue.
3. On the General tab, check Snap to point/line.
4. Press *Ok*.

Now we create a new feature:

5. Select ribbon *Plan* | *Draw Feature* button  *Draw Feature*.

An empty feature is created and the mode automatically changes to *Edit/Insert point with mouse*. The pencil  cursor appears in the Plan Window, indicating that a mouse click will create the first point of your new feature.

Note: Features can also be created using the *Plan | New Feature* dialogue box.

Steps to add new points:

Each new point requires two clicks of the mouse.

6. Left click (once) anywhere in the Plan window to create a new point.

The cursor changes to a cross which moves with the mouse (we say the point is *captured*).

7. Locate the symbol labeled **1A**; move your mouse cursor over it.

Note that the cursor changes  to indicate that you can *snap* to this point.

8. Left-click (a second time) to *anchor* your new point.

Your cursor changes back to the pencil ; your mouse is no longer captured.

9. Left click  anywhere in the Plan window (but not over **1A**) to create a second point.

Note that this point is connected to the first point.

10. Move your mouse over **2A** and click a second time to anchor.

Now that we have a feature with two points, we can add points at either end.

11. Left click near **4A**.

This creates a new segment attached to the *end* of our feature.

12. Move your mouse over **4A** and click a second time to anchor.

13. Left click at the top-left of your Plan window (closer to **1A**).

Now you have a new segment connected to the *start* of our feature (see figure below).

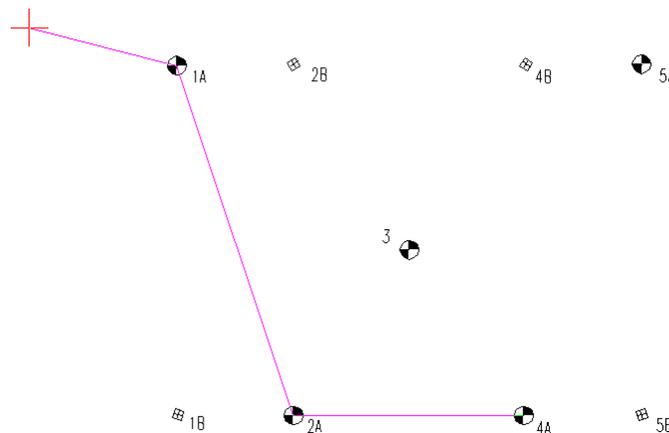


Figure 3-5: A new segment added to the *start* of the feature.

Escape to abort:

14. Type the <escape> key to remove this segment *before* you anchor.

Note: To undo most actions, use the *undo arrow* button  on the left-hand side at the top of the screen or <ctrl + Z>.

Your screen should now look like Figure 3-6.

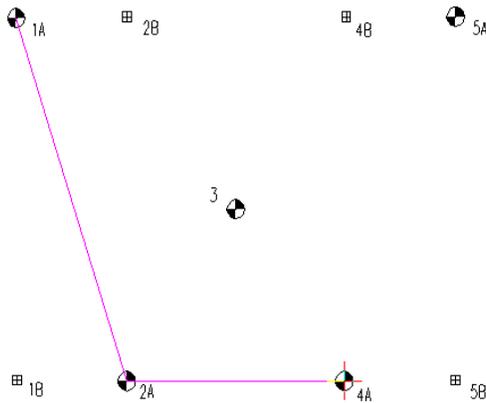


Figure 3-6: Drawing With The Mouse

Steps to *insert* a point (between existing points):

15. Move the cursor over the line segment between **2A** and **4A**.

Notice the cursor changes to the *insert* cursor  (pencil with cross).

16. *Left-click* to insert a captured point between **2A** and **4A**.

17. Move mouse over point **3** and *left-click* to anchor the new point.

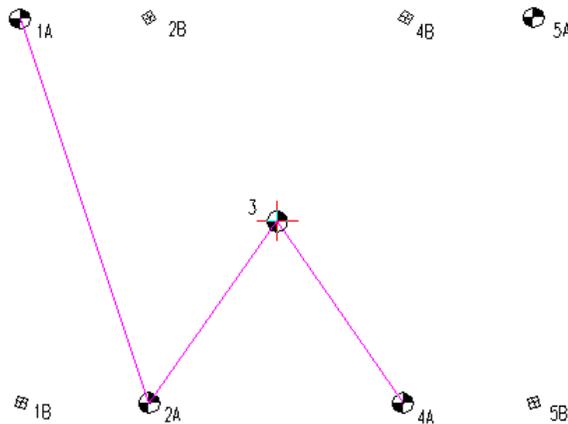


Figure 3-7: Inserting a Point at the Middle of a Segment

18. Create a segment from **4A** to **5A**:

19. Move the cursor near **5A** and *left-click* to create a point.

20. Move mouse over point **5A** and *left-click* to anchor.

Your feature should now look like a 'W' as shown in the figure below.

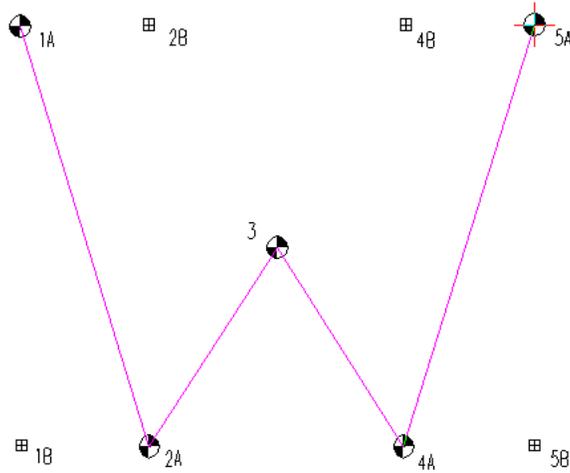


Figure 3-8: Completed W, Points Connected With Mouse

Steps to edit existing points:

So far, we have only created new points; now we will edit existing feature points to change the 'W' to an 'M' (see figure below).

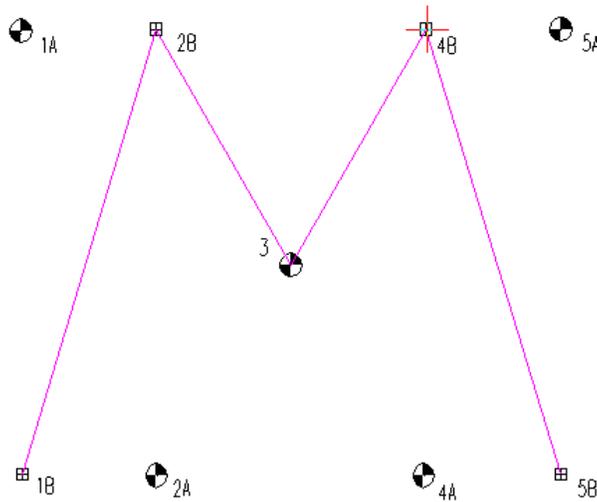


Figure 3-9: Completed M Connected With Mouse

21. Move the  cursor over **1A** (the first point on the feature).

The cursor changes to the *Edit*  cursor.

22. *Left-click* to capture the first point in the feature.

23. Move your mouse over **1B** and *left-click* again to re-anchor.

24. Repeat the above steps, moving points **2A** to **2B**, **4A** to **4B**, and **5A** to **5B**.

Note: When a point is captured it can be released by pressing the <esc> key and deleted by pressing the <delete> key. If the point is anchored and the <delete> key is pressed the entire feature will be deleted.

Steps to delete existing points:

When a feature is selected, the <delete> key will delete the entire feature (all points). To delete a single point, you must *capture* it first.

25. Move the  cursor over any existing feature point.

The cursor changes to the *Edit*  cursor.

26. *Left-click* to capture.

27. *Type* the <delete> key to remove this point.

28.  *File* | *New*, do not save changes. Continue to the next tutorial.

Drawing Features Using the Mouse & Keyboard: Method Two

This example demonstrates an easier method to draw a new feature using the mouse.

29.  *File* | *Open* <Terrain>\CAD\park map.terx. Click on the *Zoom Extents* button  in the windows toolbar.

The *Plan Window* now displays triangular symbols with index stations 1 to 54. These index stations are surveyed points along the boundary. The following steps demonstrate how to trace the park boundary by "connecting the dots".

Note: Turn on *Snap to Point/line: Plan* | *Plan Options* button | *General* tab | *Check box Snap to point/line*. When a new point is created, or an existing point is edited, the nearest point on an adjacent feature is also selected if it is within a minimum distance (2 mm).

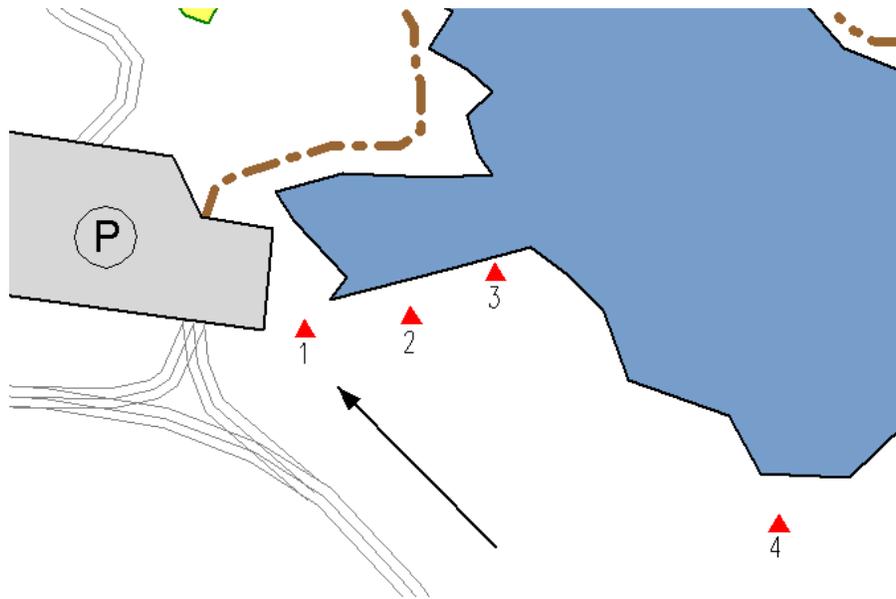


Figure 3-10: Boundary Starting Point

30. On either the *Plan* tab or the *Home* tab, select *Draw Feature*.
31. Position the cursor over the center of *station 1* (indicated with the arrow in the figure above) and press the number 5-key on the number pad or if your computer does not have a number pad use the letter S. A new point should be created at the cursor position. If this does not happen, check that *Num Lock* on the keyboard is on.
32. Move the cursor to Station 2 and press the 5-key on the number pad (or S Key). A new point will be created at the cursor position. Continue adding points around the boundary until it is closed. In case of a mistake use the edit  function as described below to correct the problem.

Note: To change the location of an anchored point, move the entry  cursor over the desired point until the cursor changes to the edit  cursor and *left-click*. Once the point is captured press the <delete> key to delete the point. Pressing the <Esc> key will restore the point to its previous location provided that the new point has not already been anchored. If the point needs to be restored even after anchoring, use the *undo arrow* button  or <ctrl + Z>.

33. If you have created a new feature with elevations (*Feature Tools* | *Feature Properties* button), it is possible to enter elevations using the following key definitions.

5 or S	Same elevation as previous point. This may be overridden by Snap to Point including Z.
8 or U	Up 1 contour interval. This may be overridden by Snap To Point including Z.
2 or D	Down one contour interval. This may be overridden by Snap to Point including Z.
Ins or E	Manually enter co-ordinates including elevation

34.  *File* | *New*. Do not save changes.

Selecting Features

A *feature* is a collection of points such as a contour line, a lake boundary or a single spot elevation point. Bitmap images are also considered to be features (in this case the corners of the bitmap are the feature points).

A *Terrain document* is a collection of features. Each feature has a unique name consisting of an 8-character *Alphanumeric Id* portion and a *Numeric Id* example ROAD-21. It is possible to have more than 1 feature with the same Alphanumeric ID such as STREAM-1, STREAM-2 etc.

Note: Feature names are not case sensitive "F1" = "f1".

The next several examples demonstrate how to select features by layer, name, range, property, boundary, or by using the mouse.

Selecting Individual Features with the Mouse

1.  *File* | *Open* <Terrain>\CAD\park map.terx
2. Add the *Feature Properties* panel to your screen. Press the  from the bottom *status* bar.
3. Move the Selection cursor , over one of the stream features in the Plan Window and *left-click* with the mouse. The stream feature should change color from blue to magenta (indicating that it is selected). Notice in the lower right corner the Name of the feature is displayed (STREAMCx-xx). Additional details on the feature are displayed in the *Feature Properties* panel including *name*, *properties* (displayed, connected, modelled etc), *symbols*, *line-types* etc.
4. Select another feature. Notice when a new feature is selected, the previous feature is de-selected. The information in the window also changes to reflect that of the new feature.

Selecting Groups of Features with the Mouse

5. Hold down the <Shift key> and *left-click* on a new feature. Notice that the previous feature remains selected. Use this technique to select several more features.
6. With several features selected, press the delete key on the keyboard or select *Feature Tools* | *Delete*. The features are deleted and disappear.
7. Press <ctrl + Z> or the undo arrow in the top left bar . *Left-click* in any blank area on screen to de-select all features.
8. Depress the *left mouse* button and move the mouse any direction. Notice a rectangle is formed from the position where the mouse was first clicked. Release the left button. All features inside (or crossing) the rectangle are now selected.
9. Hold down the <Shift key> and *left-click* on one of the selected features. This feature is de-selected, and the other features remain selected.
10. *Left-click* in any blank area on screen to de-select all features.

Selecting All Features

11. *Plan* | *Select* button | *All Features* or *Right-click...* | *Select Features* > *All*.

Inverting Selection

12. Hold the <shift> key down and *left-click* to de-select one of the features
13. *Plan* | *Select* | *Invert Selection*. Feature(s) previously selected are now un-selected and all feature(s) previously un-selected are now selected. In this case one feature will be selected and the rest will be de-selected.
14. Proceed to Step #2 in the next section, *Selecting Features by Layer*, or exit the program by selecting  *File* | *New*. Do not save any changes.

Note: One of the selected features contains a red cross-hair. This indicates the *current point*. The feature containing the *current point* is the *current feature*. Information about the current feature and current point are displayed in the Status Window.

Most operations in the Terrain Module apply to a selected set of features or points such as formatting, moving, deleting etc.

Selecting Features by Name

1.  *File* | *Open* <Terrain>\CAD*park map.terx*.

Note: Terrain Recreational users may get the message “Non-Permitted Functions Found in File”. If this message appears choose “Keep all functions and revert to DEMO Mode”.

If you are continuing from the previous example, select undo arrow in the top left bar . *Left-click* in any blank area to de-select all features.

2. *Plan* | *Select* Button | *By Name* from dropdown or *Right-Click* | *Selected Feature(s)* > *By Name...*

3. Within the Select feature(s) by name dialogue box press the *Advanced...* button | Type **“Survey”** in the *Select Matching Names* | *Select* button. 52 items should come up as Selected. Press *OK*. The *Selected feature(s) by name* dialogue box should appear as in Figure 3-11.

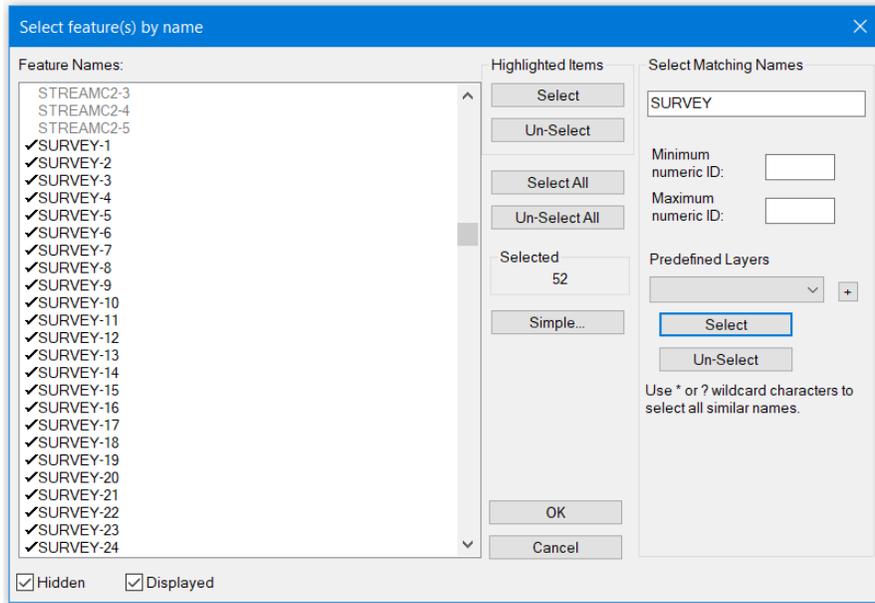


Figure 3-11: Select Feature(s) by Name Dialogue

4. If you scroll down on the sidebar you will see that many triangle features are selected and highlighted in magenta. These features have the name SURVEY. See Figure 3-12.

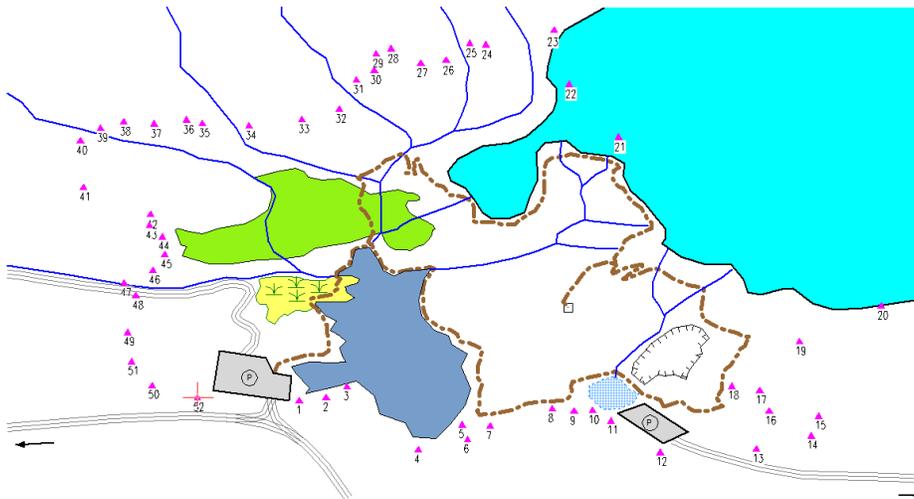


Figure 3-12: Triangle Features Highlighted in Magenta

5. File | New. Do not save any changes.

Selecting Features by Layer

Each feature has a unique ID. This name can be used to organize a map into different layers. For instance, in Park Map all Class 1 streams have been named STREAMC1 and Class 2 streams as STREAMC2. These names can be quickly used to select all Class 1 streams, Class 2 streams, or all streams.

1.  *File* | *Open* <Terrain>\CAD*park map.terx*.
2. *Home* | *Select* | *By Layer* from dropdown. The *Select Features by Layer* dialogue box is shown below.

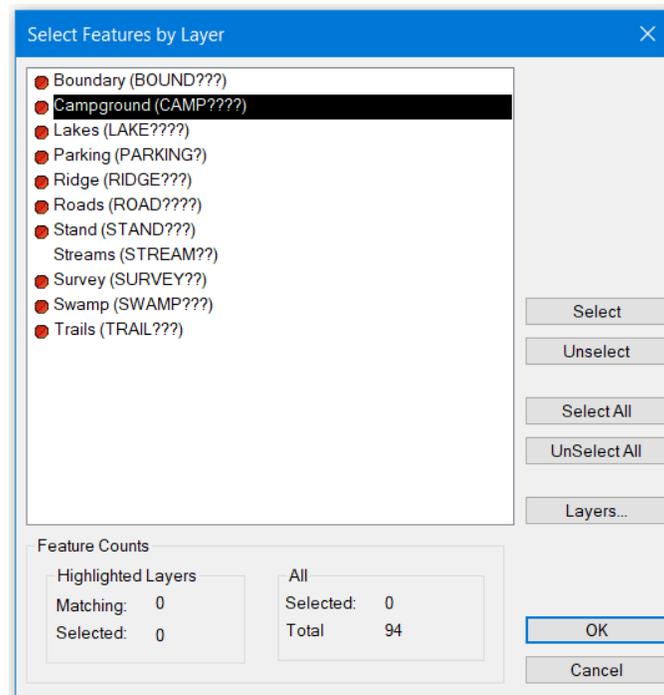


Figure 3-13: Select Feature by Layer Dialogue Box

3. Press the *Un-Select All* button to de-select all features.
4. Select *Streams (STREAM??)* in the list-box and then press the *Select* button. The information in the *Feature Counts* changes indicating that 13 of the 94 features are streams. Press *OK* button to return to the main screen. The 13 selected streams are highlighted in magenta.

Note: Features can also be selected or de-selected by double-clicking with the left mouse when the cursor is over the feature name in the dialogue box.

5. To create a new layer for the Class 1 streams: *Home* | *Select* | *By Layer*. Opens the 'Select Features by Layer' dialogue box.
6. Within the 'Select Features by Layer' dialogue box. Press the *Layers...* button to bring up the Layers dialogue shown below:

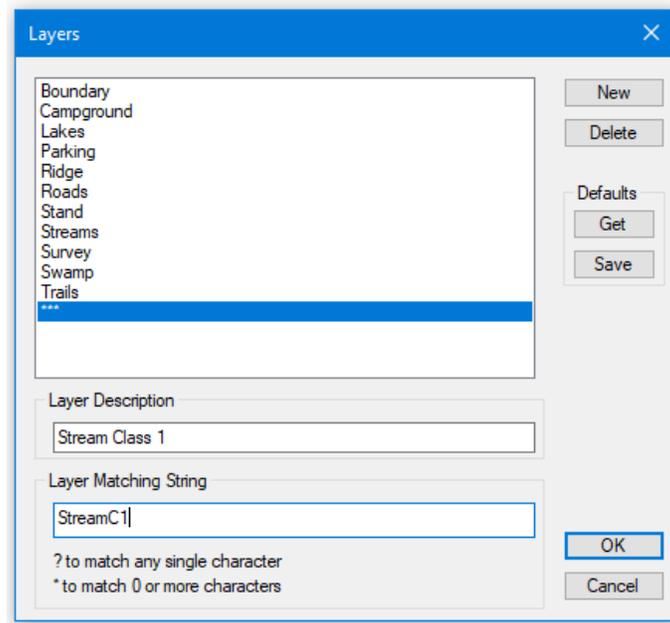


Figure 3-14: Add/Remove Layers Dialogue

7. Press *New*. Fill in the fields, Layer Description: "Stream Class 1". Layer Matching String: "STREAMC1". Press *OK* to return to the Select Features by Layer dialogue. Note that the new Layer Stream Class 1 has been added.
8. *Home* | *Select* button | *By Layer* in dropdown list. Press the *Un-Select All* button to de-select all features. Select *Streams Class 1* in the list-box and press the *Select* button to select all Class 1 stream features.
9. Look at the Streams item. Note the grey check mark beside Streams. This indicates that only part of the STREAM layer has been selected. Press *OK* to return to the main screen.

Turn off the display of all features except the STREAMS:

10. *Home* | *Select* | *By Layer* from dropdown list. Press *Unselect All*. Double-click on *Streams (STREAM??)* | Press *OK*.
11. *Home* | *Select* | *Invert Selection*. This will this switch the selected and unselected features so that all features are now selected except the streams features.
12. *Feature Tools* | *Feature Properties* | uncheck *Displayed* box. Press *OK* to return to the main screen. You can also use the *Feature Properties* panel to uncheck *Displayed* (press *Apply*).
13. All the features are still displayed. Click on a blank area of the screen (where there are no features) to de-select all features. If any highlighted features still remain: *View* | *Repaint All* button.

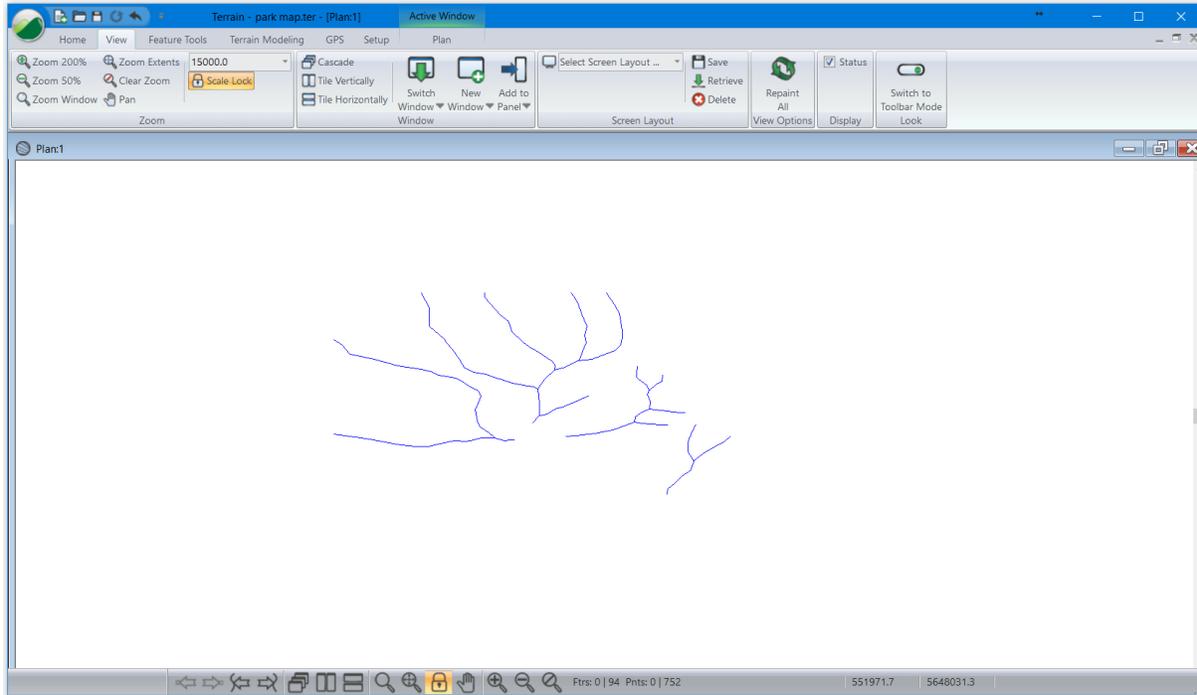


Figure 3-15: Streams Layer

14. File | New. Do not save any changes.

Line-types

1. File | Open <Terrain>\CAD\park map.tex.

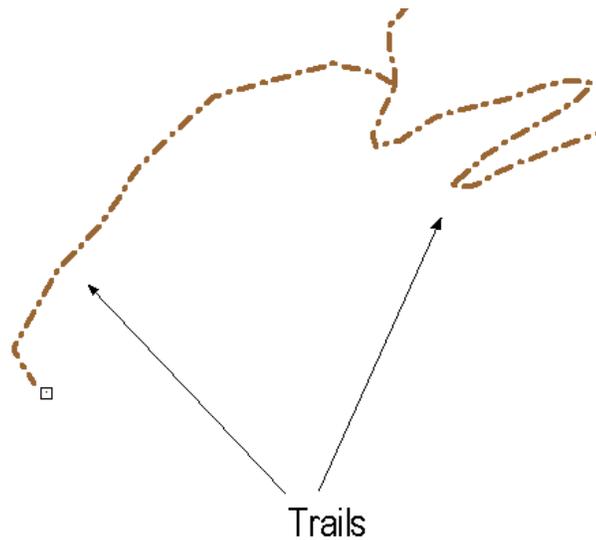


Figure 3-16: The Trail Features of *park map.tex*

2. Dashed lines identify the trails in Park Map (see figure above). Hold down the <Shift> key, then with the *Select* cursor  left-click on each of the trails. Use zoom and screen scrolling to see all the trails.

If a wrong feature is accidentally selected, de-select by clicking again on the same feature with the shift key still depressed. To start again left-click in a blank area to de-select all features.

3. The trails could also have been selected: *Plan* | *Select* button | *By Name* from dropdown. *Unselect All* button. Highlight (or double-click) on all the *TRAIL-?* features, then press *Select*. Press *OK* to exit the dialogue.

We will adjust the line type for all the trails:

4. *Feature Tools* | *Line Types, Symbols* or through the  *Feature Properties* panel. Change line-type: from *43 Dash Dot* to *44 - Dash x 2 (narrow)*. In the panel, press *Apply*. Left-click anywhere in the Plan Window to de-select trails.

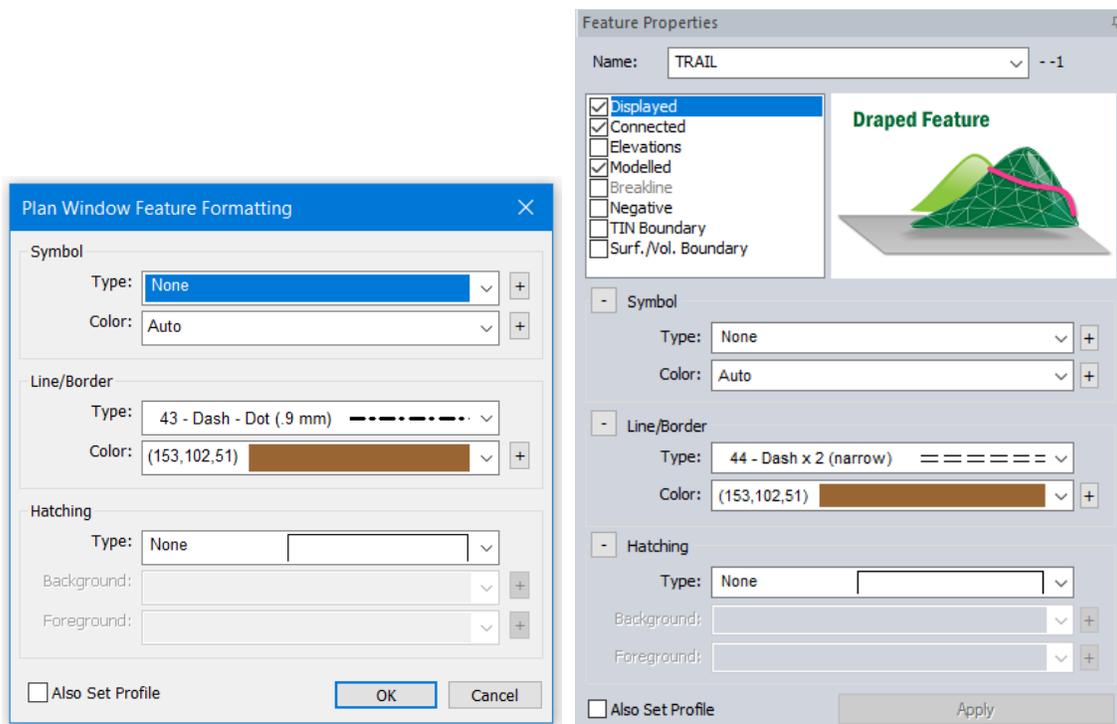


Figure 3-17: Two Ways to Edit Line-types and Symbols: Line-Types, Symbols Dialogue and the Feature Properties Panel

5. Proceed to step #2 in *Adding Symbols* or  *File* | *New* to exit the program. Do not save changes.

Symbols

1.  *File* | *Open* <Terrain>\CAD\park map.terx.

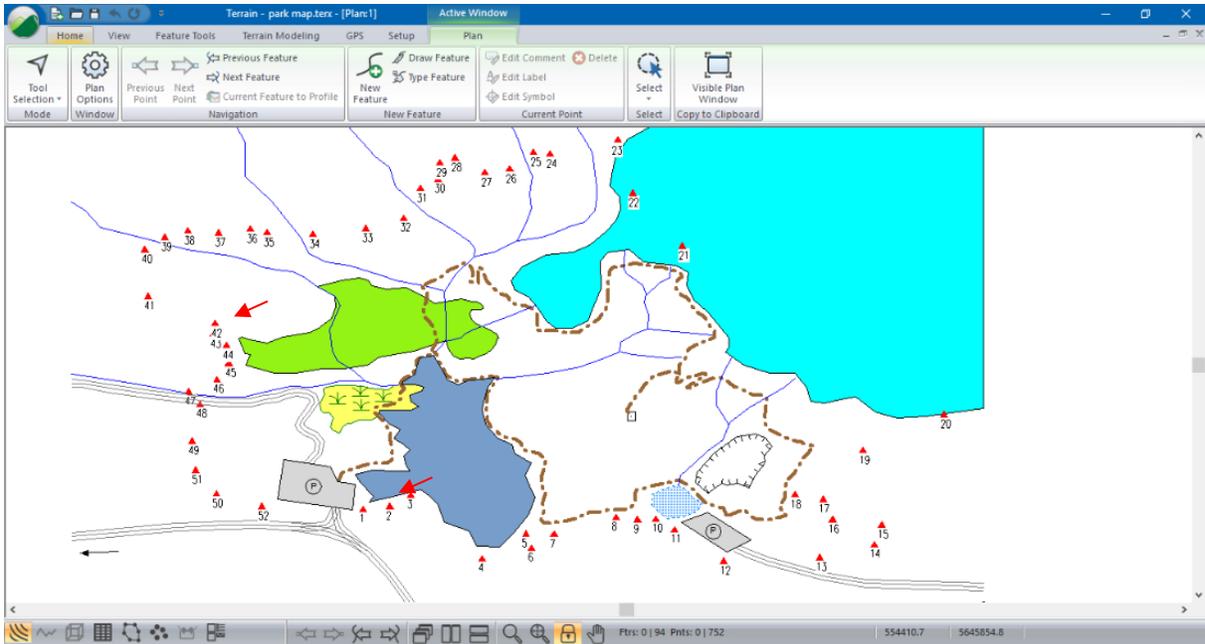


Figure 3-18: Red Arrows Depicting Campground Locations

2. *Plan* | *New Feature*. Select **CAMP** from *Name* drop down list. *Uncheck Elevations* and *Modelled* as shown in the figure below. Press *Create Using Mouse*.

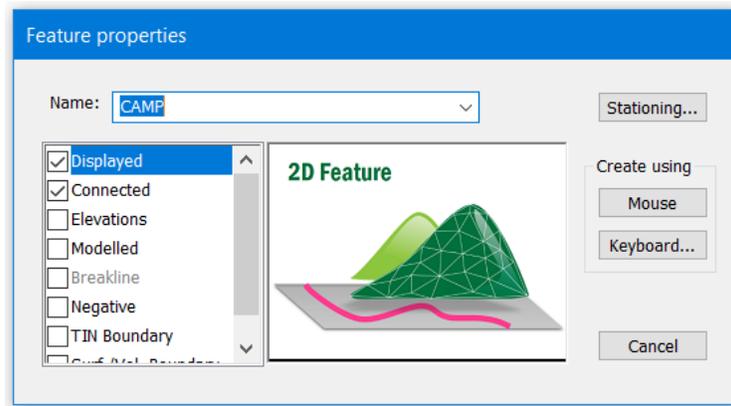


Figure 3-19: New Feature Properties Dialogue

3. Move the  cursor to one of the campground locations as indicated by the two red arrowheads in the figure at the start of the exercise and press the *left mouse* once to create (and capture) a new point. *Left-click* again to anchor the new point.
4. Change the symbol to campground: *Right-click* | *Modify Selected Feature(s)* | *Linetypes, Symbols...* In *Symbol Type: Campground*. Press *OK* to return to the main window.

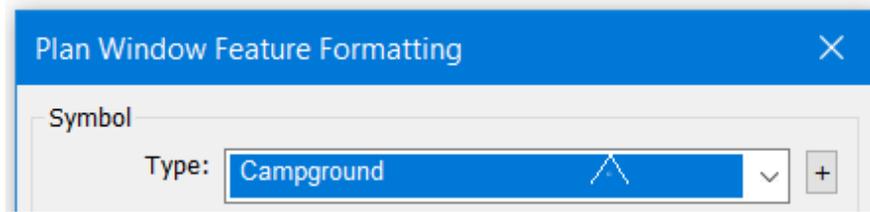


Figure 3-20: Campground Symbol Selection Dialogue

The following steps will duplicate this symbol at the other campground locations.

5. With the campground symbol still selected, *Home* | *Copy* | or press <Ctrl +C> to copy it.
6. *Home* | *Paste* or press <Ctrl +V>. This will paste the campground symbol right on top. You can determine if there is more than one feature by clicking on the center cross and a textbox will appear listing the features.
7. Move a symbol, to the new location: *Feature Tools* | *Move, Size, Rotate* or by pressing <Ctrl + M>.
8. Move the cursor on top of the symbol until a 4-sided arrow icon appears. *Left-click* and drag the copied symbol to the other location.

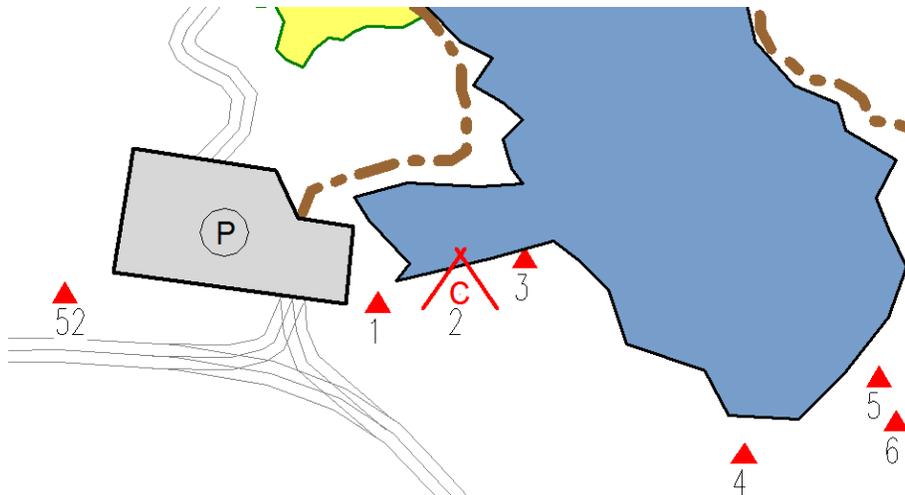


Figure 3-21: Park Example with Campground Symbol

9. Proceed to Step #2 of the next example or exit the program by selecting  *File* | *New*. Do not save changes.

Creating a Boundary Polygon

To do this example the *Mapping and Drafting, Import Basic and Export Basic Enhanced Mapping and Drafting* must be enabled. See *Function Groups* in the On-line help for more information.

1.  *File* | *Open* <Terrain>\CAD\park map.terx. If continuing from the previous example, *left-mouse click* in a blank screen area to de-select campgrounds.

- Open the Select feature(s) by name dialogue: *Home* | *Select* button | *By Name* from dropdown list.

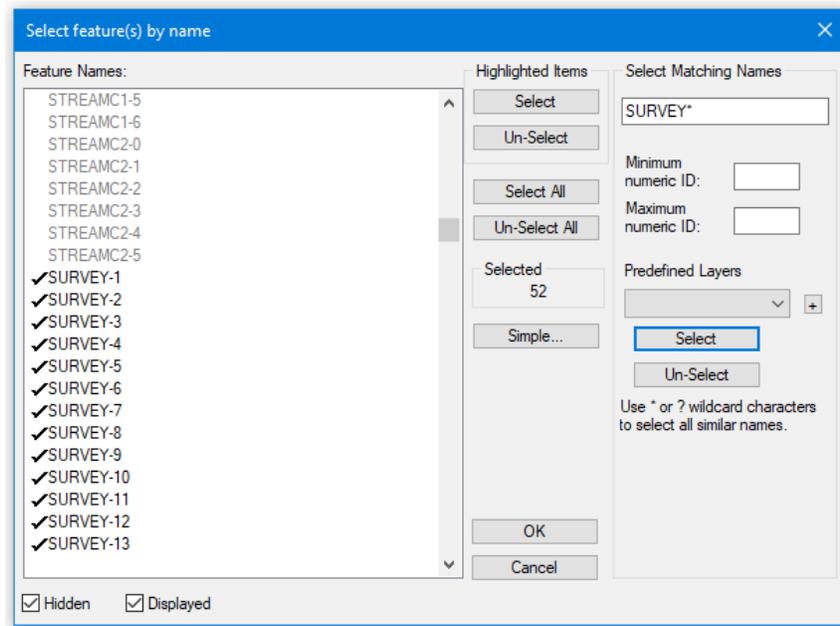


Figure 3-22: Select Feature(s) by name Dialogue

- Press *Advanced...* and type *SURVEY** into the Select Matching Names area as shown in the figure above. Press *Select* in the *Select Matching Names* area. Press *OK*.

Many triangle features are selected. These features have the name SURVEY. To connect features, they need to have the property *Connected* enabled.

- Press the Feature Properties Panel  button in the windows toolbar (or *Feature Tools* | *Feature Properties*). Check *Connected* box, press *Apply*.
- Feature Tools* | *Join*. All the selected features will be joined.
- Feature Tools* | *Line Types, Symbols*. Change the Line/Border Type: *5-thick (medium)* and change the Symbol to Type: *None*. Press *OK*.
- Feature Tools* | *Close*. The boundary will close and the map should look like the figure below.



Figure 3-23: Park Boundary

Labels

There are two types of labels used in the Terrain Module, *Feature Labels* and *Floating Labels*.

- **Feature Labels** are labels associated with a feature. *Elevation*, *Azimuth*, and *Distance* are all examples of automatic labels. Point or feature attributes such as *Comments*, *Date*, *Point Numbers* etc. are Feature Labels. Whenever a feature is edited or deleted feature labels are modified accordingly.
- **Floating Labels** are simply user-defined text. They do not depend on any feature and can be placed anywhere and modified directly.

The default characteristics (position, font, size, orientation etc.) for each label class is controlled by window type (Plan, Profile etc.). For the Plan Window, these defaults are set in menu *Plan | Labels*.

8. *Plan | Labels*. Turn on Floating (not attached to a feature) by double-clicking on Floating Labels (not attached to a feature) and *check* the Display box.

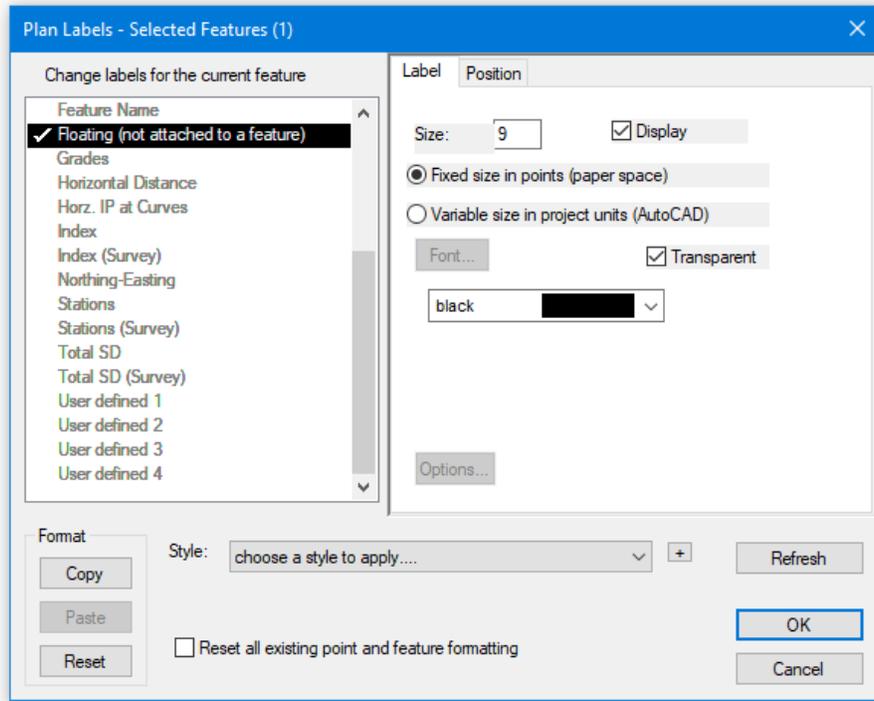


Figure 3-24: Plan Window Options- Default Label Format

9. Press OK to return to the main screen. The Plan Window will now look like figure below:

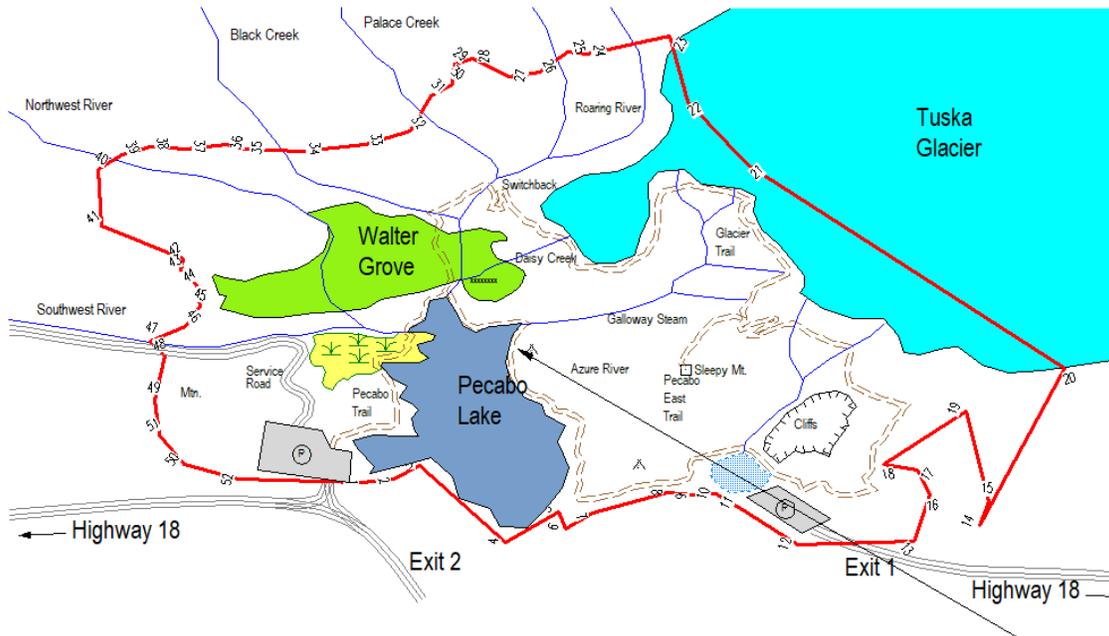


Figure 3-25: Plan Window with Floating Labels

It is often useful to override the default label positioning for individual features.

For instance, you may wish to turn on or off a certain class of labels for a specific feature. Label control of individual features is done using *Feature Tools | Labels*. We will use this function to turn off the labels in our boundary:

10. Highlight the park boundary with the Selection  cursor.
11. *Feature Tools | Labels*. Turn off the display of *Comments (at feature points)*, double-click in the list box or turning off the check box adjacent to *Display*.
12. Click the *Refresh button*. Press *OK*. We will now add a floating label to our park map.
13. *Home | Tool Selection | Edit Labels with Mouse* from dropdown.
14. With the  cursor click on upper left corner of the map and enter the text ("*Park Boundary*"). See figure below:

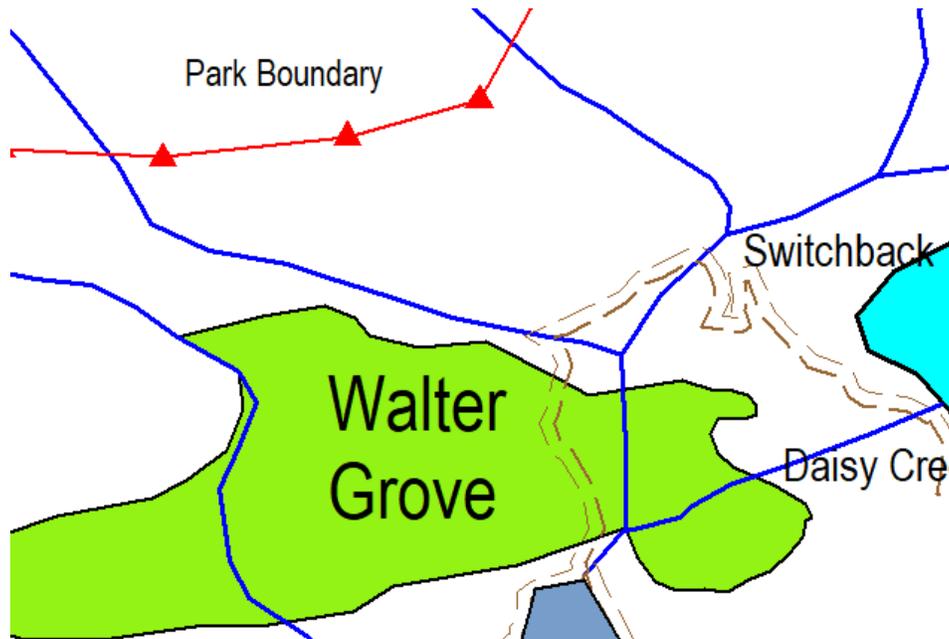


Figure 3-26: Plan Window Feature Formatting Dialogue Box

Note: The  is referred to as the *Orientation handle* and the  is referred to as the *Position Handle*.

To move the position of a label, move the cursor over the *Position Handle* (or any part of the label). Left-click and drag the label to a new location and release.

To rotate a label, move the cursor over the *Orientation Handle*. Left-click and pivot the label to the preferred position and release the left mouse when in the correct position.

Hatching

To complete the example, will be use hatching to shade the park area.

15. Highlight the park boundary with the Selection  cursor.
16. *Feature Tools | Line Types, Symbols*. Use the following settings. Then press *OK*.
 - Symbols to Type: **None**, Color: **Auto**
 - Line/Border Type: **0-Solid** Color: **Yellow (255,255,102)**

- Hatching to Type: **Solid (opaque)**. Foreground: **Auto**

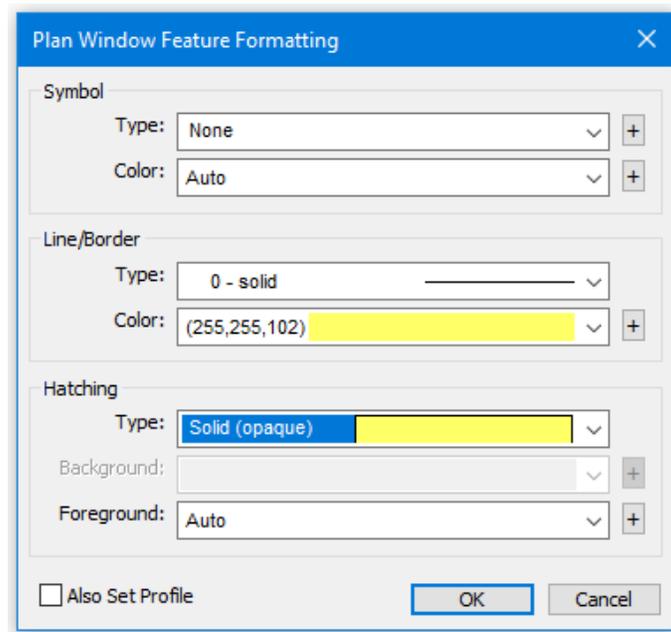


Figure 3-27: Plan Window Feature Formatting Dialogue Box

Note: (255,255,102) is a notation for Red, Green, Blue values. It is possible to create any color (supported by a graphics card) by clicking on the  button beside the color combo box and entering an RGB value.

17. With the boundary still selected, *Feature Tools* | *Arrange Order* | *To Back*.

At this point your map should look similar to the figure below. You may need to refresh (*View* | *Repaint All* button) or move your center wheel to see the changes.

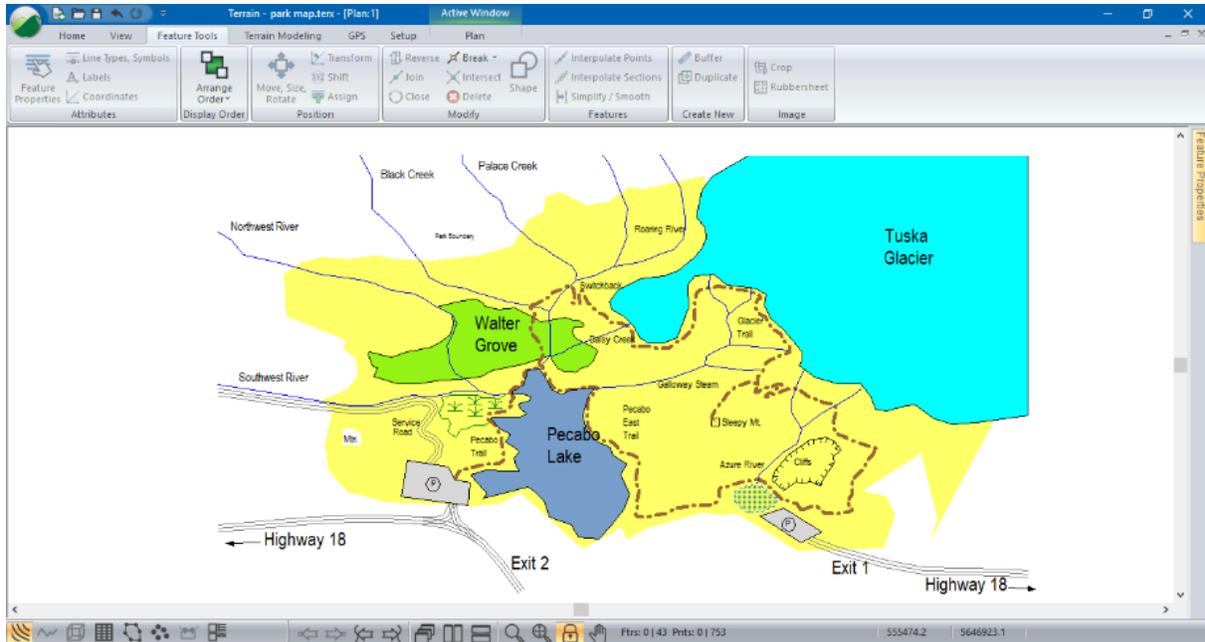


Figure 3-28: Map with Shaded Boundary Polygon

18. **File** | **New**. Do not save changes.

Creating an Output Sheet

This example is intended to familiarize you with the Multi-plot functions for creating an output sheet.

1. **File** | **Open**. Select <Terrain>\CAD\park map II.terx.
2. Press this *Multi-Plot* button in the status toolbar. A blank multi-plot page will appear.
3. *Multi-Plot* | *Page / Printer Setup*. Ensure the printer is setup for *Letter size* (21.59 x 27.94 cm or 8.5 x 11 in) and Orientation is *Landscape*.

Note: The Multi-Plot output setup depends on the paper size of your default printer.

4. *Multi-Plot* | *Multi-Plot Options....* Check *Snap to grid* and *Show grid* and set the Spacing to **5.00** as shown in the figure below. Press **OK**.

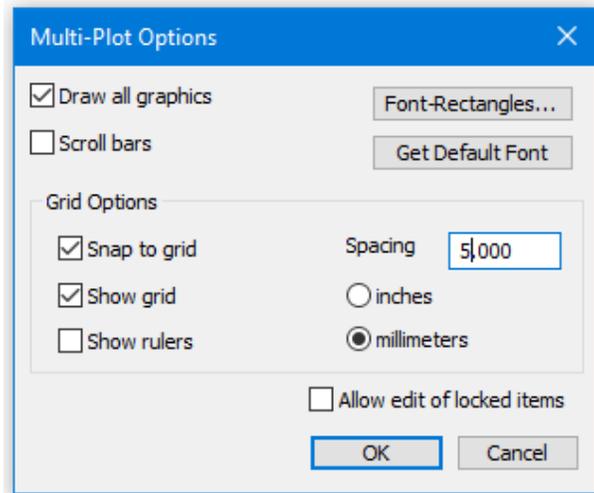


Figure 3-29: Multi-Plot Options

A Multi-Plot sheet consists of a series of *Sub-views* such as plans, profiles, legends, images, title blocks etc.

5. *Multi-Plot | New Sub-View | Plan: 1*. A Plan Sub-View will appear in the middle of your multi-plot sheet.

Note: Sub-view window options only allow you to add views that currently exist.

Notice that there are 8 handles that you can click and drag to change the size of the Sub-View. Click and drag anywhere else on the Plan Sub-View to move it. The <Delete> key will remove the selected Sub-View(s).

6. Resize and reposition the Plan Sub-View until it appears approximately in the top 2/3 of the output sheet (see Figure 3-31).
7. To center the map in the Plan window, press <Shift + Left Arrow >. A prompt as shown in the figure below will appear. Press OK and continue manually controlling the position of the Plan window using the <Shift + Arrow> keys.

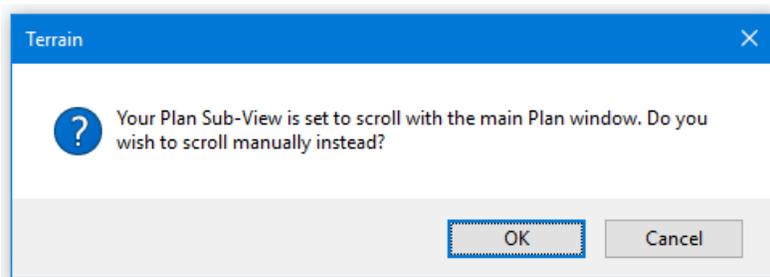


Figure 3-30: Plan Window Sub-View Manual Scrolling Prompt

Note: Positioning the map inside the Plan Window can be done using the <Shift + Arrow> keys. By default, the Plan Sub-View scrolls with the main Plan Window (menu Plan:1).

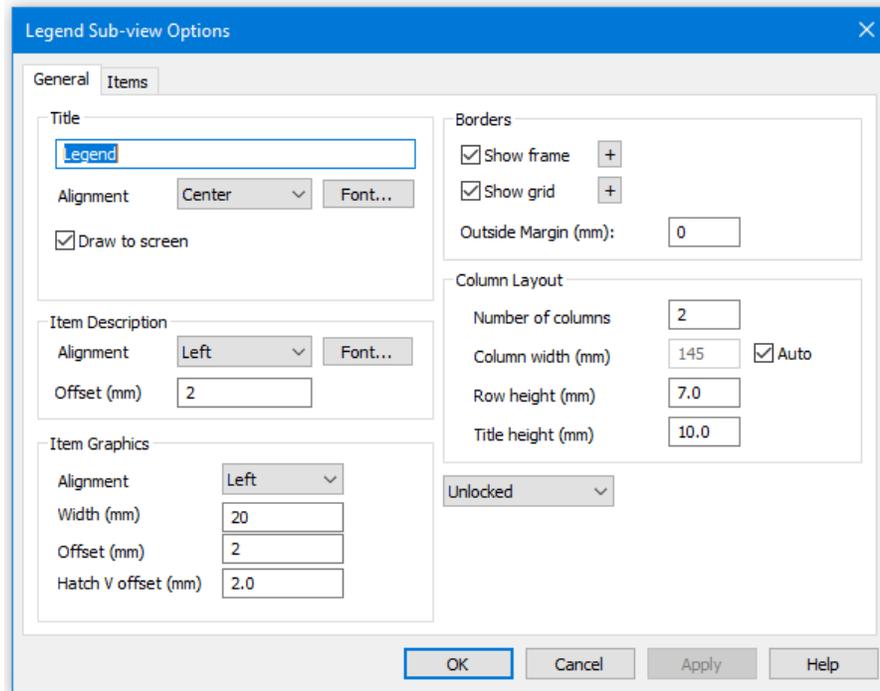


Figure 3-32: Legend Sub-View Options Dialogue

Note: When the *Auto* check box under column layout is enabled, the window frame size determines the width of the column. The frame can be made smaller or larger by clicking and dragging on any of the eight handles. If you disable the *Auto* option, the column width can be changed manually.

10. Ensure the *Legend Sub-view Options* dialogue box matches the Figure 3-32.

Note: When the Legend Sub-view is created, the current file is searched to find all distinct symbols, line-types, and hatch types. These items are included in the default legend along with their associated feature name.

11. To modify the legend entries, select the *Items* tab. We will *remove* all line-types that do not appear in the figure below. Change the descriptions to match the items on the right. Do this by clicking on the desired list item and then changing the Description in the Current item area. Press *OK* to close dialogue boxes.

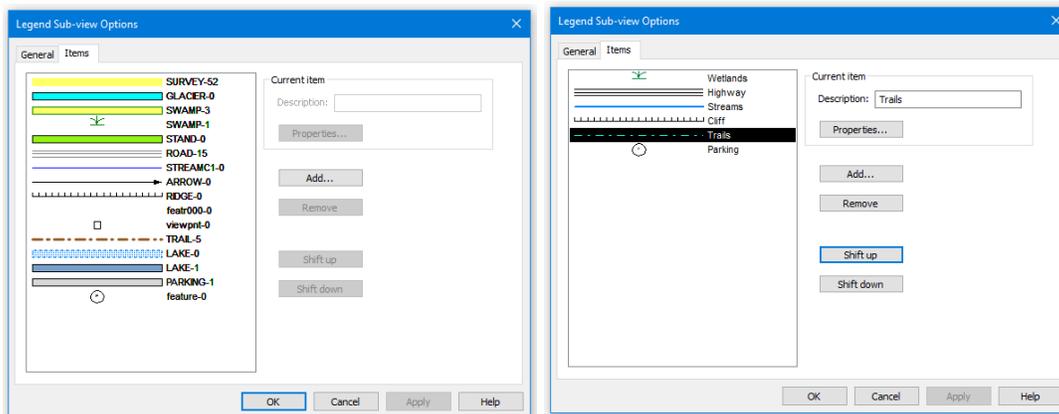


Figure 3-33: Legend Sub-View Options Dialogue Boxes

12. Re-size and re-position the legend directly below the plan sub-view and on the left side of the page as shown in Figure 3-33.
13. *Multi-Plot | Scale bar*. A scale bar will appear in the middle of your multi-plot sheet.
14. *Right-click | Multi-Plot Sub-View Options...* or *double-click* on the scale bar to activate the *Scale Bar Sub-view Options* dialogue box.

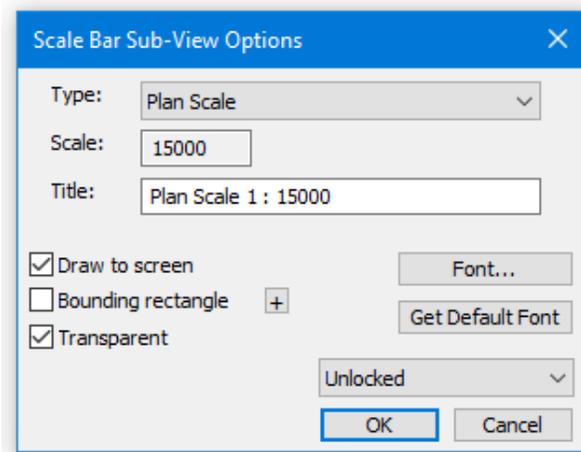


Figure 3-34: Scale Bar Sub-View Options Dialogue

15. Type in the Title: **Plan Scale 1:15000** as shown above and press *OK*.
16. Re-size and re-position the scale bar inside the Plan sub-view. If you click on the Plan Sub-View by mistake the scale bar will be shuffled to the back and you will no longer be able to move or size it with the mouse; use the *Multi-Plot | Shuffle View(s)* button or use *Ctrl + K*.

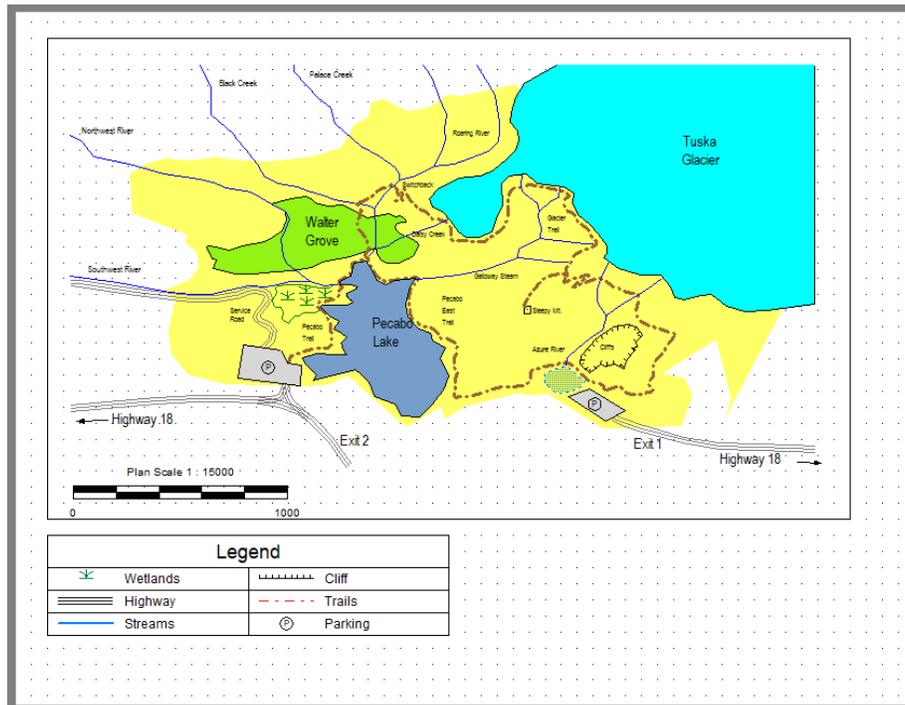


Figure 3-35: Final Multi-Plot Output

4. Images

Digital images (or bitmaps) can be used to enhance the visual impact of a map or drawing. They can also be used to extract and/or represent geometric information. The Terrain Module allows you to import bitmap images in various standard formats such as BMP, JPG or TIF. To use images for mapping they must be *georeferenced*.

In GIS terminology, *Georeferenced* means ‘tied to a specific geographic location on the earth’. A georeferenced image is one that has been scaled, rotated and stretched into position to correlate to a map projection. It may be an aerial photograph, a scanned paper map or a satellite image. What makes a georeferenced image distinct from other raster images is the inclusion of coordinate data used to locate its exact geographic position. This additional coordinate information can either be encoded in the image (e.g. Geotif), or as a separate “world” file (e.g. *.tfw).

Standard images (*.bmp, *.jpg etc) do not contain geo-reference information. However, images from mapping or GIS sources contain this information. If an image is not georeferenced, Terrain Tools can be used to create this information. This example will explore several methods for geo-referencing an image.

To do this example *Mapping and Drafting*, *Import Basic* and *Export Basic* function groups must be enabled. See *Function Groups* in the on-line help for additional information.

Scaling an Image

Real-estate Areas Example

In this example, we will measure a feature of known length on the image. The image will then be scaled (by setting the pixel size) so that the feature has the correct length. The image is not corrected for position and rotation.

We will provide options for both metric and English (feet) units. Use menu *Setup | Module Setup | Units* tab, if you want to change units.

Note: See **Getting Started** section for file install folders (<Terrain> and <Defaults and Layouts>)

1.  *File | New*.
2. *Home | Insert File* button to open the *Insert File* dialogue box.

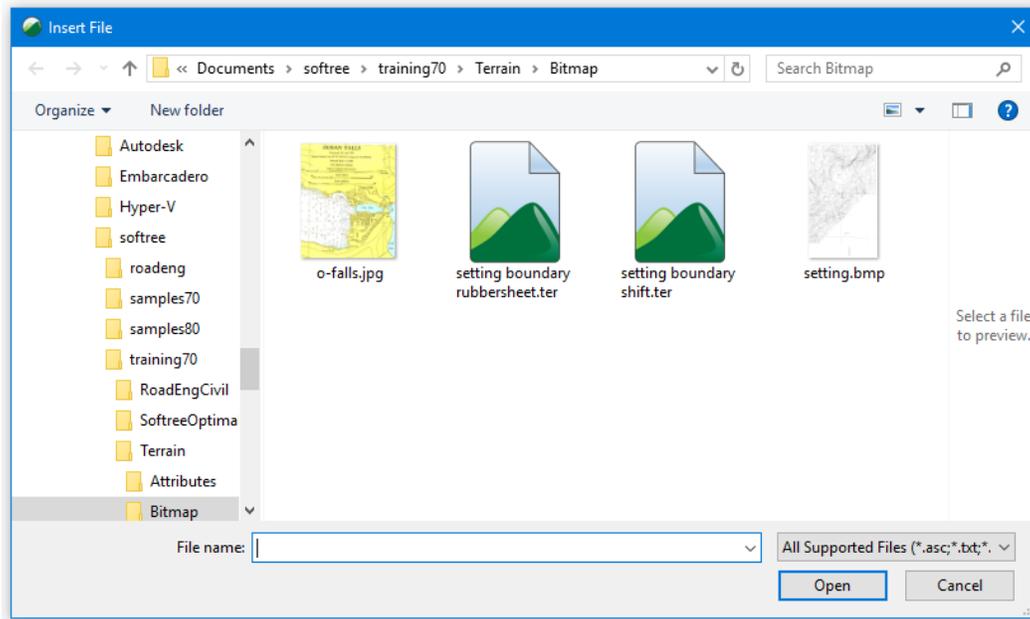
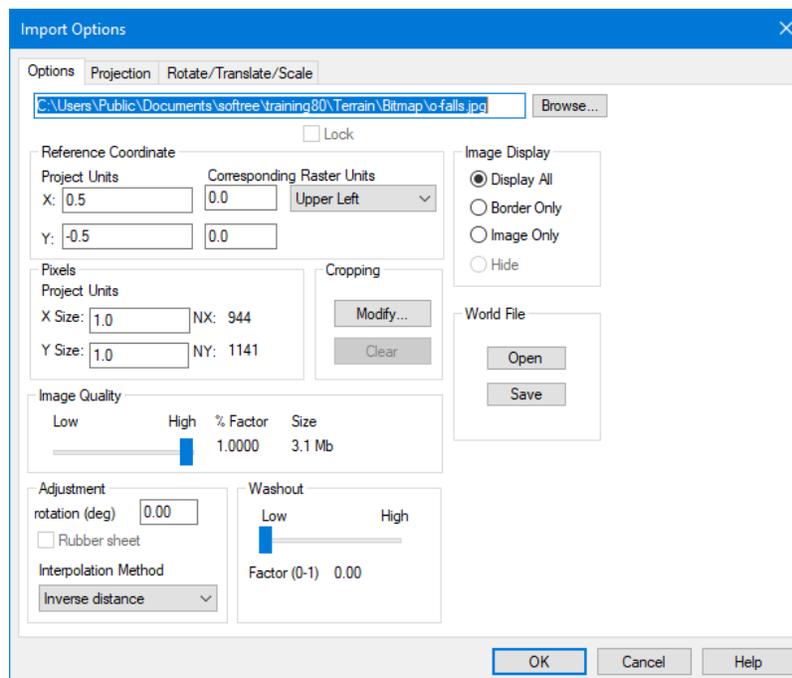


Figure 4-1: Insert File Dialogue

3. Ensure the *file type* drop-down is set to either *All Supported Files* or *Image Files (*.asc,*.txt, ...)* as shown in the figure above.
4. Select <Terrain>\ Bitmap\o-falls.jpg. Press *Open*.

You will be presented with the *Import Options* dialogue box as shown below.

Figure 4-2: Image Import Options Dialogue
(Used to Geo-Reference and Scale Bitmaps)

The *Pixels* area is used for scaling the image.

Note: If the natural scale and the dots per inch (dpi) are known then the pixel size can be calculated using the following formula:

An image was scanned at 200dpi (dots per inch) and the natural scale is 1:12000. Hence:

$$\begin{aligned} \text{Pixel size} &= \frac{1\text{map-inch}}{200\text{pixel}} * \frac{12000\text{inch}}{1\text{map-inch}} * \frac{25.4\text{mm}}{1\text{inch}} * \frac{1.0\text{m}}{1000\text{mm}} \\ &= 1.524 \text{ m/pixel} \end{aligned}$$

We won't change any of the import options – we'll determine pixel size later.

5. Press *OK* to import the image. And *OK* again if prompted by an import warning message.

The newly inserted image is selected; when an image is selected, the rectangle is hatched magenta.

6. Click  outside the image to de-select.
7. View | Zoom Extents button.

The Plan window now displays the imported bitmap as shown in figure below.

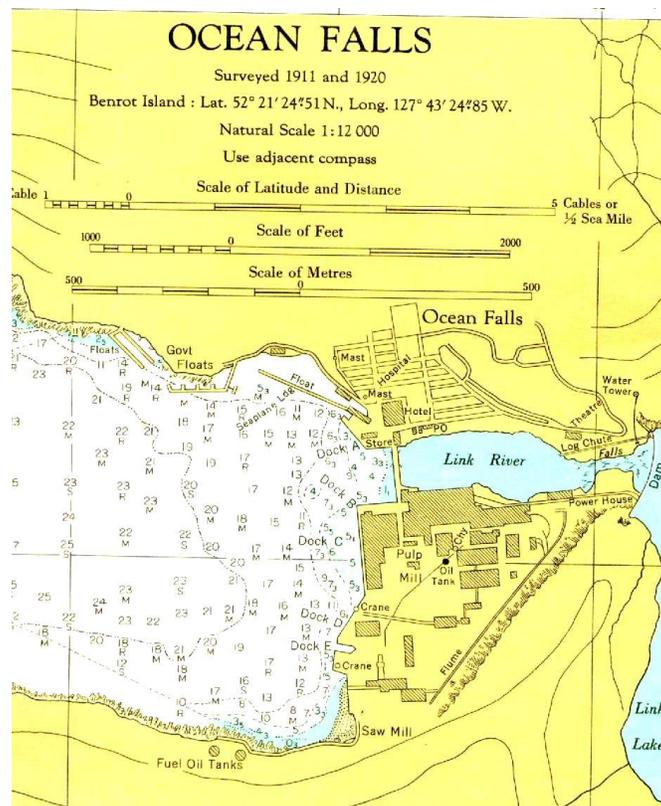


Figure 4-3: Imported Bitmap

8. Zoom in so the scale bars are clearly visible.

In this example, the natural scale is known, but the dots per inch are not. By measuring the scale bar, you will be able calculate the pixel size. This map has three scale bars. If you are working in meters, measure “Scale of Meters”; if you are working in feet, measure “Scale of Feet”.

9. Measure the scale bar:

- With the cursor in the Plan Window, *right-click* and choose *Measure Tool (length, area)* from the menu.
- Move the mouse until the cross-hair is over one end of the scale bar and *left-click*.
- Move the mouse over to the other end of the scale bar and hover.

You can observe the length in two ways:

- The tooltip window (hover tip).
- The *Measurement* toolbar (this appeared at the lower left of your screen when you entered measure mode).

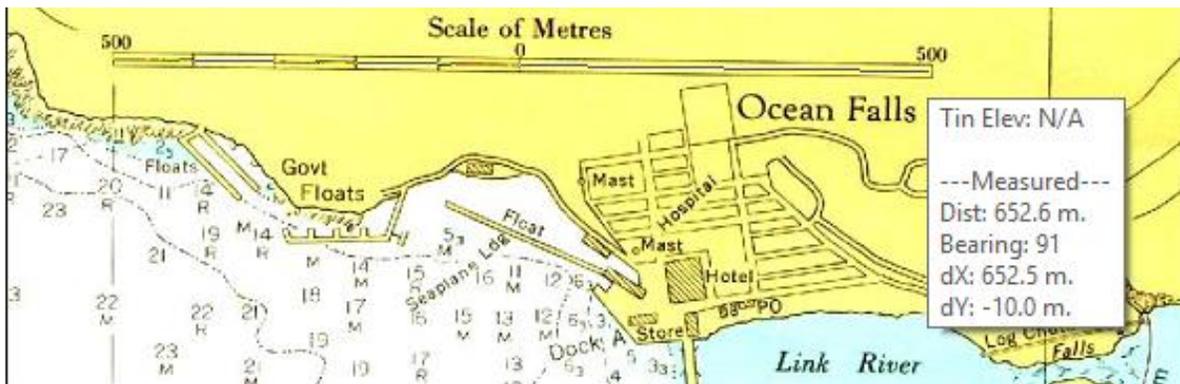


Figure 4-4: Measure Tool Hover Tip

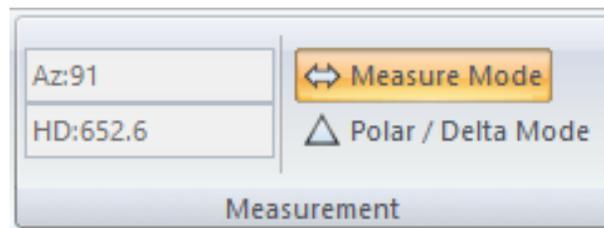


Figure 4-5: Home | Measurement tools

The “Scale of Metres” bar should be approximately 652 m long. This length is clearly incorrect; it should be 1000 m, so the image must be re-scaled.

If you were working in feet, you would find that the “Scale of Feet” scale bar is 600ft long; similarly, this should be 3000 feet, so image must be re-scaled.

10. *Right-click*, select *Stop Measuring* (or just type <escape>) to get out of measure mode.

Note: The *Measure Tool* does not disable editing with the mouse; this can be useful but most of the time you will want to be in selection mode  before you use the *Measure Tool*.

Now we will re-scale the image by changing the pixel size:

11. *Left-click*  on the bitmap select it.

12. *Feature Tools* | *Feature Properties* to open the *Image Import Options* dialogue box, as shown in Figure 4-2 above.

The current pixel size is set to **1.0**. Scale it by multiplying by the true scale bar length divided by the measured scale bar length:

$$\text{New Pixel Size (m)} = 1.0\text{m} * 1000.0\text{m}/652\text{m} = 1.534 \text{ m}$$

$$\text{New Pixel Size (ft)} = 1.0\text{ft} * 3000.0\text{ft}/595.5.8\text{ft} = 5.038 \text{ ft}$$

13. Type the appropriate pixel size (*1.534 m* or *5.038 ft*) into both the X size and Y size.

14. Press *OK* to close the dialogue box.

The image is scaled correctly. If the image were distorted, then the process should be repeated using a vertical feature of known length to calculate the Y size.

If desired, verify the image is scaled correctly by measuring the scale bar again.

Tracing Image Features

The following steps demonstrate how to trace features in the image and use them to calculate their area.

15. *Plan* | *Plan Options* | *General* tab. Change the scale to **5000** if working in metric units (or **1000** if working in feet units).
16. *Scroll* and *zoom* the *Plan* window so that the pulp mill buildings are visible as in figure below.

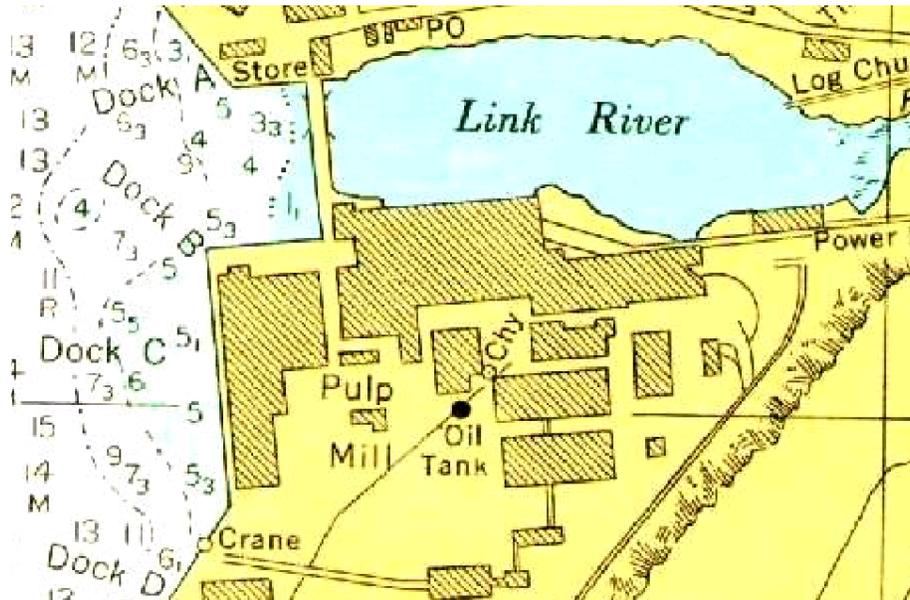


Figure 4-6: Ocean Falls Buildings

If you have already done the *Drawing Features* exercise in the *Basic Mapping and Drafting* chapter above, then you should have no problem with the next step. Otherwise, the sub-steps (a, b, c) should help.

17. Trace around the boundary of three of the buildings using the mouse (like in Figure 4-7):

- Home | Draw New Feature button.
- Begin drawing a new feature. *Left-click*  anywhere to create a new point.
- Position the cursor over one of the corners of a building and *left-click* again to anchor the point.
- Left-click* away from the first point to create another point (note the line joining the new point to the old).
- Position the cursor over the next corner and *left-click* again to anchor the point.
- Repeat until only one segment of the building is not outlined.
- To join the last segment use *Feature Tools* | *Join*.
- Click the *Draw Feature* button to begin tracing a new building.
- When you are finished, use the *right-click* to change back to *select with mouse*  mode.

Note: The mouse can be used to edit existing points  and insert points . Don't forget about the *Undo* button  or *<Ctrl-Z>*.

If you have a number pad on your keyboard, there is a digitizing feature you might want to try; move your mouse cursor over a point of interest and type the *<5>* key on the number pad. This will create a new feature point in one step.

Determine the area of each building:

- Select each building perimeter with the mouse and look at the *Status* portion of the *Feature Properties* window. (Figure 4-7). If the panel is not currently showing, select  from the bottom navigation bar, or *View* | *Add to Panel* | *Feature Properties*.

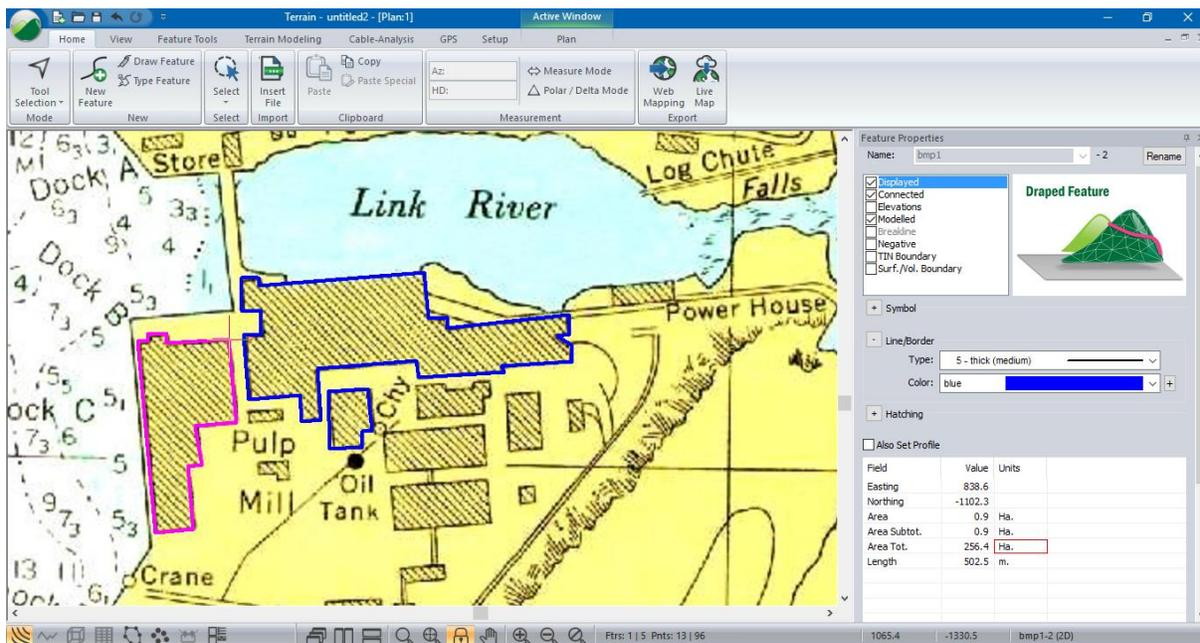


Figure 4-7: Traced Buildings with Status Details in the Feature Property Panel

19. Format the perimeter features and then determine the total area:

- Select all the traced buildings, by holding down the <Shift> key and left-clicking on each of the building's traced boundaries.
- *Feature Tools* | Line-types, Symbols button (or type <Ctrl-L>).
- Select *Line/Border Type: 6-thick (heavy)*.
- Change the color to *blue*.
- Press *OK*.

20. To see the area of the selected features: *Area Subtot.* If working in metric units, the area of the buildings should be approximately 2.9 Ha. (Imperial units the area should be approximately 7.0 acres).

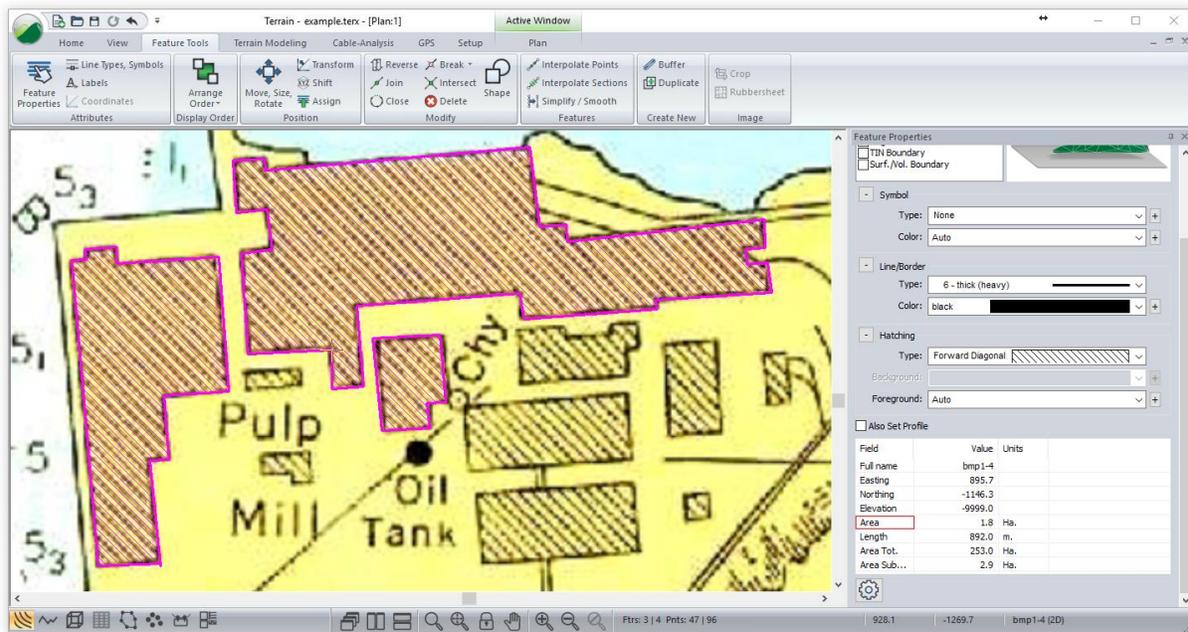


Figure 4-8: Selected Buildings with Area Reported in The Status Window

21. One can add or remove items by pressing the  button at the bottom of the feature properties panel. *Area Tot.* and *Area Subtot.* can be added to list of selected features.

22. The total area (*Area tot.*) includes the bitmap boundary; the *Area* field shows only the area for the current feature (containing the red cross).

Note: The Status window options  allow you to display areas in square meters (square feet) for the current feature. Click  outside the image to de-select all.

23.  *File* | *New*. Do not save changes.

Adjusting an Image

Forestry Cut Block Layout Example

This example requires *Mapping and Drafting*, *Import Basic* and *Export Basic* function groups enabled (see *Function Groups* in the On-line help for more information).

Moving and Resizing

This example demonstrates how to overlay a series of traverses on a scanned contour map. These traverses were entered in the Survey Module; however, they could have come from other sources.

1.  **File | Open.** Change Files of Type to (All Supported Files *.asc; *.ter; ...). Select <Terrain>\Bitmap\setting boundary shift.terx.

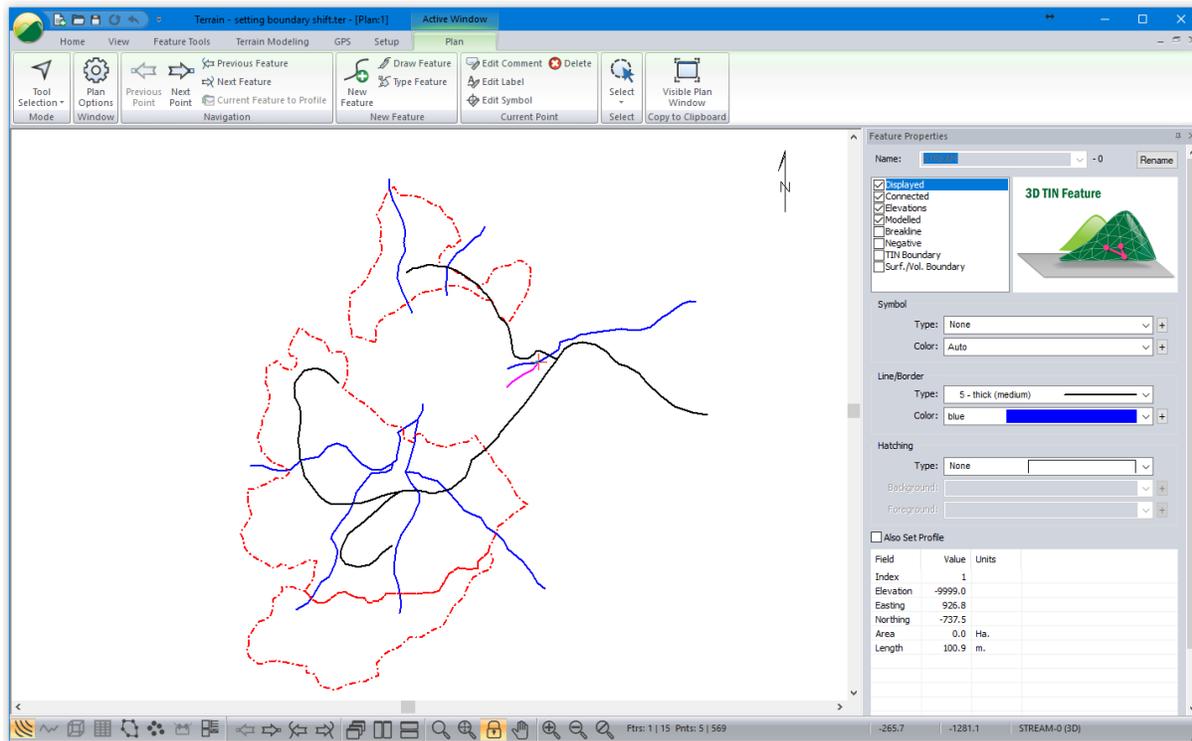


Figure 4-9: Setting Boundary *shift.ter* - Surveyed Traverses

The terrain file setting boundary *shift.ter* includes several block boundaries, roads and streams. Notice that the traverses are in correct positions with respect to each other. These traverses were entered and adjusted in the Survey/Map Module.

2. **Home | Insert File.** Change Files of type to Image Files (*.tif; *.jpg; *.bmp; *.sid; *.jp2; *.png; *.ecw; *.doq;....).
Select File Name: <Terrain>\Bitmap\setting.BMP. Press **Open**.
3. The *Import Options* dialogue box appears. Ensure that the default settings are set (X and Y are set to **0.0** for *Pixels Project Units* and the X and Y are set to **1.0**) as shown below. Press **OK** to insert the bitmap.

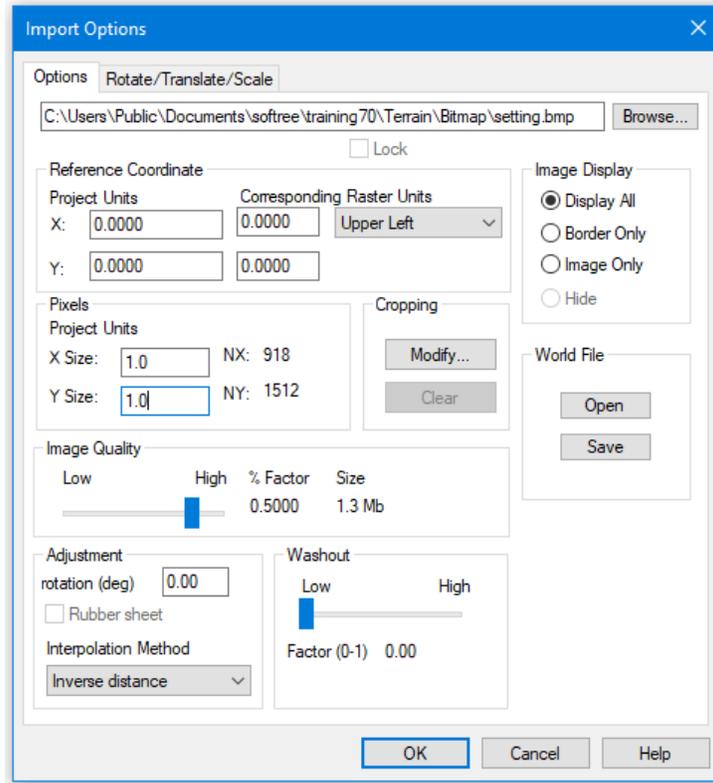


Figure 4-10: Import Options Dialogue Box

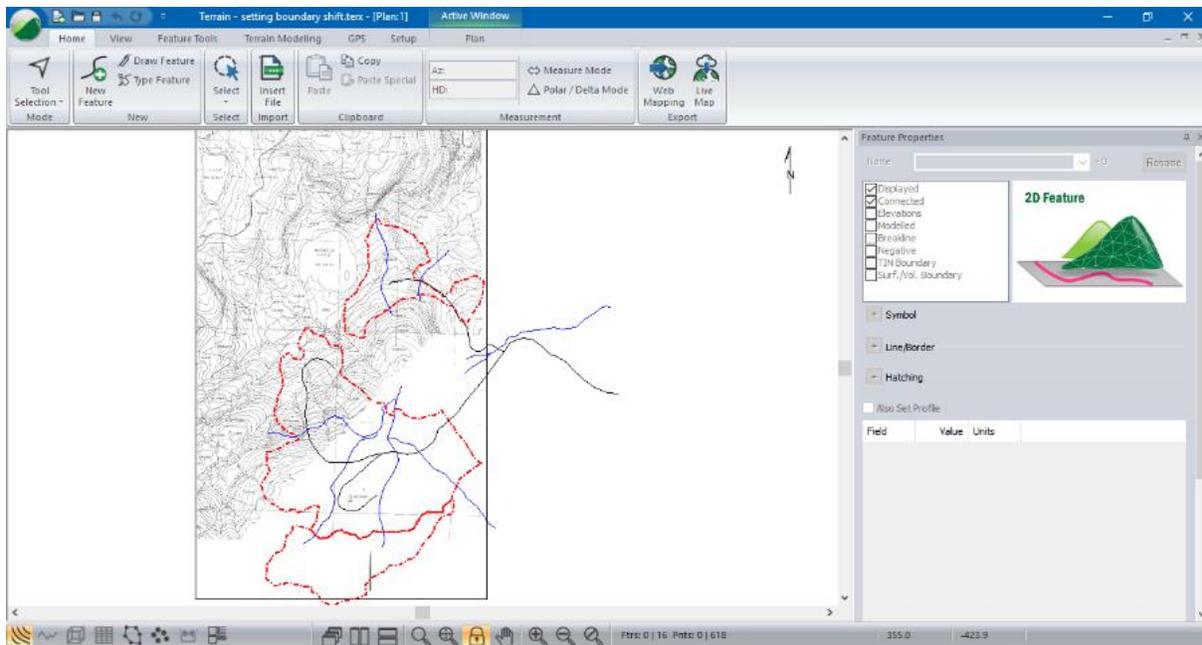


Figure 4-11: Plan Window After Adding setting.bmp

The bitmap file was created from a 1:5000 topographic map. The image was scanned and saved as a Windows Bitmap (*.bmp) using external software.

The bitmap is not correctly positioned with respect to the traverses (MICHELLE LAKE is offset) (See figure above). The size of the bitmap image is also incorrect. The next steps show how to adjust the position and size of the bitmap by trial and error (although it is possible to be more analytical if you know the pixel size and the coordinates of one corner of the scanned image).

Using the lakeshore to tie into the traversed streams:

4. Select the bitmap by *left-clicking* on its boundary with Selection cursor .
5. *Feature Tools | Move, Size, Rotate*. This activates Move/Size mode with the bitmap selected. The cursor changes to the Move  cursor when it is inside the image. Zoom out several times to see the handles.
6. With the Move  cursor displayed, *left-click* and drag to position MICHELLE LAKE so that the stream traverses line up with the lakeshore. Release the left mouse key to redraw the screen.

The bitmap image is too large to match with the traverses. The next step will reduce the size of the bitmap.

7. Still in Move/Size mode, hold down the <Ctrl> and press the <Down Arrow> on the keyboard. Notice that when the screen refreshes the bitmap image is smaller. Pressing the <Ctrl + Up Arrow> will expand the image, and <Shift + Ctrl + Arrow keys> allows for fine adjustments.

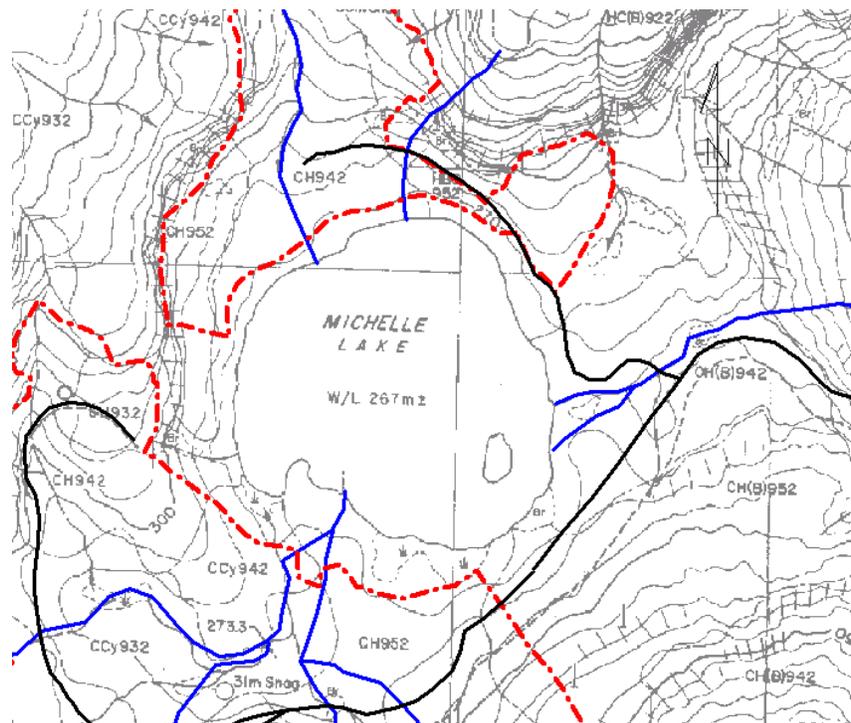


Figure 4-12: Lining Up Michelle Lake with Streams by Trial and Error

8. Repeat the above two steps until the lakeshore lines up with the traversed streams as in the figure above. This procedure involves some trial and error to adjust both the size and position of the bitmap. *Zoom In/Out* are useful in this process.

Information about the bitmap can be displayed and modified. This can be useful for rotating, scaling and positioning a bitmap using explicit coordinates.

9. With the bitmap still selected, activate the *Image Options* dialogue box: *Feature Tools* | *Feature Properties* button.

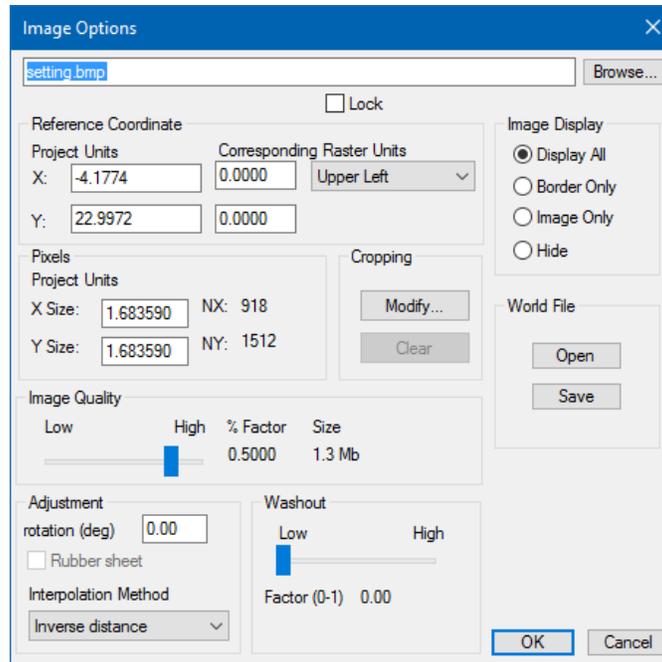


Figure 4-13: Image Options Dialogue

Note: The X and Y pixel sizes. The default size of bitmap pixels is 1. The coordinates of the upper left corner are 0,0. These defaults were changed when the bitmap was moved and sized in the previous example. This dialogue box can be used to explicitly set the rotation, size and position of a bitmap.

10. Press the *Cancel* button.
11.  *File* | *New*. Do not save changes.

5. Features, Coordinates and Attributes

A feature is a collection of xyz coordinates. Features and coordinates can have attributes. Coordinates can be entered directly by typing them into a dialogue box, traced from an existing map using the mouse or a digitizer or by importing them from an external file.

This section of the documentation will familiarize you with some of the methods for creating features by importing coordinates from external files and for entering coordinates via the keyboard.

Note: Terrain works with Cartesian xyz coordinates such as UTM, Albers, State Plane Etc. Cartesian coordinates allow you to measure lengths and areas in the usual way. If you have non-Cartesian coordinates, such as Lat/Lon, it is recommended you convert them to a Cartesian coordinate system when you import them.

To follow the examples in this section the *Mapping and Drafting*, *Import Basic*, and *Import Extended* function groups must be enabled. See *Function Groups* in the On-line help for more information.

Importing DWG or DXF Files

Cadastral Survey Example

The Terrain Module will read basic geometric information from DWG files (some 'esoteric' drafting entities such as text leaders are ignored – a log file indicates entities that are ignored). More information about the technical aspects of DWG files can be found in the On-line help.

Note: See Getting Started section for file install folders (<Terrain> and <Defaults and Layouts>)

1.  *File | Open*. Change file type to Autocad DWG (*.dwg). Select <Terrain>\Import*municipal.dwg*. Press *Open*.

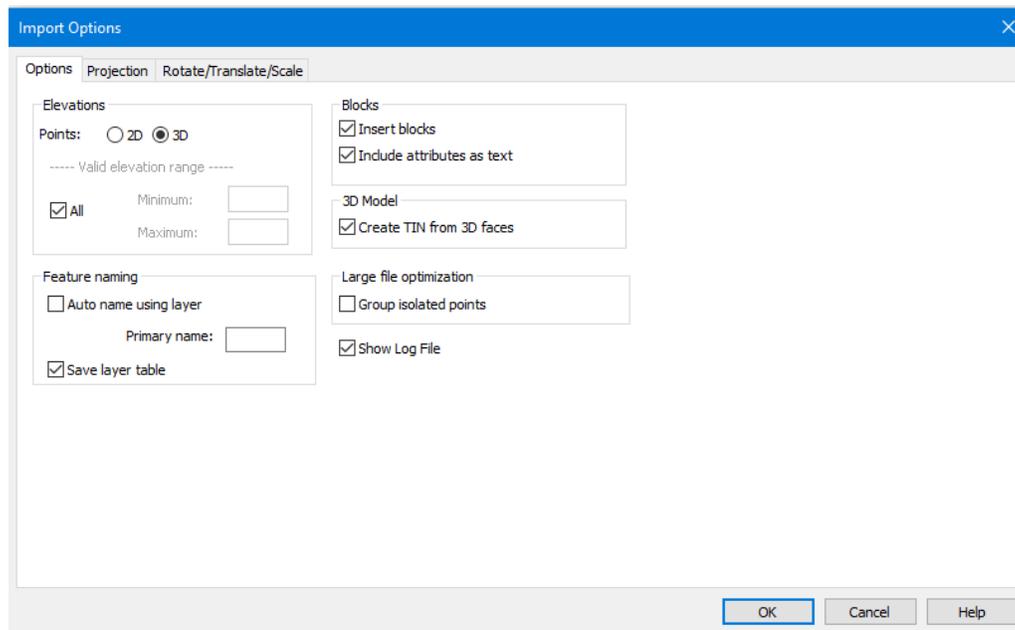


Figure 5-1: Import Options Dialogue

For on-line help descriptions for each of the dialogue box items, press F1 while the *Import DWG/DXF Options* dialogue is still active.

The options in the *Text Height* group box allow you to control the text size when importing the DWG file.

2. Set the dialogue options to match those shown in figure and press *OK*. You will get the warning message “*Importing coordinate system and units are undefined. OK to continue without conversion.*” Press *Continue*. Another warning message such as ‘*unable to import 42 ArDbLeader*’ click *OK*.

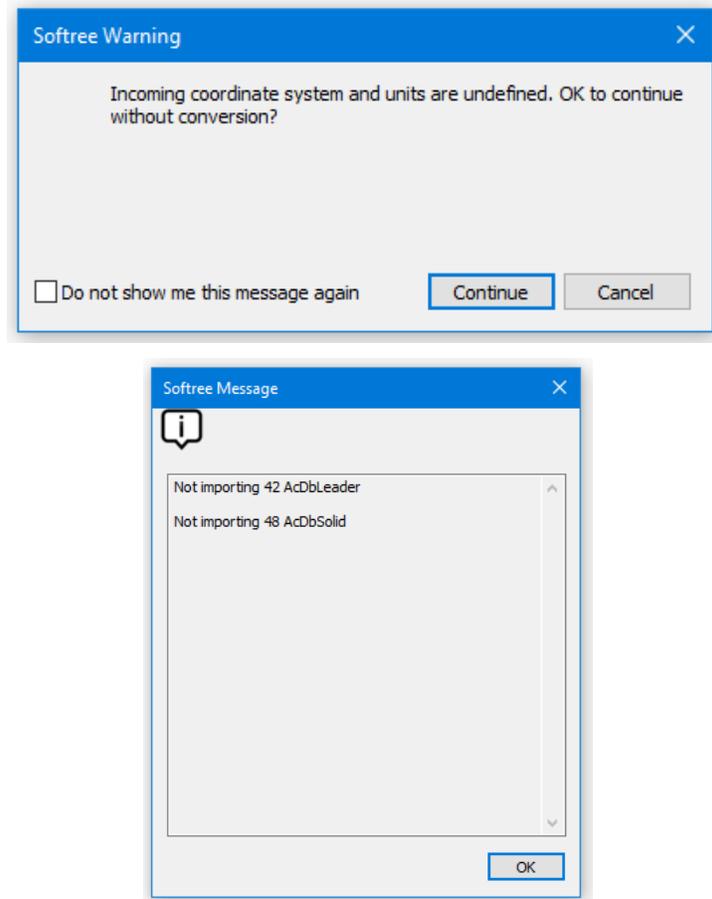


Figure 5-2: Softree Warning Messages.

3. After the import process is complete press *View | Zoom Extents* button. A city map with all the features selected will appear. De-select all features by clicking in a blank area of the Plan Window.
4. *View | Zoom Window*. Draw a rectangle with the mouse, this will zoom in to that specific area and allow you to examine the details of the legal plans as shown in the figure below.

Note: If *Primary Name* (from the *DWG Import Options dialogue box*) is left blank, the incoming features will have their Alphanumeric ID set to the 1st 8 characters of the DWG layer name. The Numeric ID will be automatically generated.

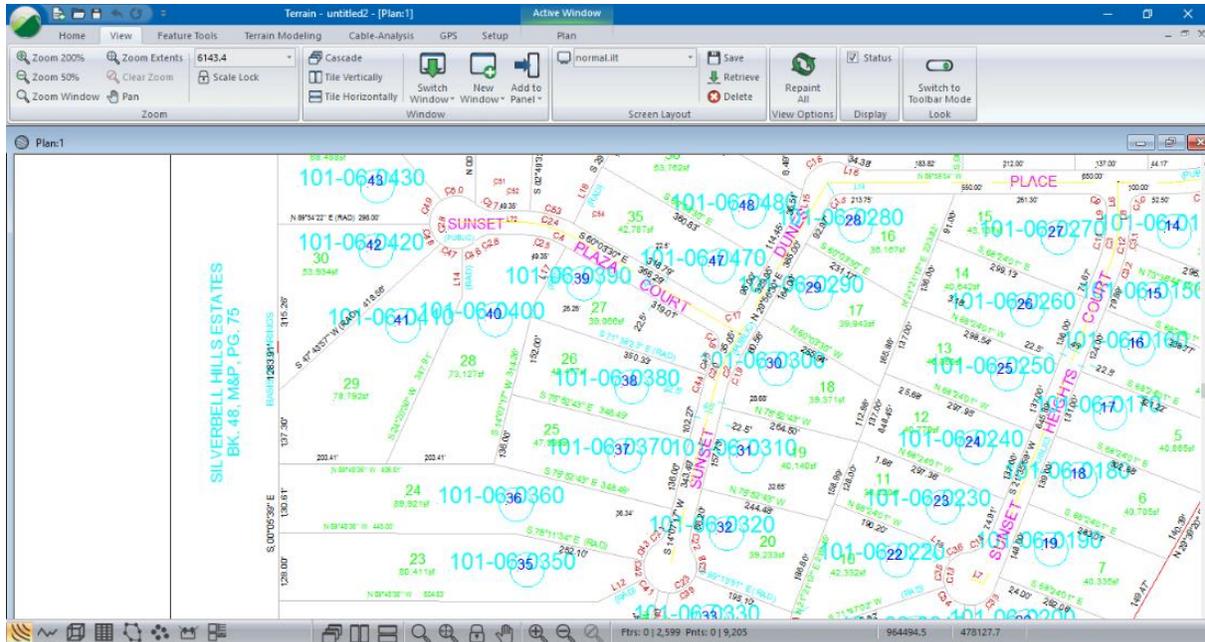


Figure 5-3: Imported DWG file after Zoom Window

Note: 2D vs. 3D DWG Files

DWG files are often only 2D and thus they can't be used to create 3D models. This is the case with *municipal.dwg*. If you click on a feature in the Plan window you will notice in the Status window the Elevation is reported as -9999, indicating that it has no elevations. Sometimes DWG files contain a mixture of 2D and 3D entities. If these files are to be used for 3D modeling, the different feature types must be selected and their property set to 2D or 3D accordingly.

5. File | New. Do not save the changes.

Importing Shape Files

Contour Map Example

Another common file format used is shape files. The Terrain Module will read (and write) Shape files including attributes.

1. File | Open. Change Files of type to ArcView Shape (*.shp). Select <Terrain>\ Import*topo.shp*. Press Open.
2. Set the *Import Options* dialogue box to match those shown in the figure below and press OK.

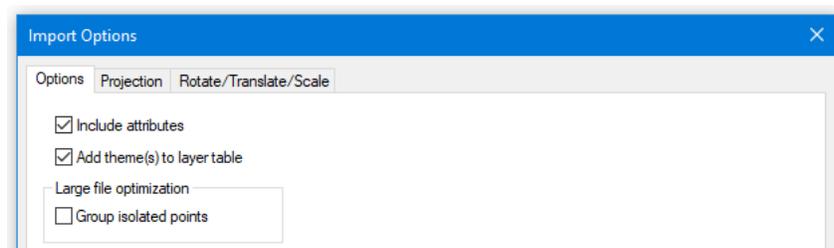


Figure 5-4: Shape Import Options Dialogue

After the import is complete the Plan window should appear as shown in the figure below.

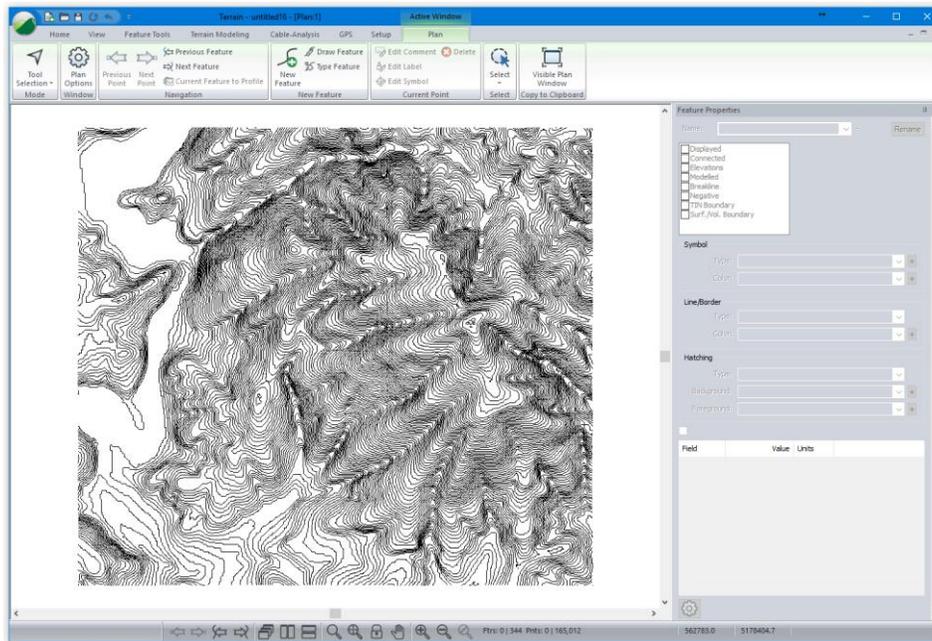


Figure 5-5: Imported file topo.shp

Note: If you click on any of the contour lines, the Status Window shows an elevation of 0.0. The elevation information has been saved in a separate attribute. Some Shape files save the elevation information with the coordinates; others (as in this case) save elevations in an attribute...

The next steps will show how to extract the elevations from an attribute and assign them to the contours, so they can be used to create a TIN model

3. Home | Select | All Features from dropdown. Click on the *Feature Properties*  located in the bottom *Status Bar*. Ensure *Elevations* property is checked. Press *Apply*.
4. Click on the *Status Options*  button at the bottom of the *Feature Properties* panel. Press *Add/Remove ...* Scroll down to the bottom of the list on the left-hand side and locate the folder call "topo". From this folder add the item *Contour*. Press *OK* twice to return to the main screen

Note: You may notice in the *Status* elevations fields are all 0.0. The attributes must be assigned so that the program knows where to get the values from elevations.

5. *Feature Tools* | *Assign*. In the Z row select *Attrib* click the *Attrib...* button. Click on *plus* button next to topo and select *CONTOUR* | *Add* button. *OK* twice. Values should now be displayed in elevation.

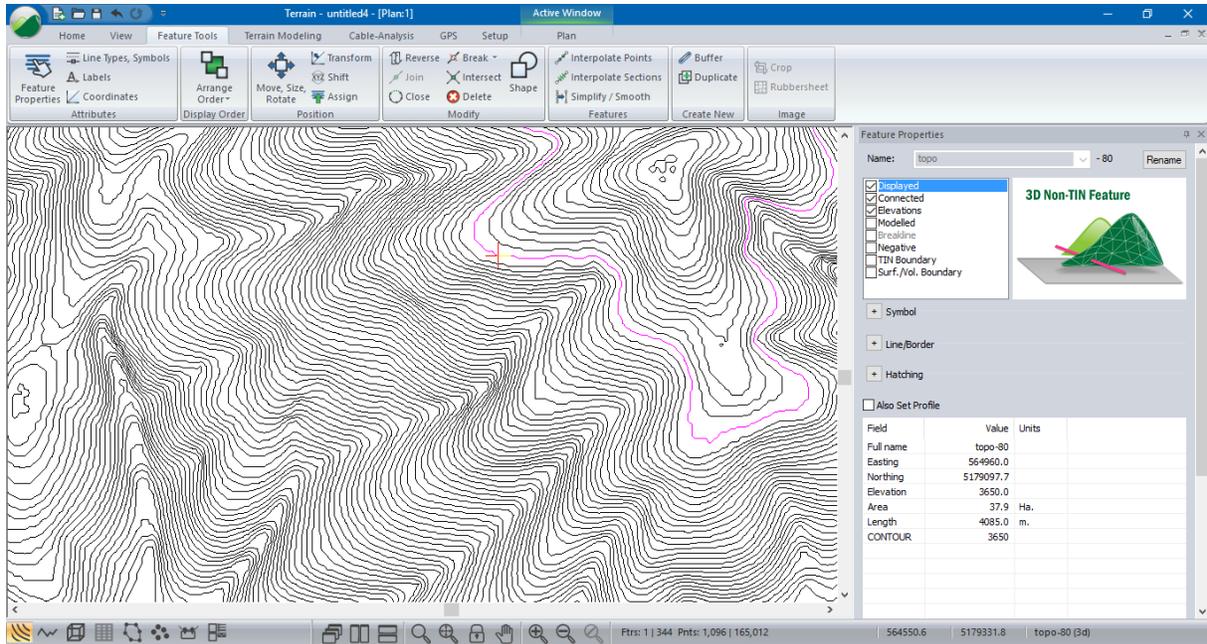


Figure 5-6: CONTOUR Attribute

6. File | New. Do not save changes.

Importing ASCII Files

Topographic Survey Example

The Terrain Module will accept a variety of different ASCII files by allowing the user to configure the import format. This example illustrates the use of the import functions to read a topographic survey file created by a total station data collector.

A Typical Data File

The file (excerpt below) consists of a *sequence number*, *X*, *Y*, *Z* and *code* separated by tabs.

501	100005.519	669380.4079	374.3334144	SIGN
502	100005.4794	669377.6708	378.4704648	TOB
503	100005.455	669381.2522	373.6119528	DITCH
504	100005.5069	669382.2581	373.6689504	SHOULDER!
505	100005.5678	669383.4834	373.6997352	EP!
506	100004.9978	669360.2576	381.6608064	SPOT
507	100006.4914	669386.827	373.7369208	CLP!
508	100004.7662	669349.7755	383.6218896	SPOT
509	100024.0052	669385.6383	373.5726336	CLP
510	100021.4448	669349.0349	382.406652	SPOT
511	100023.7247	669382.4074	373.5458112	EP
512	100023.9594	669381.0297	373.482108	SHOULDER
513	100023.9625	669380.2037	373.415052	DITCH
514	100022.8043	669363.6653	379.8536472	SPOT
515	100041.7689	669378.9815	373.1014128	DITCH
516	100023.7491	669376.4882	377.8693992	TOB
517	100041.6561	669379.9873	373.180356	SHOULDER
518	100041.2203	669375.9365	376.1890368	TOB
519	100041.6409	669381.3284	373.2388776	EP
520	100042.0036	669384.5227	373.2394872	CLP

Figure 5-7: Excerpt from Survey1.txt

Setting up an Import Format

1.  File | New.
2. Setup | Module Setup. Select the *Units* tab, *Units: Imperial (ft)*. The software cannot detect units from the information in an ASCII file.

Note: Import software cannot detect units from the information in an ASCII file.

3. Click on the *Import | Open...* button. Browse to find the import options file C:\ProgramData\Softree\Terrain Tutorials\Training\training Normal.iop. Press *Open* button to read the file.

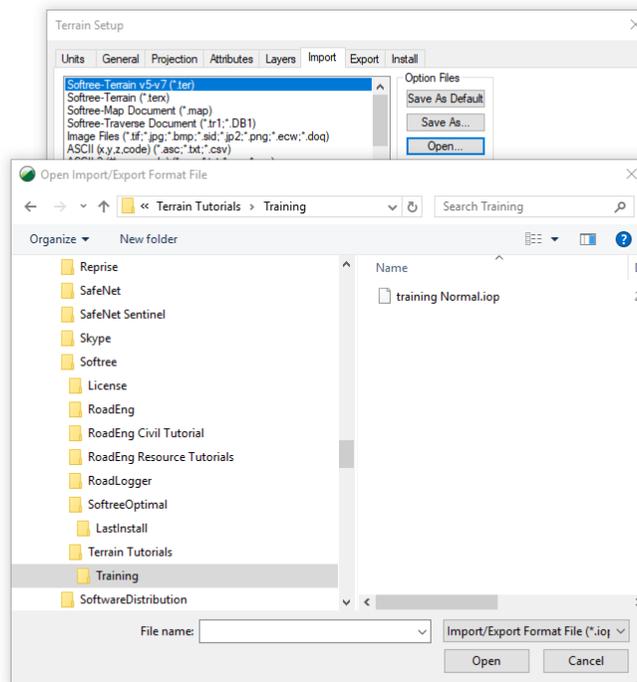


Figure 5-8: Opening an Import/export Format File from Terrain Setup

4. Select the format called “*ASCII (x,y,z,code)*”, then press *Add...* button to open the Define New File Format Options dialogue as shown in the figure below.

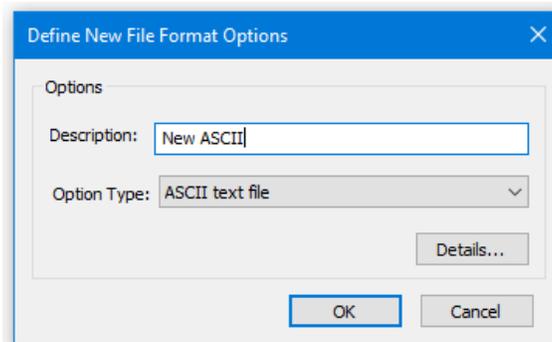


Figure 5-9: Define New File Format Options Dialogue

Note: When you create a new import format, it will initially be a copy of the one selected when you press the *Add* button (“ASCII (x,y,z,code) [* .asc,*.txt,*.csv]”, in this case).

5. Within the open dialogue box type “**New ASCII**” in the Description field and then click on *Details...* to open the next *Import ASCII Options Dialogue* box shown below.

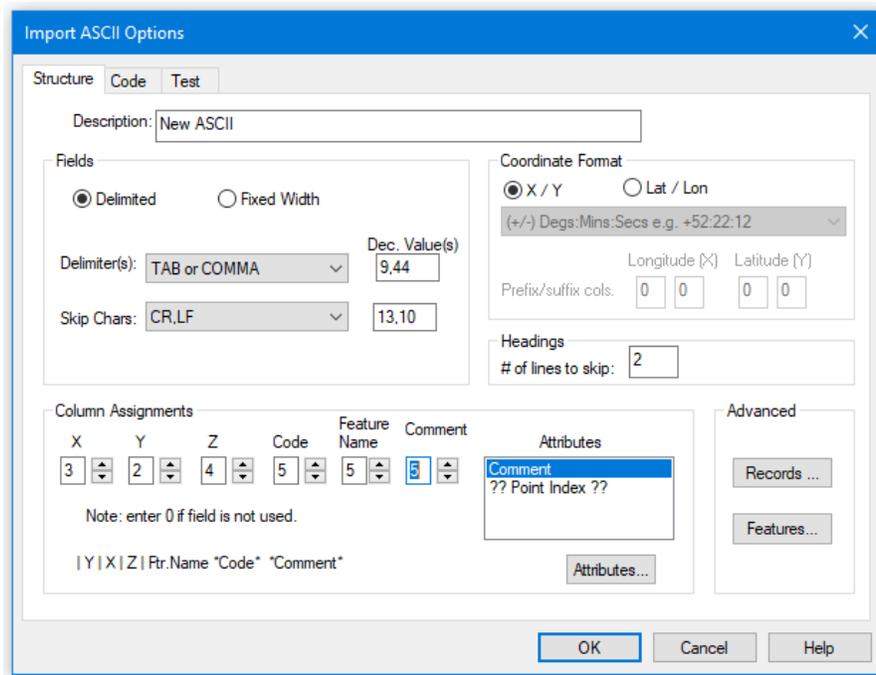


Figure 5-10: Import ASCII Options Dialogue – Structure Tab

The *Import ASCII Options* dialogue box allows you to describe the format of external files. Several options are available to identify, select and format incoming coordinate data. Detailed descriptions of the options in this dialogue box are available by pressing **<F1>**.

6. Change the *Column Assignments* in the dialogue box to match the figure above (X=3, Y=2, Z=4, Code=5, Feature Name=5 and Comment=5). Our file contains [point #, Y, X, Z, code] in each line.

You have now set up the import format to read data from the correct columns in the file.

7. On the *Code* tab, you can assign properties, symbols and line-types to the incoming points. Change your default code properties to match those shown in the below figure; 3D points with a *black cross symbol*.

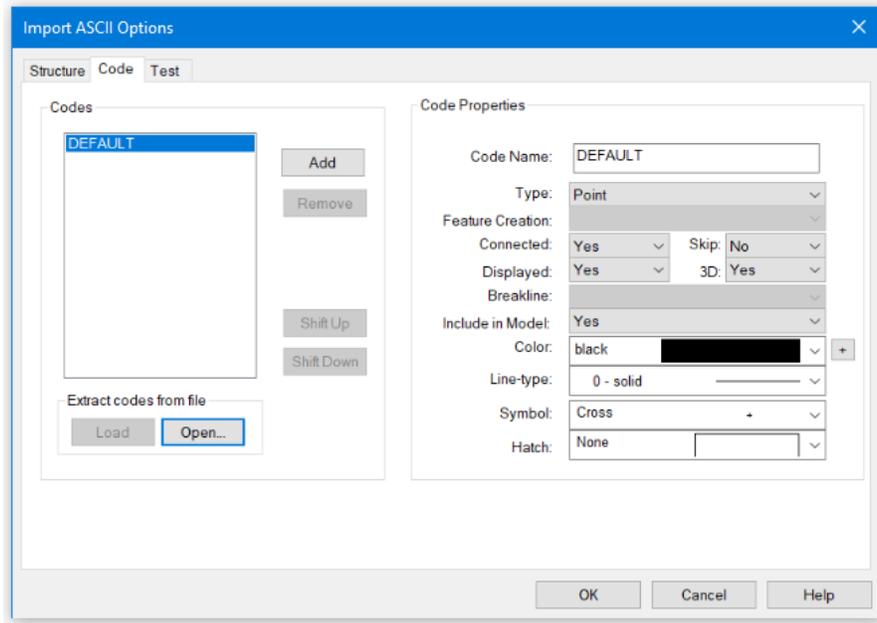


Figure 5-11: Import ASCII Options Dialogue – Code Tab

8. Press *Open...* button, within the existing dialogue and select <Terrain>\ASCII Import*survey1.txt*. This will extract all the codes found in the file.
9. Select the *CONTROL* code found in the codes list. Note that the options initially are the same as *DEFAULT*. Change the Color: *Navy* and Symbol: *Circle with Cross*.
10. Select *EP (Edge Pavement)* in the code list and type in * beside *EP*, eg. '*EP**', in the Code Name. The "*" is a wild card – any code starting with "EP" will fall into this category. Make the following changes:
 - Type: ***Polyline***
 - Connected: ***Connect All by Code***
 - Breakline: ***Yes***
 - Color: ***Blue***
 - Symbol: ***None***

Points with the EP code will be connected (in the order found in the file) and made into a blue breakline. The *Connect All by Code* property ensures that codes like EPL and EPR form separate features even though they both fit the EP* specification.

11. Select code name *CLP (Center Line Pavement)* in the code list. Make the following changes:
 - Type: ***Polyline***
 - Connected: ***Connect All***
 - Breakline: ***Yes***
 - Color: ***Red***
 - Line-type: ***Dash-dot***
12. Go to the top of the dialogue box and select the *Structure* tab again. Press *Features...* in the Advanced section on the lower right. The dialogue shown in the Figure below will appear.

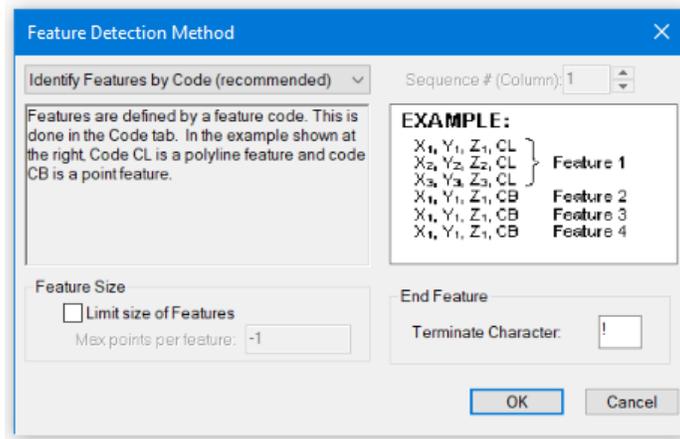


Figure 5-12: Feature Detection Method Dialogue Box

The dialogue box above allows you to limit the length of polyline features by defining a termination character to be found in the point code.

An exclamation point, “!”, is defined as the termination character in the *Feature Detection Method* dialogue box. If you refer to the **Survey1.txt** (see Figure 5-7 at the start of this exercise), you will see many of the point codes end with “!”; this means that a connected feature breaks after this point and a new feature will be created when the next point of this type is encountered. The *EP* polyline code (defined above) will import as two breaklines (left and right) because of a strategically placed “!” in the survey point codes.

13. Press *Cancel* to exit the *Feature Detection Method* dialogue box.
14. To test the specification, go to the *Test* tab (Figure 5-13).

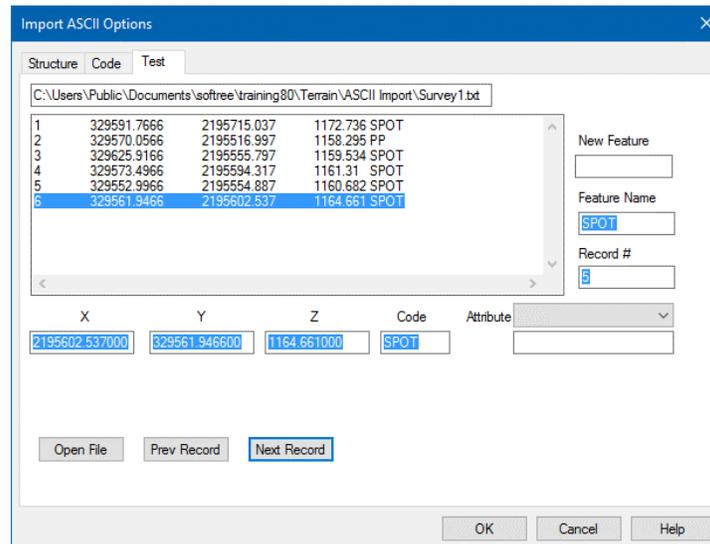


Figure 5-13: Import ASCII options dialogue – Test tab.

15. Open | *File* <Terrain>\ASCII Import**Survey1.txt**.

16. Press *Next Record* several times. At the bottom of the dialogue box the values of X, Y, Z and Code are displayed. Confirm that the incoming fields are being correctly interpreted; if not return to the other tabs to modify the format.
17. When satisfied, press *OK* to return to the *Terrain Setup* dialogue box.
18. To save the new import specifications for future use *Save As...* But in this case, we won't. Press *OK* to close the *Terrain Setup* dialogue box. Now we'll use the import format we've created to open the survey data file.

Note: Normally, you would choose *Normal.IOP* and write over it (to update your default settings) – do this only if you are working on a computer used for tutorial or training, otherwise save as *training.iop* or *Cancel* to avoid changing your defaults.

19.  *File* | *Open*. Change dropdown menu in lower right-hand corner to New ASCII (at the bottom of the list). Open <Terrain>\ASCII Import**Survey1.txt**. You will be presented with the *Import Options* dialogue box to allow last minute changes. Press *Open* button to import the file.
20. Softree Warning appears: “Incoming coordinate system and units are undefined. OK to continue without conversion?” Click *Continue*.
21. Select *View* | *Screen Layouts*, select *normal.ilt* from the dropdown menu. This will set up your options and windows to look like the figure below.

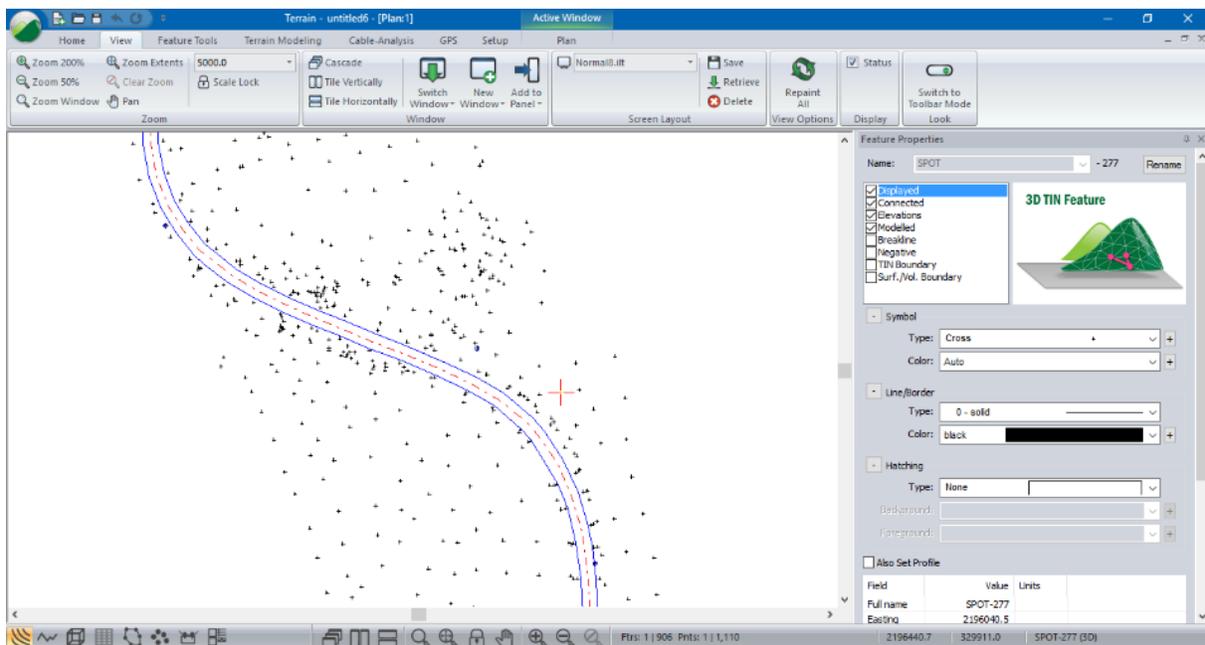


Figure 5-14: Plan Window After Importing Survey1.txt.

Note: The right EP feature is selected (note the properties displayed in the status window). Also note that there are many point codes that have not been formatted or connected to form breaklines. In the next steps, we will re-read the same data with a prepared import format.

22. Turn on the feature labels:
 - *Right-click* in plan view | *Select* | *All Features*
 - *Feature Tools* | *Labels*

- Double-click to turn on 'Comments (at feature points)' and 'Feature Name'. Both should now have black checkmarks next to them.
 - Press OK.
23. To reduce the size of the labels, zoom in by scrolling with the mouse wheel until the label font size is smaller and readable. Press the *Scale Lock* button. Now *View | Zoom extents*. The labels will remain the size of what they were when they were locked.
24.  *File | Open*. Change Files of type to **ASCII 2 (#,y,x,z,code)**. Open <Terrain>\ASCII Import**Survey1.txt**. When prompted to save changes, choose *No*.
25. This will open the Import Options dialogue; click on the Code tab to see the extra codes defined – no changes are required. Press *OK* to import the file. When prompted with the *Softree Warning* message hit *Continue*.

This will set up your options and windows to look like the figure below.

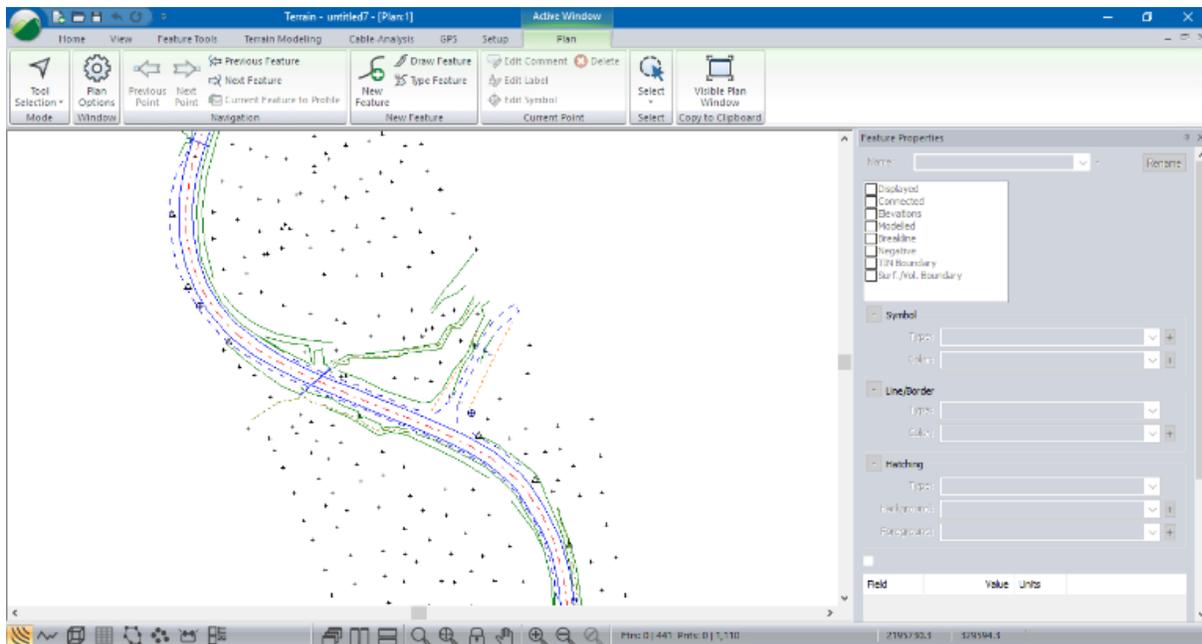


Figure 5-15: Survey1.txt imported with more point codes defined

26. You may wish to select features with the mouse  to see what properties are displayed in the Status of the Feature Properties panel area.
27. The status panel on the right hand of the display. To add more attributes, press the gear button at the bottom of the status window then press *Add/Remove...* button. Select the features you would like to add or remove.
28.  *File | New*. Do not save changes.

Keyboard Coordinate Entry

Legal Survey Example

To follow the examples in this section, the *Mapping and Drafting*, *Import Basic*, *Import Extended*, and *Enhanced Mapping and Drafting* function groups must be enabled. See *Function Groups* in the On-line help for more information.

The Terrain Module allows you to create a feature and enter its coordinates directly from a dialogue box. This example will demonstrate this procedure by creating a plat (cadastral) boundary from the following legal description.

Beginning at:

Northeast corner of Lot 23, Block 1, "Plat of Williams Beach";
 thence S 30° 15' E a distance of 403 feet of the Point of Beginning;
 thence S 43° 42' W a distance of 446 feet;
 thence N 67° 47' W a distance of 368 feet;
 thence N 3° 18' E a distance of 317.5 feet;
 thence along a curve to the right having a radius of 200 feet, a chord bearing of N 46° 16' E,
 and a chord distance of 272.66 feet;
 thence N 83° 37' E a distance of 231.97 feet to the Point of Beginning

1. Set up units and angle format:
 - *Setup | Module Setup* button | *Units* tab.
 - Units: *Imperial (ft)*.
 - Direction: *Quadrant Deg:Mins N32:16W*.
 - Cut/Fill Slope: *Slope %*
 - Press *OK*.
2. *View | Retrieve Screen Layout* select <Defaults and Layouts>\Training\training deed.ilt.

Note: Terrain Recreational users may get the message “Non-Permitted Functions Found in File”. If this message appears choose “Keep all functions and revert to DEMO Mode”.

Enter the Main Boundary

The following steps can be time consuming; you can jump ahead at any time to ‘Enter the Easement Boundary’ below.

3. Create a new 2D feature:
 - *Home | New Feature* button.
 - Enter Name: **Lot 23**.
 - *Uncheck* Elevations and Modelled (as below).

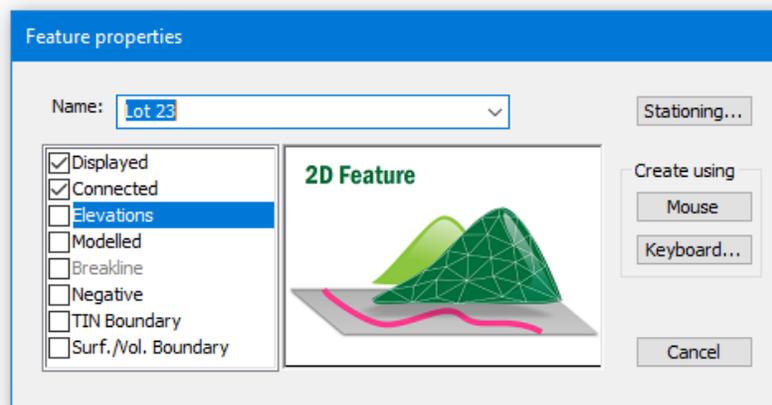


Figure 5-16: Feature Properties Dialogue

4. Press the *Create using Keyboard...* button to close *Feature Properties* and open the *Feature Coordinates* dialogue box.

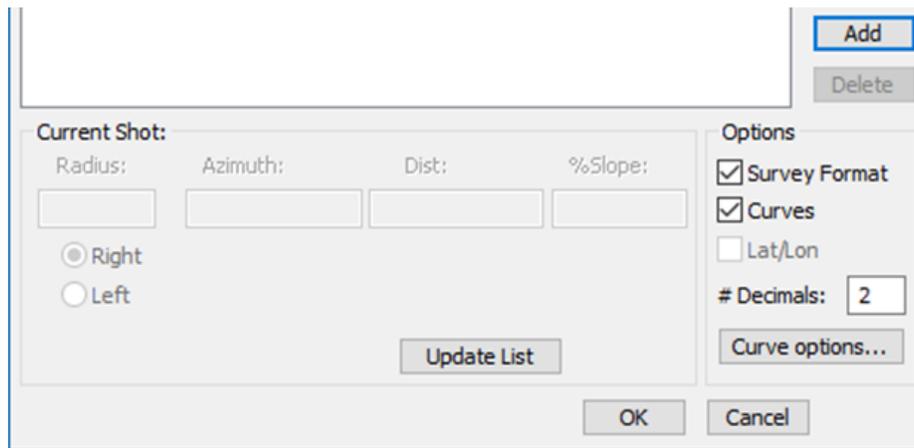


Figure 5-17: Feature Coordinates Dialogue Box Set Up for Survey Entry.

The *Feature Coordinates* dialogue box can be used for entering or modifying XYZ coordinates or survey information. In this case the *Survey Format* and *Curves* options are checked (figure above), so you can enter the survey information.

5. Add a shot:
 - Press the *Add* button.
 - Leave the radius blank and <TAB> to move to the next field
 - Azimuth: **s30.15e**, <TAB>.

A new shot is added with default values in the fields; the cursor is in the *Radius* field in the *Current Shot* area.

Note: For azimuth, data entry, a period (or decimal) is OK to separate degrees and minutes and capitals are unimportant.

- Dist: **403**, <TAB>.
 - % Slope: **0**, <Enter> (or press *Add*) to accept the fields and add a new shot.
6. Repeat for the next three shots:
 - **S 43° 42' W, 446** feet
 - **N 67° 47' W, 368** feet
 - **N 3° 18' E, 317.5** feet
 7. Now enter the curve:
 - Radius: **200**, <TAB>.
 - Use the <arrow> keys to select *Right* and <TAB> (you can also use the mouse for this).

Notice the headings change, after entering the radius, to *Chord Az.* and *Chord Dist.* Additional options for entering curve data are available by pressing *Curve Options* (see On-line help <F1> for more information).

- Enter a *chord azimuth* of **N46.16E**, <TAB>.
 - Enter a *chord distance* of **272.66**, <TAB>.
 - Enter slope **0**, as usual, press <Enter>.
8. Enter the final shot: **N83.37E, 231.97** feet. After entering the **0** slope, press the *Update List* button. (Do not press enter or add). The Feature Coordinates dialogue box should now look like the figure below.

Shot	Station	Azimuth	Dist	Slope%	Radius
1	0.00	S30:15E	403.00	0.00	
2	403.00	S43:42W	446.00	0.00	
3	849.00	N67:47W	368.00	0.00	
4	1217.00	N3:18E	317.50	0.00	
5	1534.50	N46:16E	272.66	0.00	200.00R
6	1807.16	N83:37E	231.97	0.00	
7	2039.13				

Current Shot:

Radius: Azimuth: Dist: %Slope:

Right
 Left

Options

Survey Format
 Curves
 Lat/Lon
Decimals:

Figure 5-18: Feature Coordinates Dialogue After Survey Entry

9. Check the entered bearings and distances against those in the figure above and then press **OK**.

The screen should now look like the figure below.

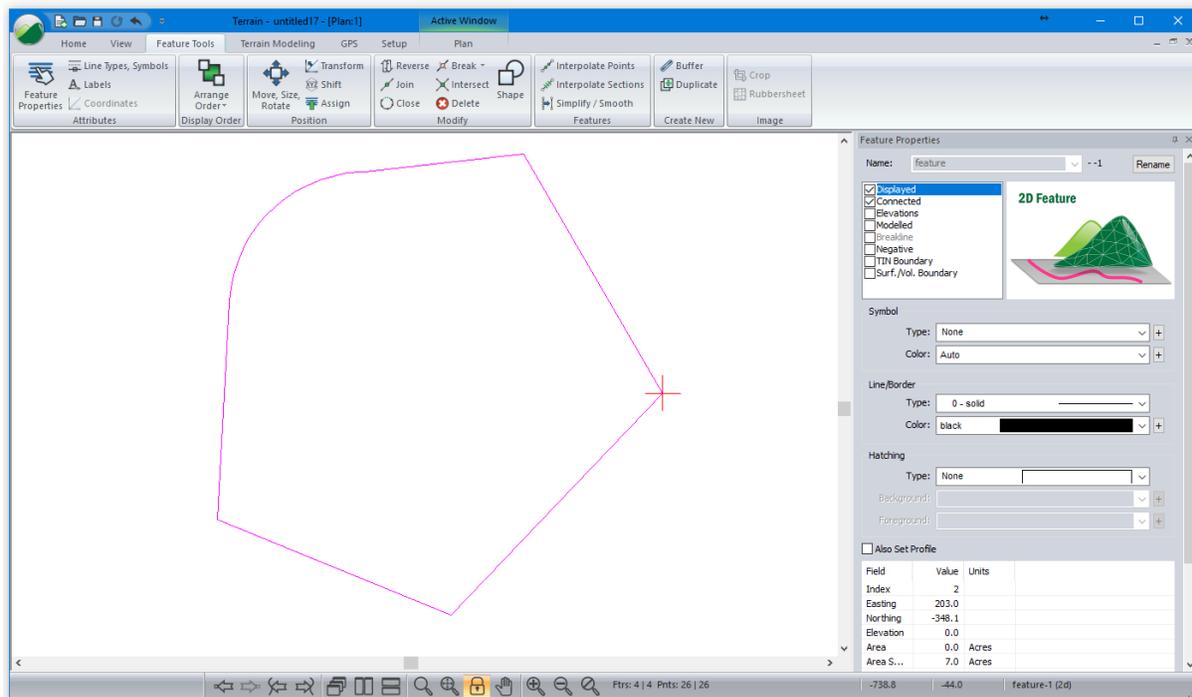


Figure 5-19: Lot Boundary (with Feature Properties Panel)

10. Using the selection cursor , click on the second lot corner, identified by the red cross-hair in the figure above.

The Status Window reports the X, Y coordinate for the current point is 203.0 (Easting), -348.1 (Northing). This is the starting point for the next boundary.

Enter the Easement Boundary

11. (Optional) If you did not finish the steps above,  *File | Open <Terrain>\Enter\deed.tex*.
12. Select the far-right corner of the easement boundary.
 - o Create a new feature (properties will be inherited from the current feature):
 - o *Home | New Feature* button to open the Feature properties dialogue box.
 - o Enter Name **Easement**.
 - o Set the *Negative* check box; this will allow us to subtract the enclosed area later.
 - o Press the *Keyboard...* button to close *Feature properties* and open the *Feature Coordinates* dialogue box.

Note: *Negative* features create a hole or void. Their area will be subtracted when total areas are reported and the TIN will exclude these areas if *TIN Boundary* is also selected.

13. Define start coordinates (we did not do this for our first feature). In the *Options area* clear the *Survey Format* check box.

Note that the starting X, Y coordinates have automatically been set to the corner point (203.0, -348.1) that we selected above. If they were not correct, you could modify the coordinates now.

14. Set back to *Survey Format*.

15. Enter the Easement Survey traverse as shown in the figure below (use the same procedure as the previous exercise).

Shot	Station	Azimuth	Dist	Slope%	Radius
1	0.00	S67:49W	592.49	0.00	
2	592.49	S68:04W	50.93	0.00	
3	643.42	S68:03E	623.25	0.00	
4	1266.67	S32:11E	33.43	0.00	
5	1300.10				

Figure 5-20: Easement Survey

16. After entering the last slope, press *OK* to close the *Feature Coordinates* dialogue box.

The plan should now display *Lot 23* and *Easement* as in the figure below. Notice the negative area in the status window for the selected easement and total area of 6.5 Acres (7.0 subtract 0.5).

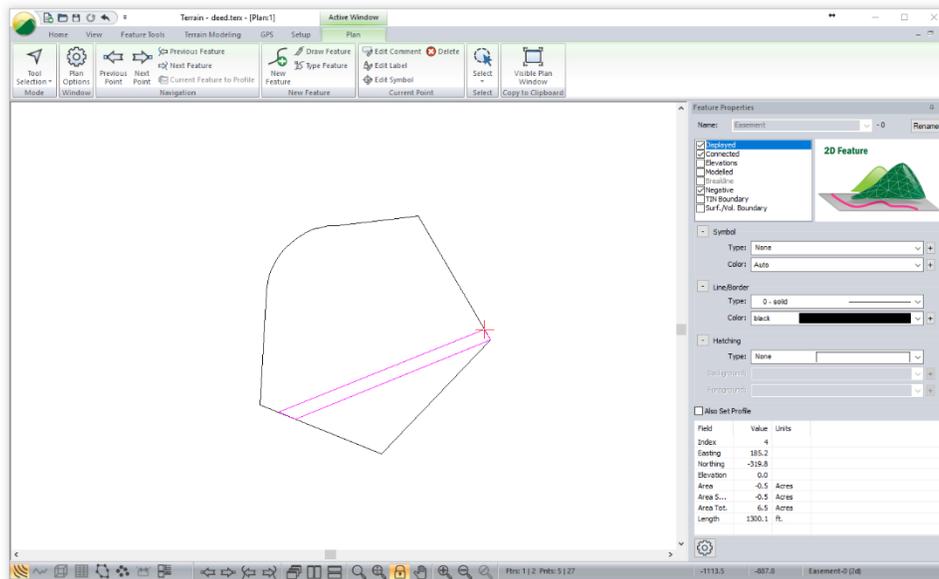


Figure 5-21: Lot Boundary and Easement

The survey entry is complete. The step below will turn on labels for the Lot 23 boundary only; this is called *Feature Formatting*.

17. Display survey information labels for Lot 23:

- Select the *Lot 23* boundary .
- *Feature Tools* | *Labels*. Turn on *Azimuth*, *Horizontal Distance*, *Horz. IP at Curves* (Curve Information) and *Area* labels (*double-click* on the items in the list-box).
- Press *OK*.

The selected feature labels are now displayed in the Plan Window:

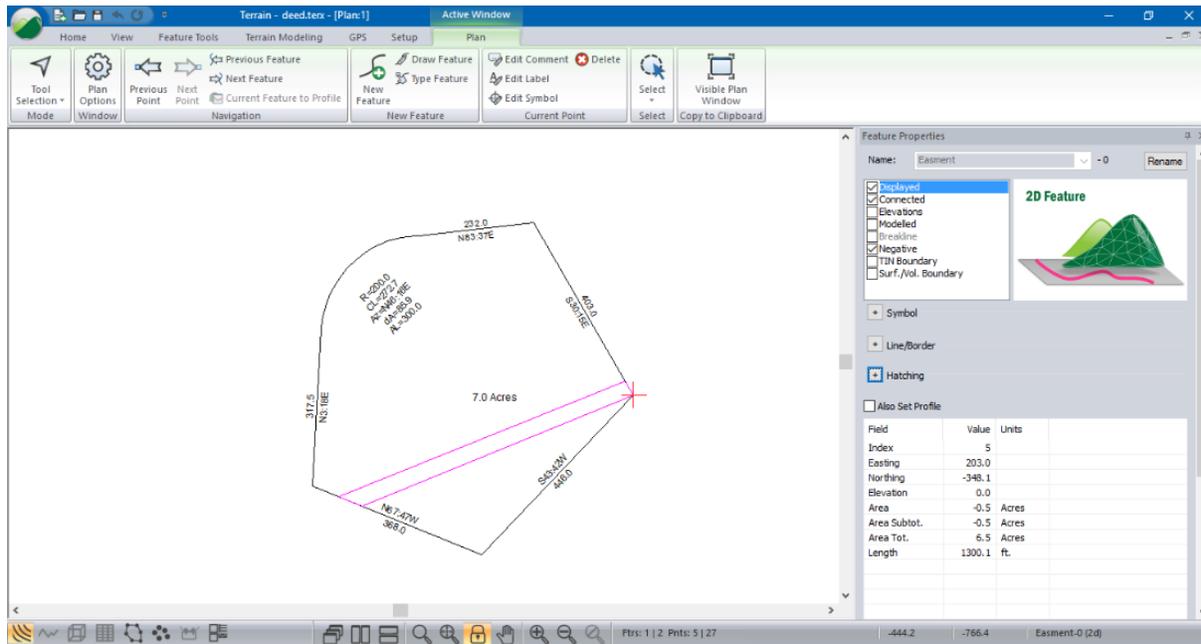


Figure 5-22: Annotated Lot Boundary and Easement

18. File | New. Do not save changes.

Coordinate Systems and Map Projections

Defining a coordinates system (map projection) allows you to place points at the correct location on the earth's surface. It also allows you to display Latitude and Longitude (Lat/Lon). This is called *geo-referencing*. For more information about coordinate systems please refer to an introductory textbook on mapping.

Terrain doesn't strictly need to work in a defined coordinate system or map projection. However; if you are importing and exporting data to external geo-referenced sources such as GPS or GIS you will want to work in a well-defined coordinate system. Some common coordinate systems include UTM, Albers, and State Plane.

Note: Terrain works in Cartesian coordinates (a system where coordinates are distances measured to perpendicular lines); usually, X=Easting, Y=Northing. Using Lat/Lon (Geographic Coordinates) as your X/Y coordinates is not recommended because distances, angles and areas are not well defined.

Many file types such as Shape, DEM, KML, TIF, TER etc. include geo-reference information. When these files are read into Terrain (using File | Open) the coordinate system is set to match the file. Other file types such as ASCII do not have geo-reference information. To geo-reference these you need manually set the coordinate system.

Note: If you do not need to import/export from/to a different coordinate system and you do not need to see Lat/Lon values, you do not need to define your coordinate system.

Setting Up a Coordinate System

1.  *File* | *Open* <Terrain>\Import\roads_a.terx.

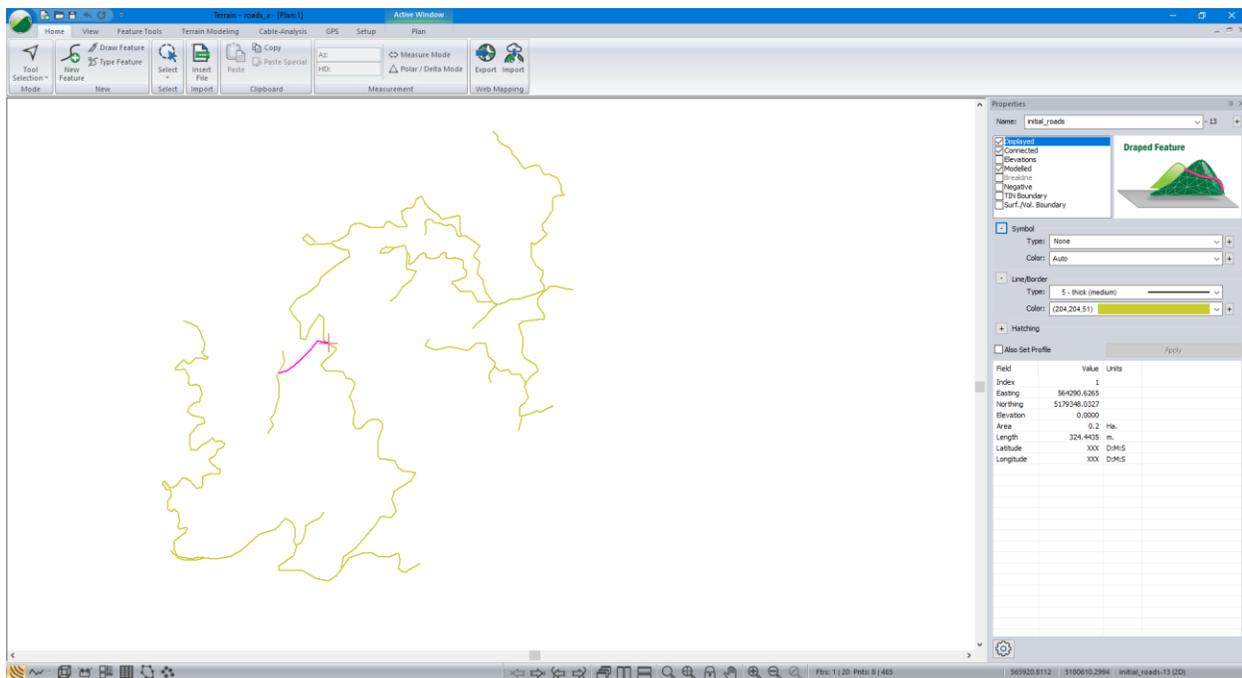


Figure 5-23: roads_a.terx Before the Projection is Defined.

Notice that the Status window (bottom of the Feature Properties panel) displays coordinates (*Easting* and *Northing*) but *Latitude* and *Longitude* are undefined (figure above).

roads_a.terx does not have any coordinate information attached to it but it is known to be in **UTM Zone 11 NAD 83** coordinates. If we setup the coordinate system in Terrain, the file will be geo-referenced.

2. Define the UTM projection: *Setup* | *Module Setup* Button | *Projection* tab.
3. Change the Projection settings to those shown in the figure below. Press *OK*.

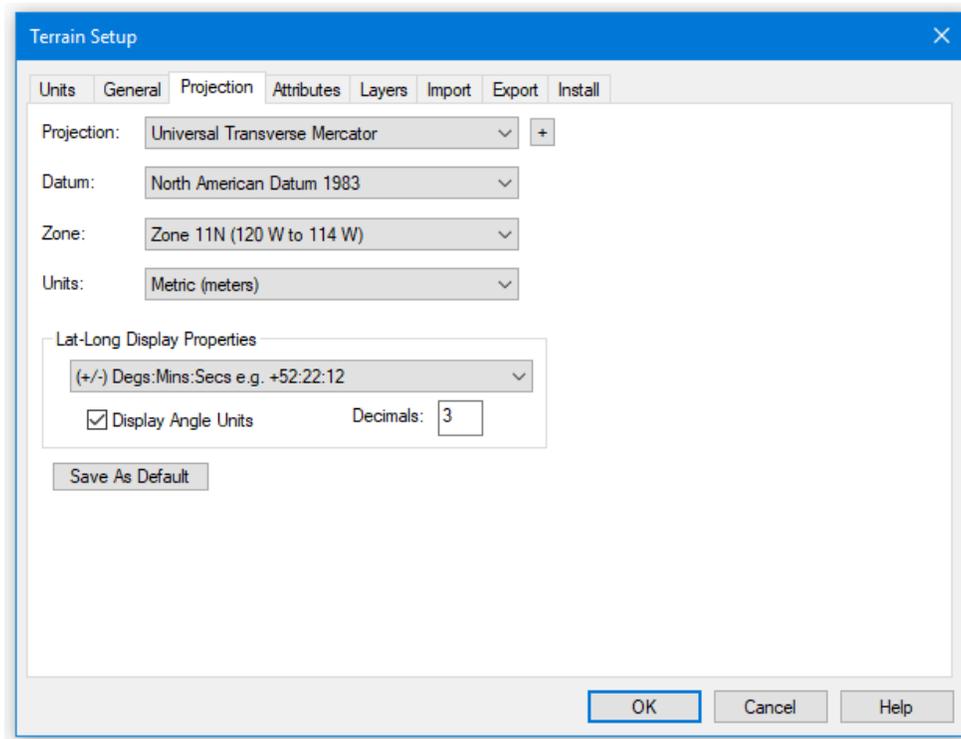


Figure 5-24: Projection Settings

Notice that the Status window now displays *Latitude* and *Longitude*.

Verifying a Coordinate System using Google Earth

A quick (and fun) way to check that a file is correctly geo-referenced, is to export it to *Google Earth*. *Google Earth* is free 3D mapping software; it can be run as a desktop application or as web based software in a *Google Chrome* browser. You must have *Google Earth* desktop installed to complete the following steps (see www.google.com/earth/desktop/ for more information).

4. In the *Home* ribbon, press the  *Export* button.

The *Web Mapping Export* dialogue box will open (figure below).

5. Select the *Google Earth* tab and make sure that *All Features* is selected then press *Update Google Earth*.

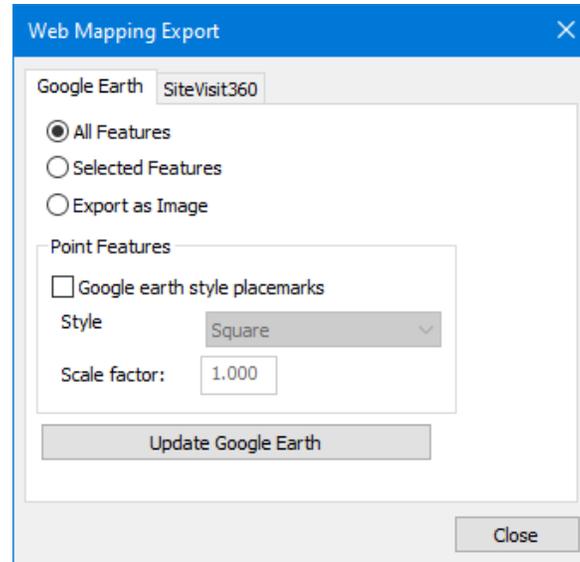


Figure 5-25: Google Earth export specification

This should run Google Earth and place your roads at the correct geographical position as shown in the figure below.

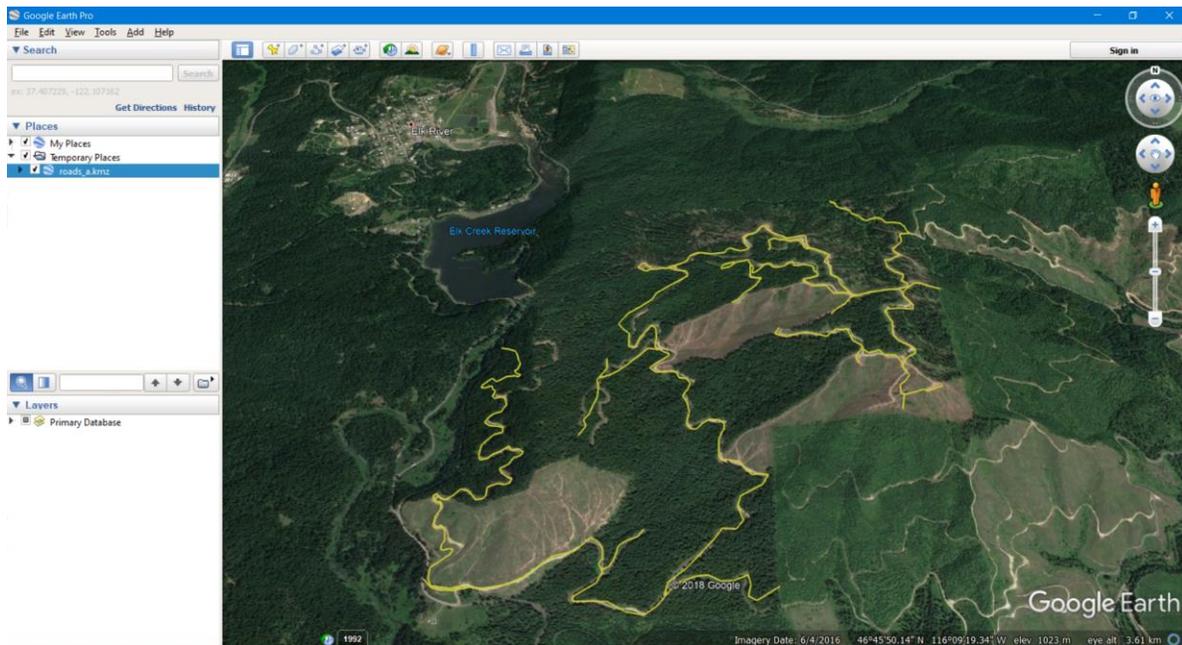


Figure 5-26: Google Earth Export

6. Close Google Earth
7. Close the Web Mapping Export dialogue

Note: You can also create a KMZ file by using menu *File* | *Save As* and choosing *Google Earth (.kmz)* from the *Save as type* pull-down

8. In Terrain,  *File* | *New*. Do not save the changes.

6. Working with LiDAR

LiDAR (Light Detection And Ranging) surveys produce very large amounts of relatively accurate three dimensional point data. The data includes points representing laser light scattered from the ground (bare earth), foliage, buildings, transmission lines and other objects. This data is usually broken into tiles, each containing a few million points.

Size and Accuracy Considerations

- The 32-bit version of RoadEng® is limited to approximately 5 million points. The 64-bit version of RoadEng® can handle more points depending on the speed of the user's CPU processor and amount RAM, 10 million points is reasonable.
- Interpolating the LiDAR into regular grid format is not recommended, because this creates points by interpolation (lost accuracy). For accuracy purposes, it is better to work with the raw data points.
- When importing LiDAR data, it is very important to group points together instead of making feature for every point. Features require a significant amount of memory (much more than a point) so it is best to store thousands of points per feature.

It is not uncommon to have data sets with hundreds of millions of points (well exceeding the recommended maximum of 10 million points). This limitation is generally not a problem for most corridor projects, if points outside the area of interest are thinned. Consider a relatively large road project say 20 kilometers (~ 12 miles). Assume that your LiDAR horizontal resolution is 1 meter (3 feet) and that you have identified a corridor that is 200 meters (~656 ft.) wide along a preliminary alignment. This yields about 4 million data points.

Importing LiDAR in ASCII format

Large data sets need to be loaded in such a way that they use the least amount of memory possible. In the next section, you will load a prepared LiDAR import format from an **IOP** (Input/Output Parameters) file.

Note: If your data is in LAS format, many of the steps in the next section are not required. However, the corridor thinning technique is required for both formats. LAS format is the preferred format for LiDAR, as it is compact and loads fast.

1.  *File* | *Open* <Terrain>\LiDAR\Empty.terx
2. *Setup* | *Module Setup* button. This opens a Terrain Setup dialogue box.
 - Select the *Import* tab.
 - Check if *LiDAR (x,y,z,code)* already existing in the dropdown menu. If that format is not present press *Merge...* button and browse to find the import options file. <Terrain>\LiDAR\LiDar2.iop.
 - Press *OK*.
 - IOP files are Import/Export File Format and was already created.
 - Press *OK* button to close the Module Setup dialogue box.

Setting up a Linear Corridor Feature

Now you will read in a proposed center line and later use it to create an area of interest.

3. Home | Insert File button.
4. Browse for file <Terrain>\LiDAR*ProposedAlignment.SHP*. Press *Open* button.

The *Import Options* dialogue box below appears.

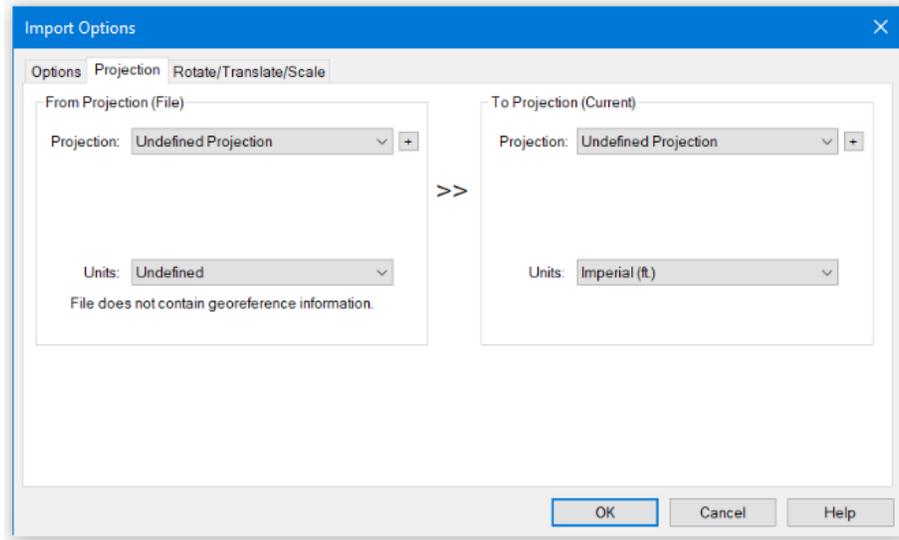


Figure 6-1: Import Options Dialogue Box

5. Press OK, Softree Warning stating “Incoming coordinate system and unit are undefined. OK to continue without conversion?”. Check box “Do not show this message again”.
6. Press *Continue* to load the proposed center line shown below. The reason for this is the coordinate system and units in *empty.terx* are correct.

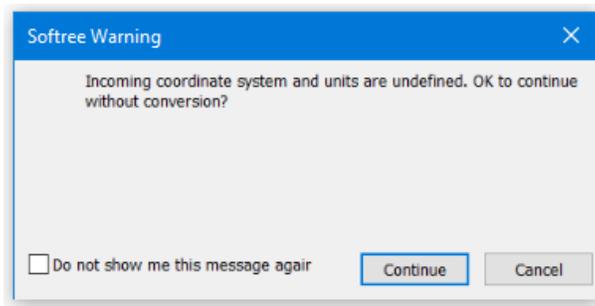


Figure 6-2: Softree Warning Message

Now that the road center line has been brought in, we can bring in the LIDAR data. This example only contains approximately 700,000 points to save download and file read time. In the following steps, we will read in the data at full resolution in the area of interest (AOI) and skip some points outside this area. In addition, we will follow some important guidelines to prevent slow draw times and memory overload.

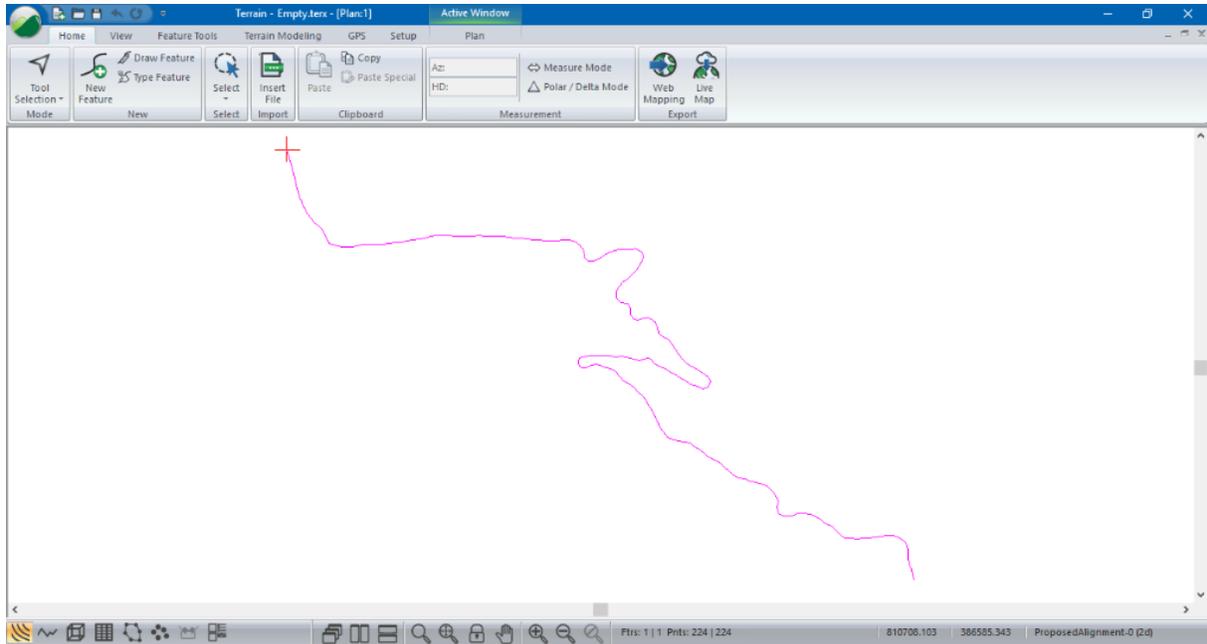


Figure 6-3: Proposed Road Center Line

7. Home | Insert File button.
8. Select *All Supported Files* from dropdown list and highlight both **.txt** files included with this example. <Terrain>\LiDAR\

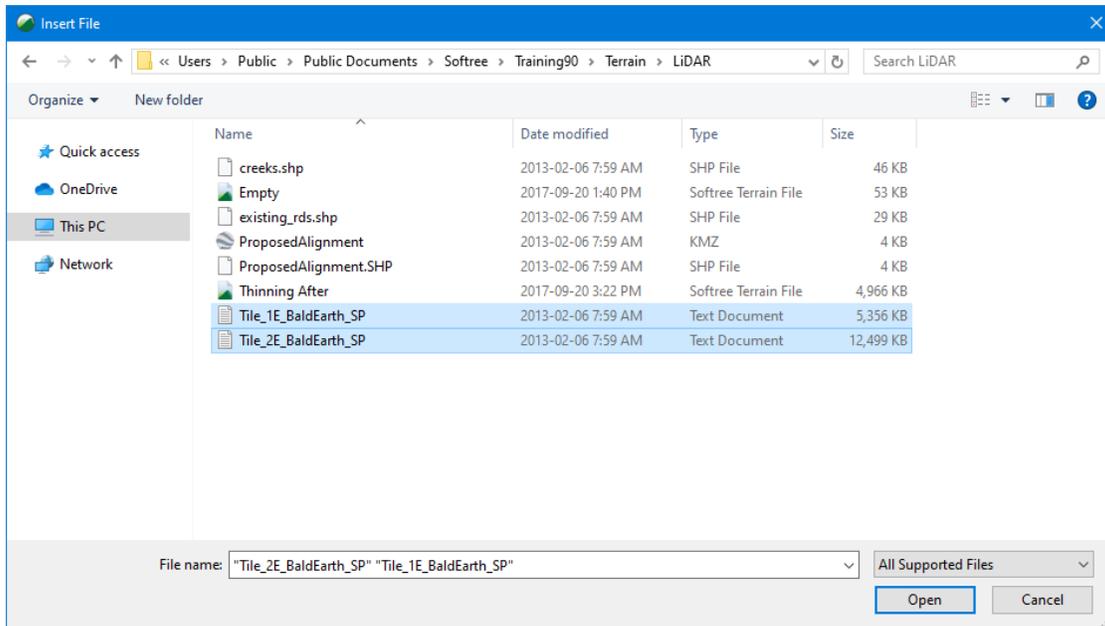


Figure 6-4: Inserting Multiple LiDAR files

9. Select *ASCII Lidar (x,y,z)* if prompted with a *Select Option* dialogue. Press *OK*.

Note: Using *Home | Insert File* button unlike *File | Open* that allows multiple files at once and does not clear existing features from your Terrain.

You will now be presented with the import options (in case you want to make last minute changes).

10. Click the *Test* tab then *Next Record* button a few times to see what the file looks like.

Note that the X, Y, Z fields are showing the correct values (Figure 6-5). This indicates that the options set in the *Structure* tab are working correctly.

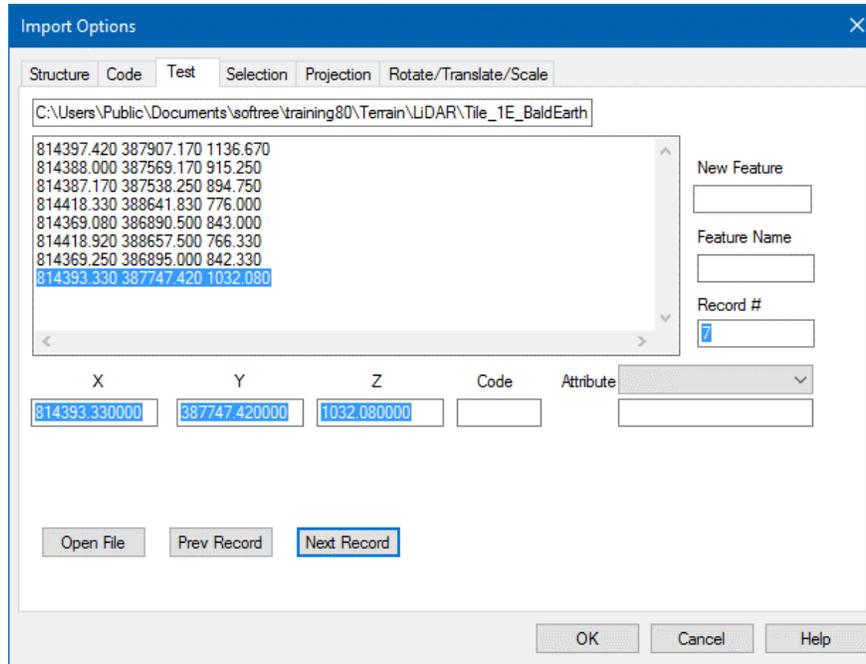


Figure 6-5: The *Test* Tab After Pressing the *Next Record* Button a Few Times

Note: Memory Usage / Display Speed Guidelines

Other *Import Options* have been setup to avoid using more memory than necessary and to make the resulting Terrain display manageable. The following rules are necessary when importing large data sets:

- Do not attach comments or other attributes to every point.
- Do not allow very large numbers of points in features.
- Do not make every point into a separate feature.
- Do not attach symbols to every point.
- Do not turn on labels (such as Elevation) that will display at every point.

If you use the standard LiDAR import options, these guidelines will be taken care of for you.

11. Click on the *Structure* tab. Notice that there are no *Attributes* defined in the *Column Assignments* section (Rule A).

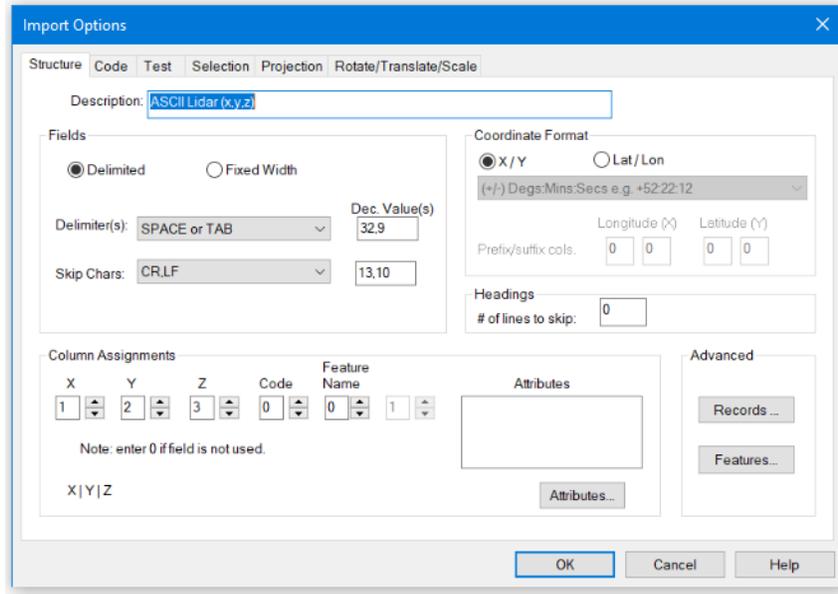


Figure 6-6: The Structure Tab Defines the Location of the X,Y,Z Coordinates

12. Structure tab | Features... Check *Limit size of Features*, Set Max points per feature: **1024**. Press OK to close.

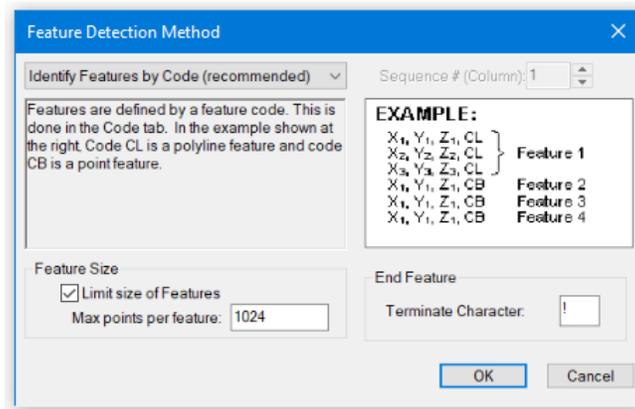


Figure 6-7: Feature Size is Limited to 1024 points

13. Code tab, set the following fields:

- Type: *Polyline*
- Feature Creation: *Connect All*
- Connected: *No (dropdown)*.
- Also note that no symbol is defined (rule D above). In some cases, it makes sense to turn off the *Displayed* property, to speed draw time later.

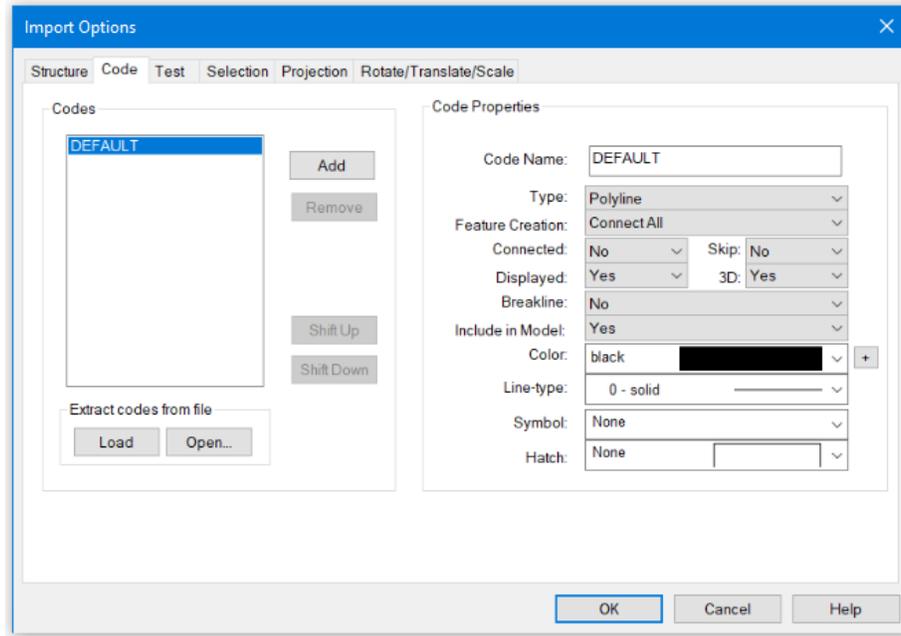


Figure 6-8: Point Code Properties Suitable For Large Data Set Import

Thinning Data on Import

There are now 3 different point-thinning options available in the Terrain module. This example will detail thinning at the time of import. When possible, it is recommended to use the two other methods (detailed later in this chapter), as they both result in more accurate surface representations.

14. Click on the Selection tab to show the options below:

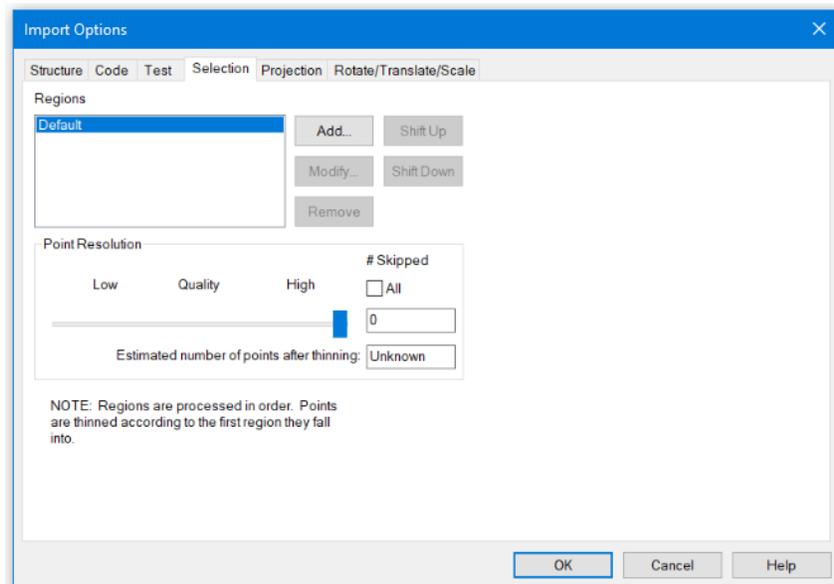


Figure 6-9: Selection Options

15. Press *Add...* to open the *Filtering Region* options as shown below.

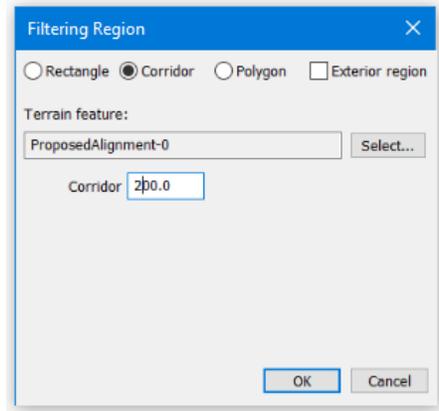


Figure 6-10: Filtering Options

16. Select *Corridor* (Figure 6-10). Then press *Select...*
17. This dialogue allows you to specify features (rectangles, corridors or polygons) to filter around. *Double-click* on the alignment feature “*ProposedAlignment-0*”. Press *OK*.
18. Set the *Corridor width* to **200**. Press *OK*.

Refer to figure below:

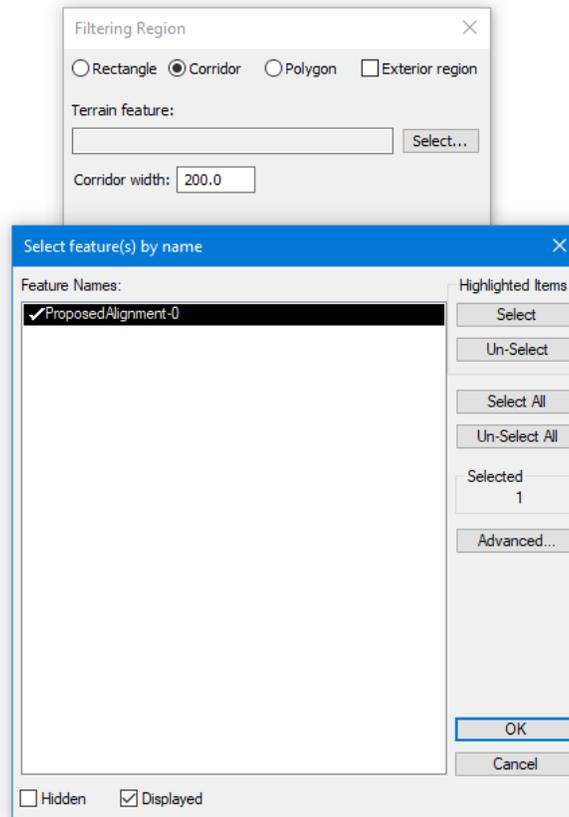


Figure 6-11: Defining a Corridor with a Linear Feature

19. Select *Default* in the list and set the *Point Resolution* to **9**.

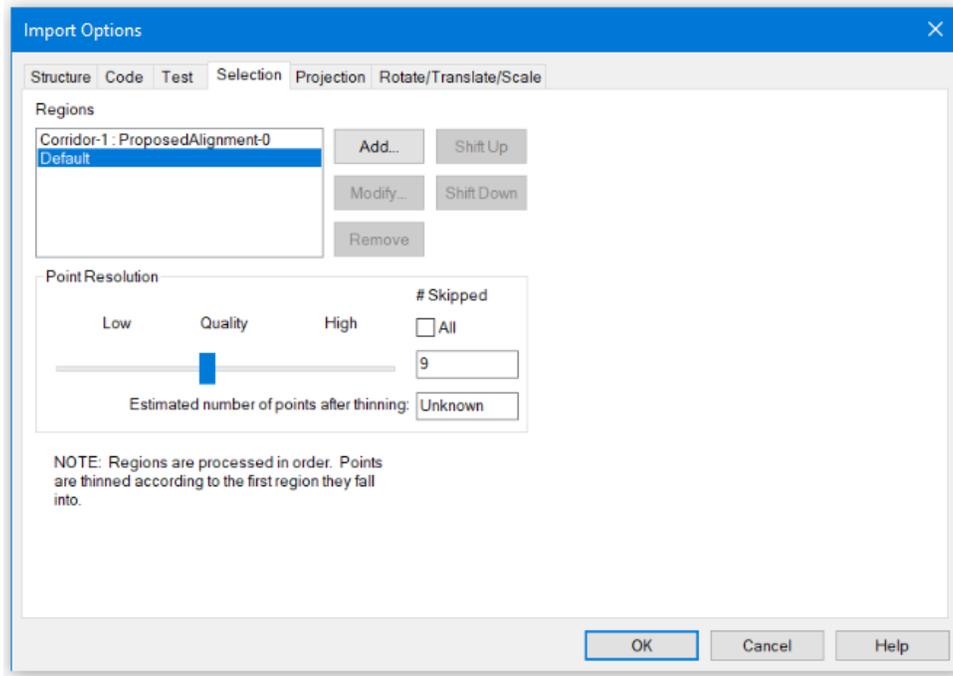


Figure 6-12: These Setup Options will Skip Most Points Outside of Corridor-1

20. Press the OK button to read the data.

It will take a couple of minutes to import about 69,000 points out of the 680,000 available.

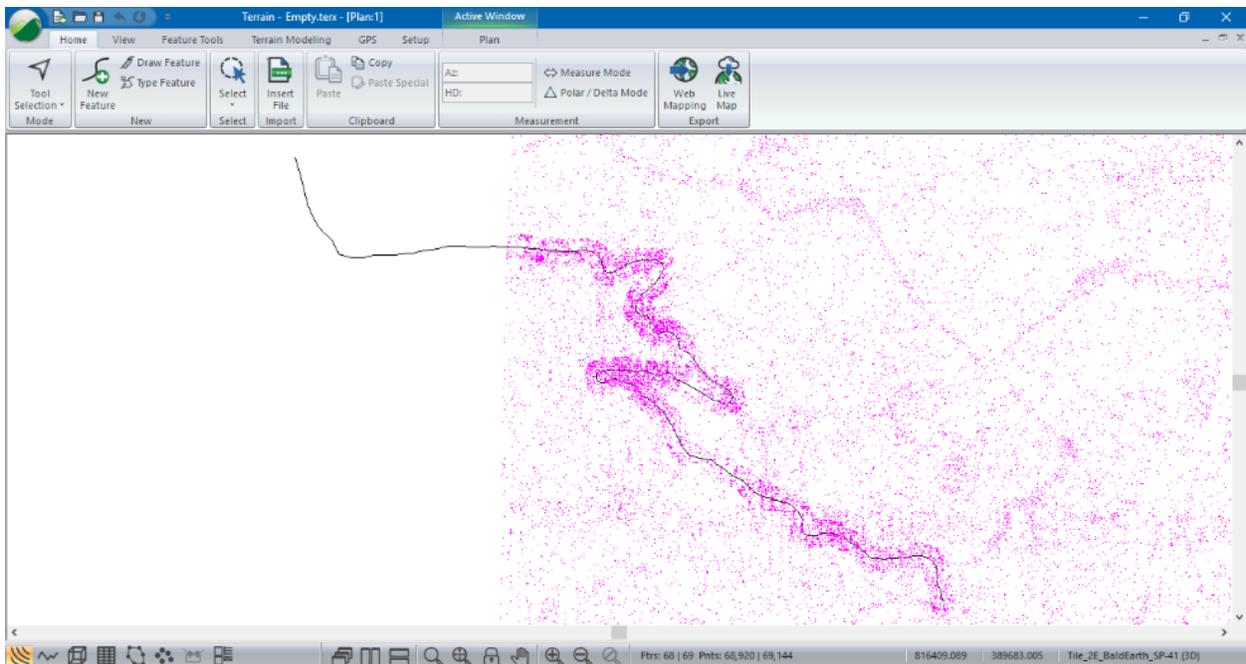


Figure 6-13: Full Point Density Along a Corridor, Reduced Density Outside

Thinning Data After Import

There are three new methods of thinning (simplification). The first two of these result in a more accurate surface representation than the thinning options on import:

- **Basic Grid Simplification (fast):** This thinning method is based off a defined grid size. One point per grid is retained. The *Calculate* button in *Point counts* can be used to quickly determine the % reduction of points.
- **Closest Point Removal (slow):** This thinning method utilizes both a minimum distance and a defined sample grid size. Multiple points per grid can be retained if they are further than the minimum distance. In the figure below, the minimum radius is represented in the first grid cell by the green circles. Neighboring points within the cell that fall in the radius are removed. This method is considerably slower than the basic grid. We recommend setting a radius smaller than the grid size.
- **Remove all points:** This thinning method removes all points. It is useful for removing unwanted points that fall outside areas of interest (*Excluded regions*).

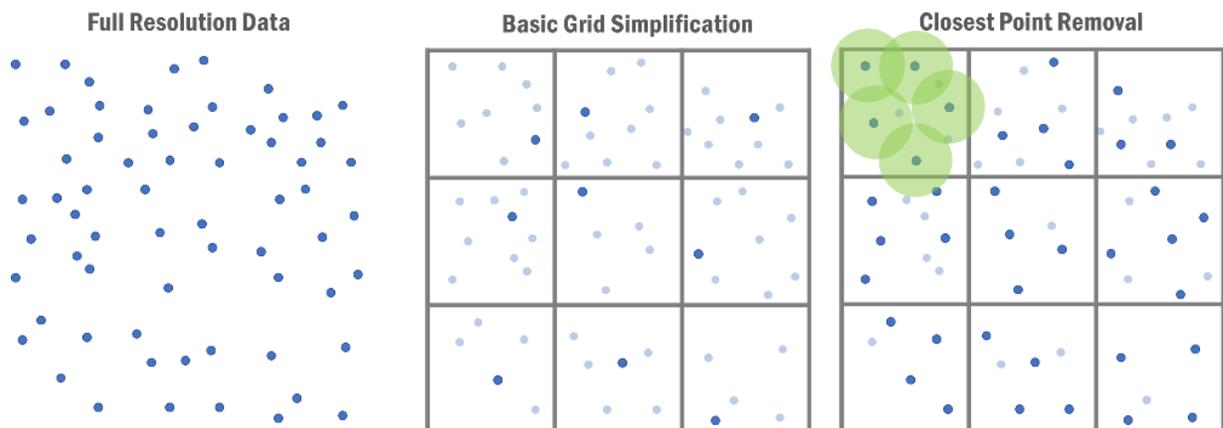


Figure 6-14: Thinning Methods

We will start by opening the previous design with shape file and LiDAR already imported, but in full resolution.

1.  *File* | *Open* <Terrain>\LiDAR\Thinning After.terx

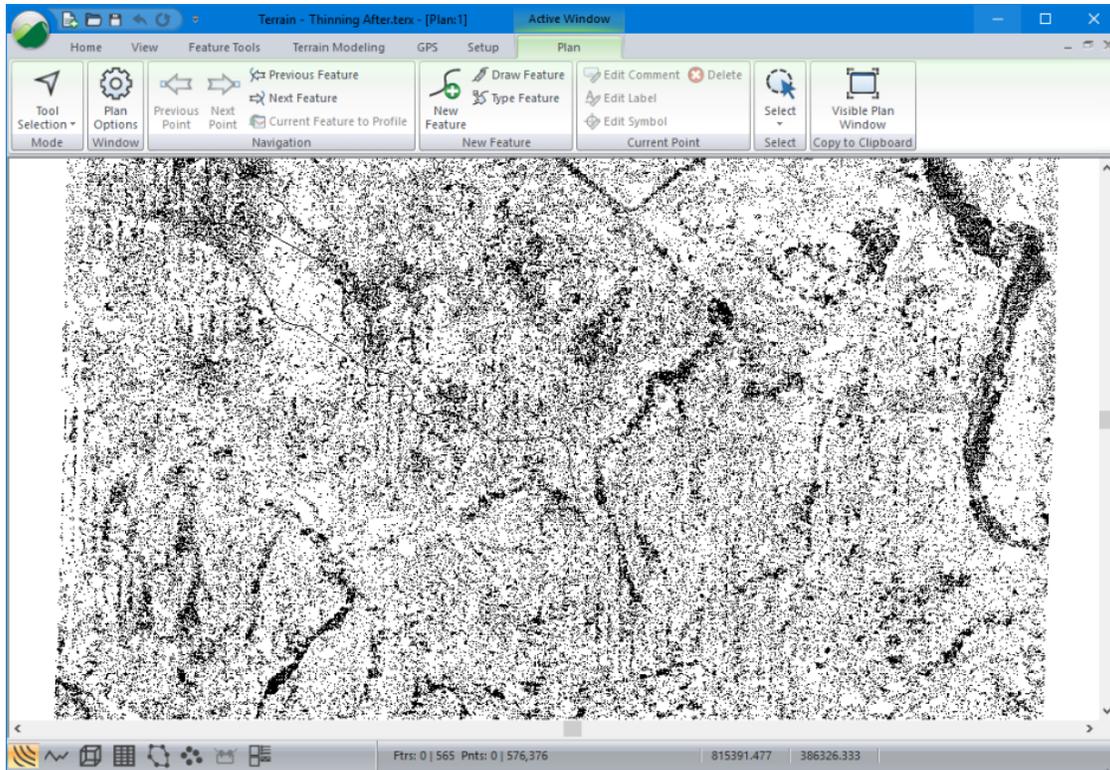


Figure 6-15: Thinning After.terx

2. *Terrain Modeling* | *Simplify*. This will open the Simplify Surface Point Data dialogue.

Basic Grid Simplification (fast)

We will first explore basic grid simplification.

3. Ensure the Method is set to *Basic Grid Simplification (Fast)*. Set the Sample Grid Spacing set at **20.00**.
4. Under Excluded Regions, press Add.
5. Select *Corridor* (similar to how we thinned on import in the previous example – see Figure 6-11). Then press *Select...*
6. This dialogue allows you to specify features (rectangles, corridors or polygons) to filter around. *Double-click* on the alignment feature “*ProposedAlignment-0*”. Press *OK*.
7. Set the corridor width to **200**. Press *OK*.
8. Press Calculate.

Your dialogue should now look like the figure below. Under *Point Counts* you will see that our settings will result in a 74.1% reduction, but the area within the corridor will remain in full resolution.

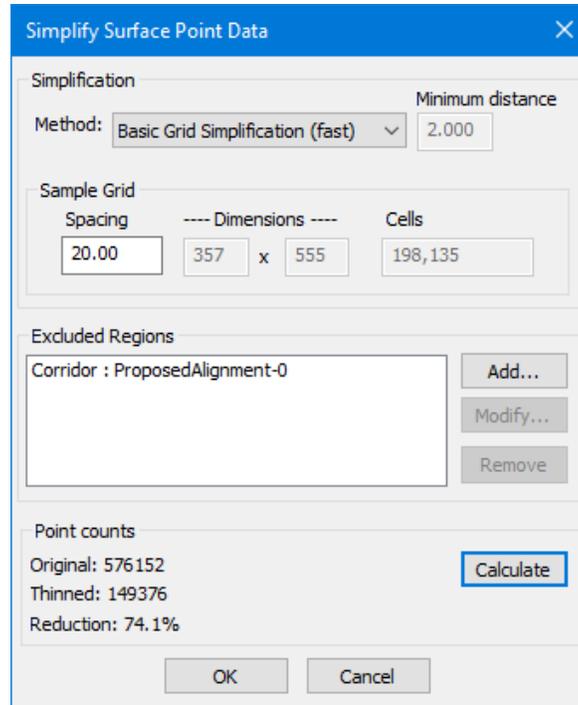


Figure 6-16: Basic Grid Simplification

9. Press *OK* to proceed with the thinning.
10. Press *OK* when prompted with the warning message: “Warning there is not enough space to UNDO this operation. Do you wish to continue?”

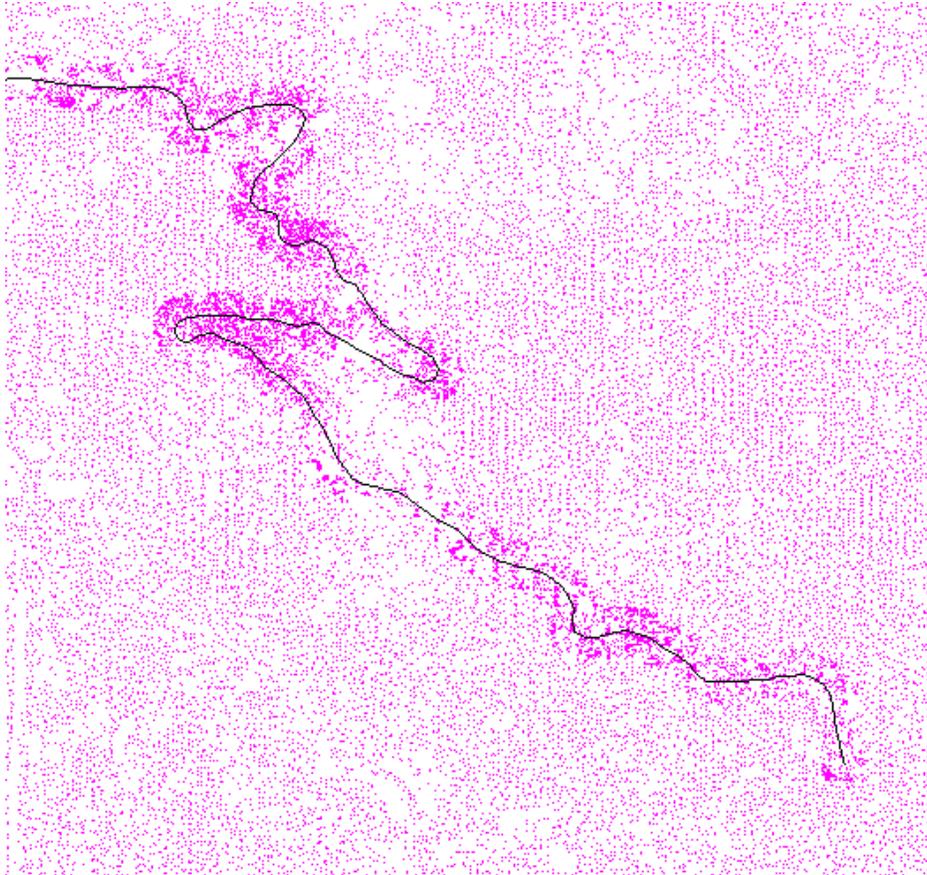


Figure 6-17: Basic Grid Thinning Results

The total point count of our surface has been reduced to 149,376 from the original 576,152.

11.  *File* | *New*. Do not save changes.

Closest Point Removal (slow)

We will now see the impact Closest Point removal.

12.  *File* | *Open* <Terrain>\LiDAR\Thinning After.terx
13. *Terrain Modeling* | *Simplify* button. Ensure the Method is set to *Closest Point Removal (Slow)*. Set the Sample Grid Spacing set at **20.00**. Set the Minimum Distance at **10**.
14. Under Excluded Regions | *Add...* | Select *Corridor* | press *Select...*
15. *Double-click* alignment feature "ProposedAlignment-0. Press *OK*.
16. Set the *corridor width* to **200**. Press *OK*.

Your dialogue should now look like the figure below:

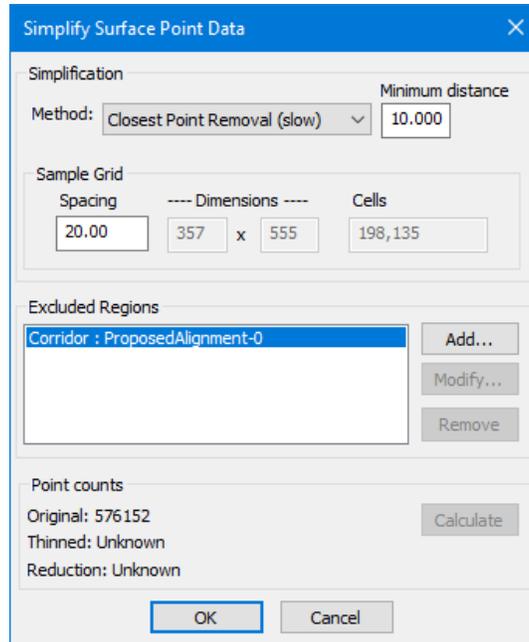


Figure 6-18: Closest Point Removal Setup in Dialogue

17. Press **OK** to proceed. Press **OK** when prompted with the warning. The screen now displays the thinned points.

Note: Unlike the fast method, the Closest Point removal method cannot estimate point counts from within the dialogue. Press **OK** to proceed with the thinning.

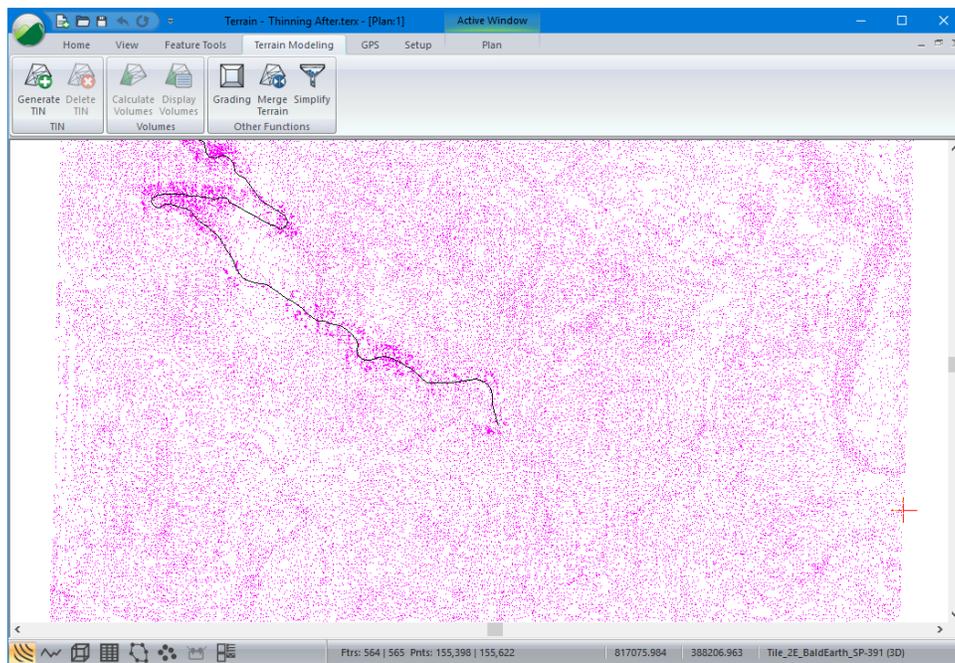


Figure 6-19: Basic Grid Thinning Results

The total point count of our surface has been reduced to 155,398 from the original 576,152.

7. Digital Terrain Modeling

A TIN (Triangular Irregular Network) Model is a 3-dimensional surface which can be used to generate contours and profiles. Each triangle is a planar facet with vertices at the known elevation points.

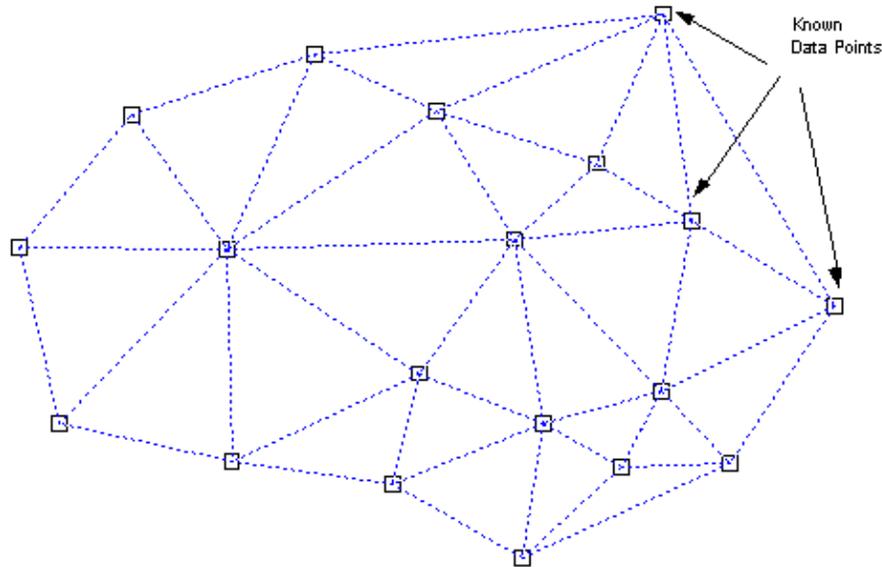


Figure 7-1: Triangle Mode

Once a TIN model has been created, the program can rapidly determine the elevation of a new point using the known elevations of the surrounding triangle. This allows contours and profiles to be generated.

To follow the examples and procedures in this section, the *Mapping and Drafting*, *Import Basic*, *Import Extended*, *Surface Generation and Contouring*, function groups need to be enabled. The last example also requires the *Volume Calculation and Reporting* function group. See *Function Groups* in the On-line help for more information.

Creating a Contour Map

Road Design Example

In this example, a DXF file containing a section of designed road will be imported. Although the file was created in the Softree - Location Module (by exporting the road edges, slope stakes and right of way lines), the concepts can be applied to coordinate data files generated by other methods (surveying, digitizing, GIS, GPS etc.).

Generating Contours

Note: See Getting Started section for file install folders (<Terrain> and <Defaults and Layouts>)

1.  File | Open <Terrain>\LiDAR\Empty.terx

2. View | Retrieve Screen Layout <Defaults and Layouts> \Training\training model.ilt
3. Home | Insert File. From the Files of Type AutoCAD DXF (*.dxf)
Select <Terrain>\DTM\design1.dxf.

The *Import DWG/DXF Options* dialogue will appear as shown in the figure below. Although it is not relevant to this example, the *Import DWG/DXF Options* dialogue contains several useful options. To find out more press the F1 key while this dialogue is displayed to access On-line Help.

4. Set the *Import Options* dialogue box *Options* tab to match those shown below. Press *OK*.

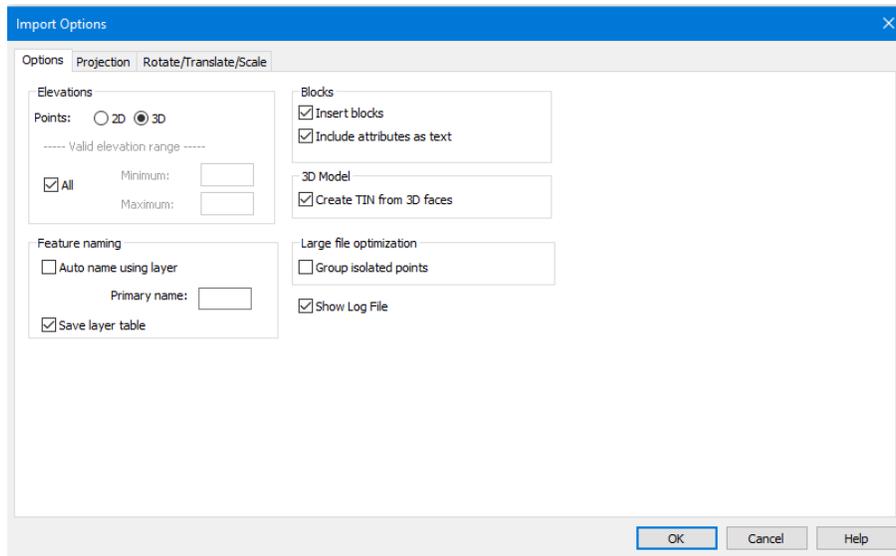


Figure 7-2: Import DWG/DXF Options Dialogue box Options Tab

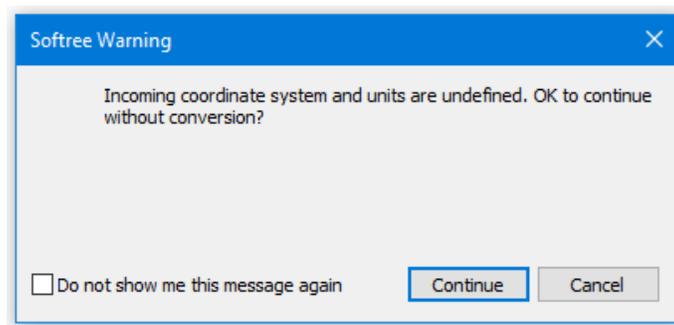


Figure 7-3: Softree Warning Message

5. Softree Warning appears – press *Continue*
6. View | Zoom Extents button.

The Plan Window now displays the Imported Features with Road Edges, Slope Stakes and Right of Way shown in the figure below.

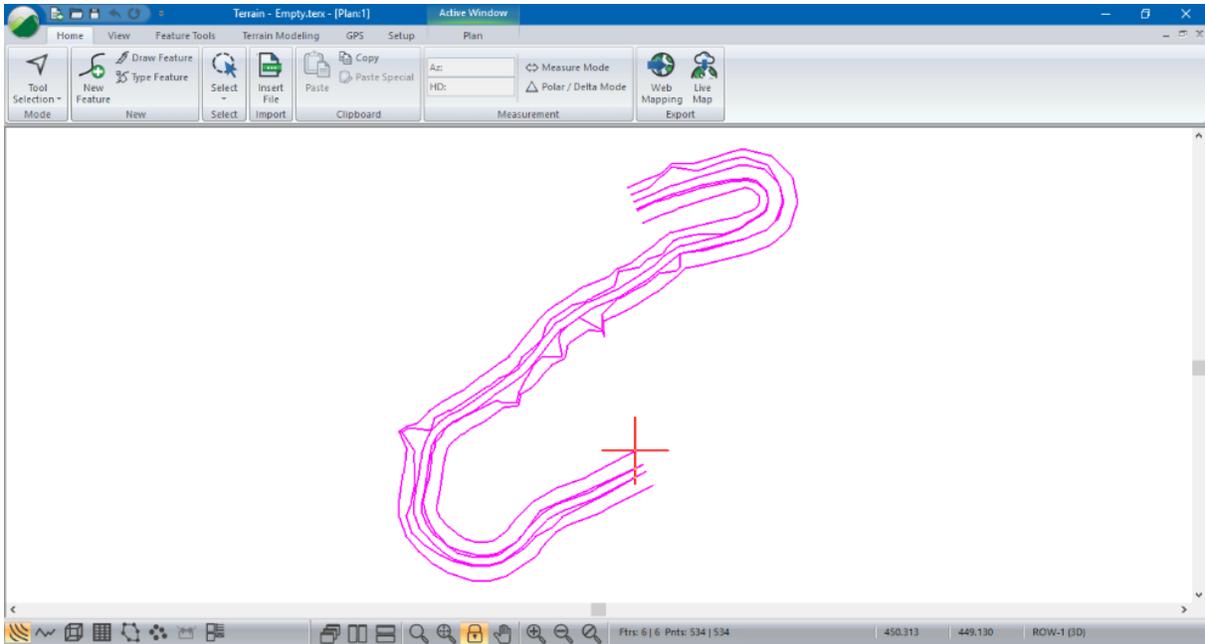


Figure 7-4: Imported Features (Road Edges, Slope Stakes and Right of Way)

7. Terrain Modeling | Generate TIN button

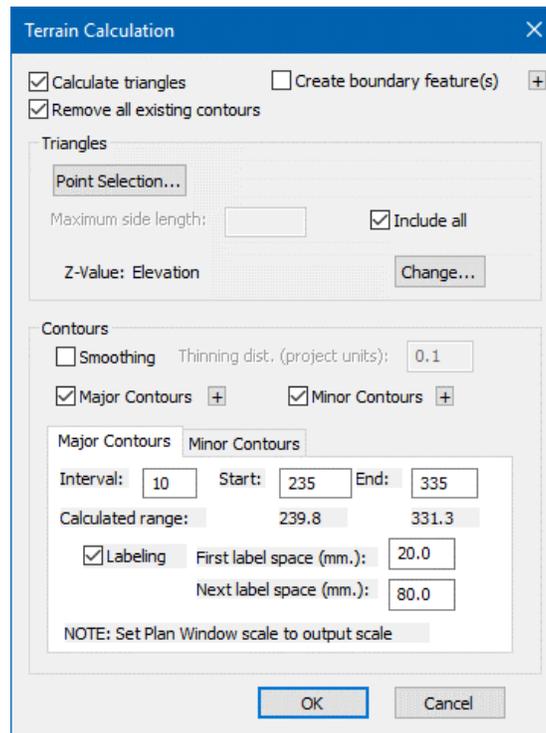


Figure 7-5: Terrain Calculation Dialogue

8. Change your dialogue box so it displays the same information as above. Note that *Major Contour* and *Minor Contours* are two separate tabs.
9. Select the *Major Contours* tab and change the *Interval* to **10** and turn on labeling.

10. To specify color and line-type, press the  button beside *Major Contours*. Change the color to *Green* and the line-type to *Thick (Medium)*. Press *OK*.
11. Press the *plus* button beside *Minor Contours* and change the color and line-type to *Green* and *0-Solid* respectively. On the *Minor Contours* tab, change *Interval* to **2**. Press *OK*.

Once the TIN model has been generated, contours are formed by creating a straight-line segment across each triangle.

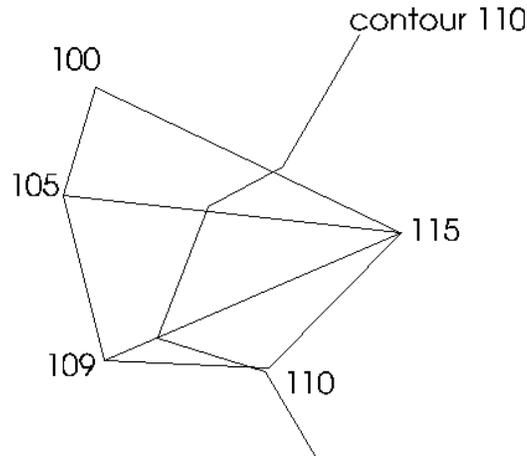


Figure 7-6: Example Contour Formation

If contour smoothing has been enabled, the resulting line segments are joined together and thinned to remove any points that are close together. The spacing is controlled by the *Thinning Distance* parameter (see *Example contour formation* in the figure above). This step effectively removes any small sharp bends in the contour. The resulting contour is then fitted with a mathematical (spline) curve.

12. Press *OK* to calculate triangles and contours.

The screen should now display the Contours as shown in the figure below. The Major Contours are thick and labelled. The Minor contours are thin and un-labelled.

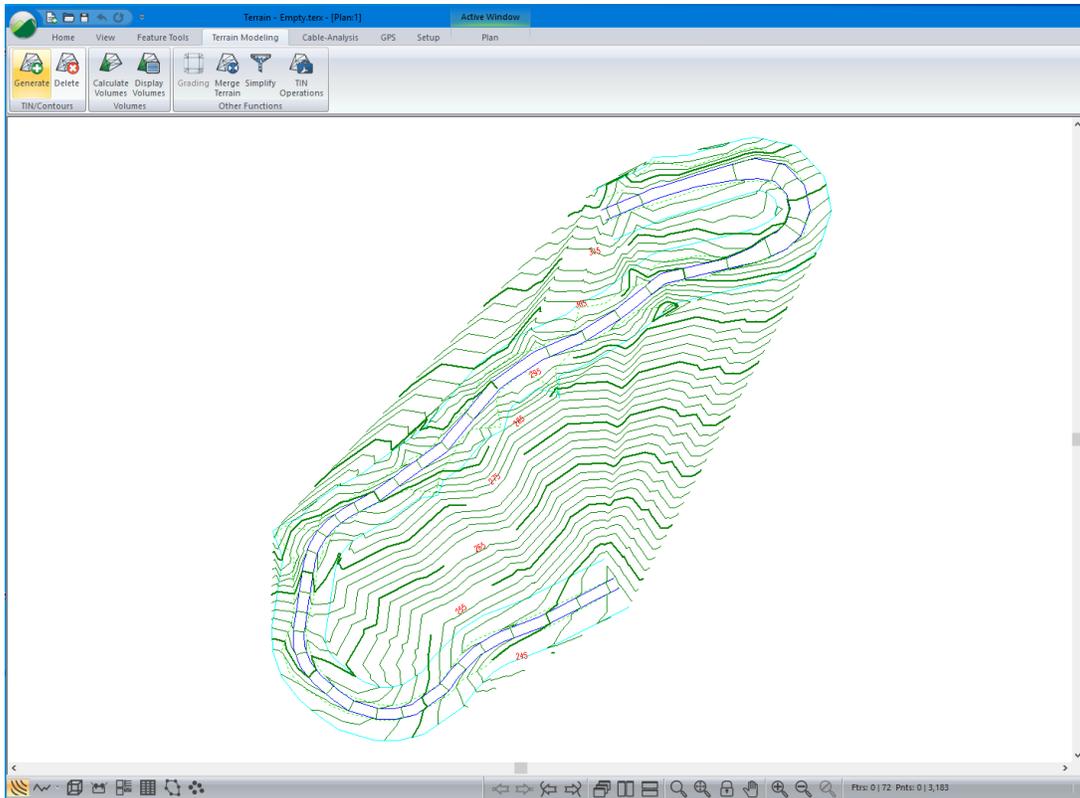


Figure 7-7: Contours - 2-meter Interval

Removing Void Areas

The contours extend outside of the road corridor, due to the formation of large triangles, which interpolate between widely spaced data points. These contours are not accurate because they are too far from the known data points. There are two methods to resolve this problem. Either method can be used. This example demonstrates both methods:

- Method 1 Limiting the side length of the triangle.
- Method 2 Defining a TIN Boundary

Method 1: Limiting the length of the triangle

13. *Terrain Modeling* | *Generate TIN* button. Check *Calculate Triangles* box, un-check *Include all* and change the *Maximum side length* to **50**. Press **OK**.

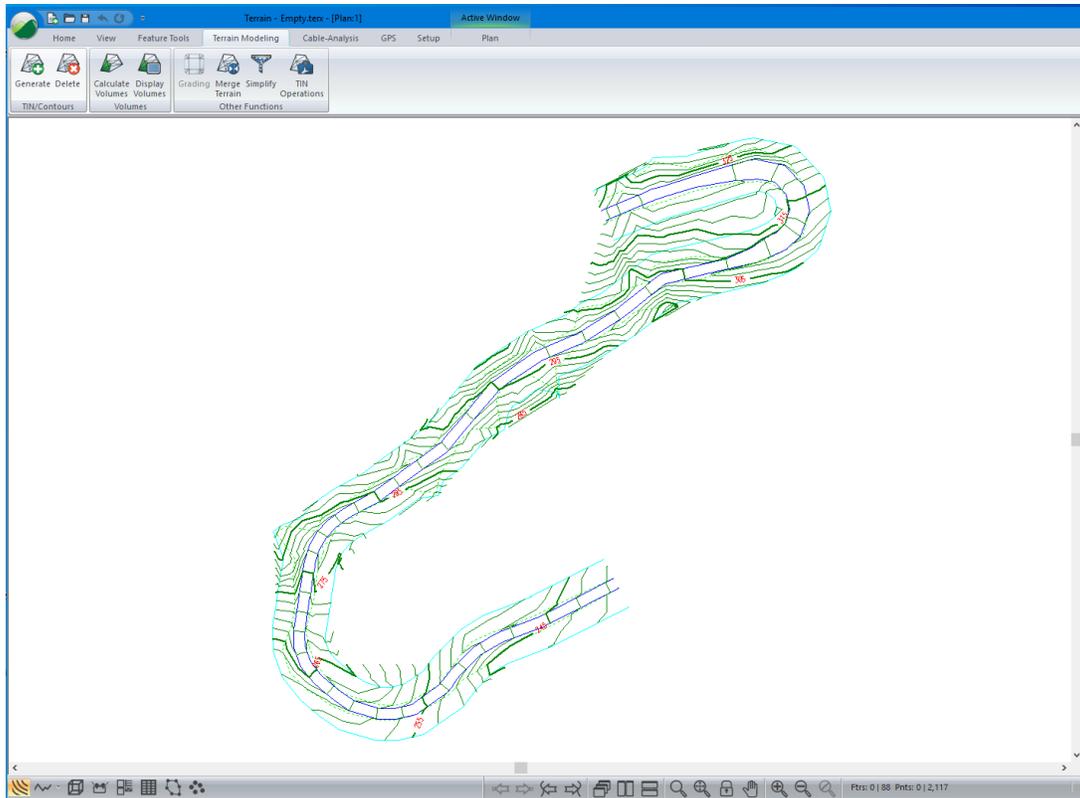


Figure 7-8: Contours Generated with Side Length Control

The contours now follow the road corridor; however, they still extend outside the road corridor particularly in the upper right corner.

Method 2 – Defining a TIN Boundary

The next step uses an explicit boundary feature to control the creation of triangles.

14. *Home | Select | By Name.* Press the *Un-Select All* button inside the Select feature(s) by name dialogue box as shown below.

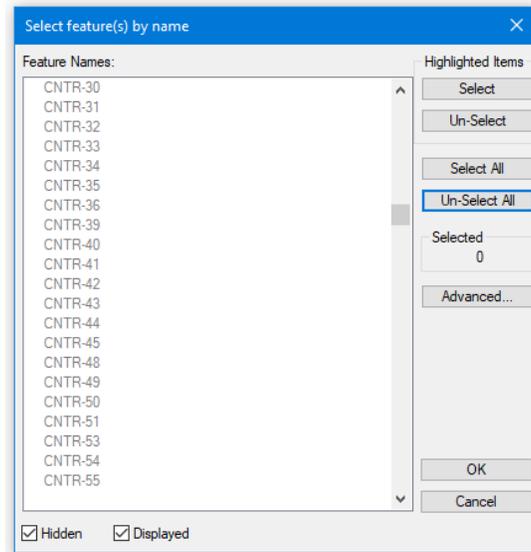


Figure 7-9: Select Feature(s) by name Dialogue Box

15. Press the *Advanced...* button and the *Select Feature(s) by Name* dialogue box will change and look as in the figure below, select *ROW* from the dropdown list in the *Predefined Layers* drop box and then press *Select* button. Press *OK*.

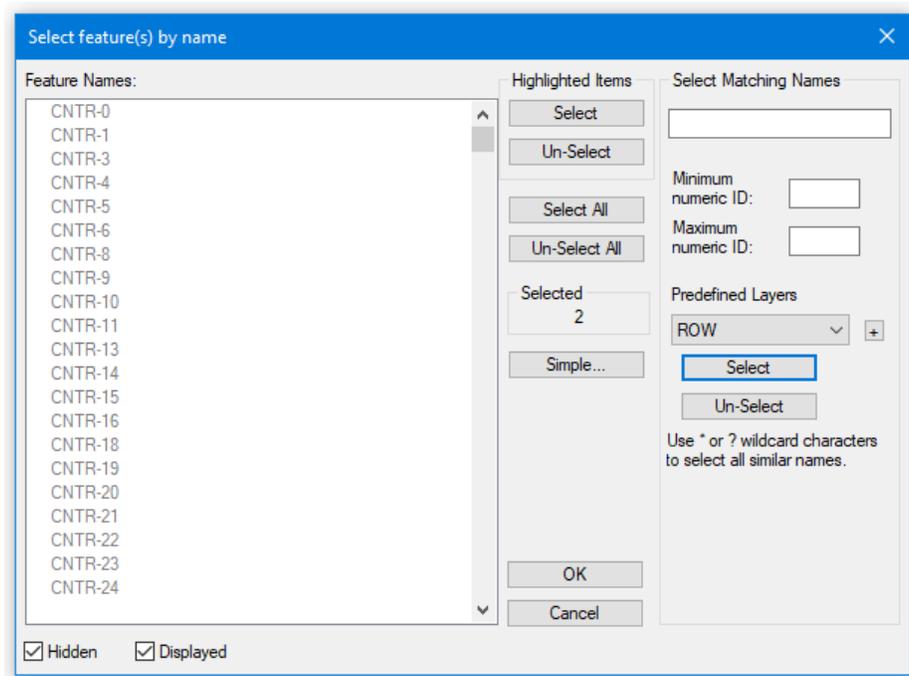


Figure 7-10: Select Feature(s) by name Dialogue Box with Advanced Section

16. *Feature Tools* | *Join*. You will be prompted '*Warning existing triangles will be cleared*'. Respond *OK*. One of the ends will be joined.
17. With the joined feature still selected, *Feature Tools* | *Feature Properties*. This activates the *Feature Properties* dialogue box.

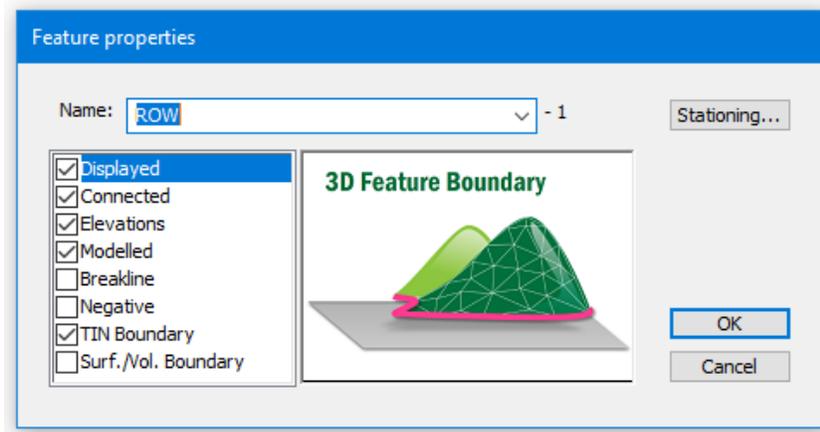


Figure 7-11: Tin Boundary Feature set in Properties Dialogue

18. Enable *TIN Boundary* and press *OK*.

When triangles are created, features with *TIN Boundary* activated are used to limit the extent of the triangulation. All triangles with their center point inside the *TIN Boundary* will be retained. If the *TIN Boundary* feature has the “*Negative Area*” property set, then its area will be excluded.

19. *Terrain Modeling* | *Generate TIN*. Make sure that *Major Contours* and *Minor Contours* are selected and press *OK*. The contours now fall completely inside the right of way boundary.

The following steps will demonstrate how to remove triangles inside a *TIN Boundary* polygon. In this case, they will be removed from the road surface.

20. *Home* | *Select By Name*. Press the *Un-Select All* button. Select the features called *REDGE-0* and *REDGE-1*. Press *Select* button. Press *OK*.

21. *Feature Tools* | *Join* (if this menu is disabled, then you have not selected two features). You will be prompted ‘*Warning existing triangles will be cleared*’ Respond *OK*.

22. With the joined feature still selected, *Feature Tools* | *Feature Properties* button. Change *Feature Properties* so that *Negative* and *TIN Boundary* are enabled (see figure below). Press *OK*.

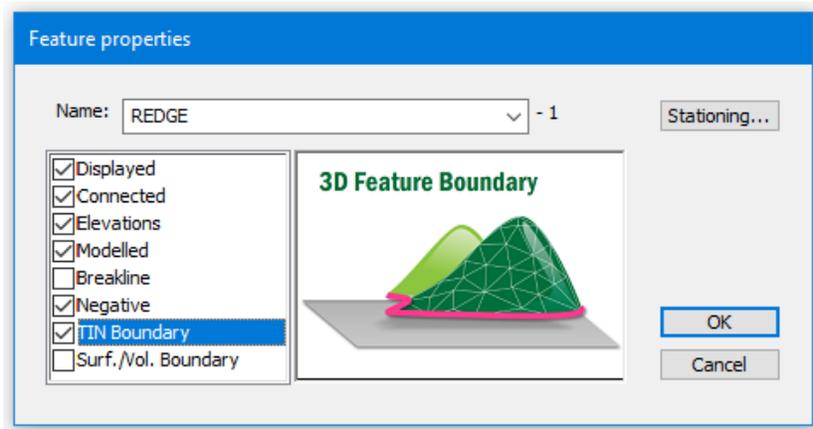


Figure 7-12: Negative Area set for a TIN Boundary Feature

23. *Terrain Modeling* | *Generate TIN*. Make sure that *Major Contours* and *Minor Contours* are selected and press *OK*.

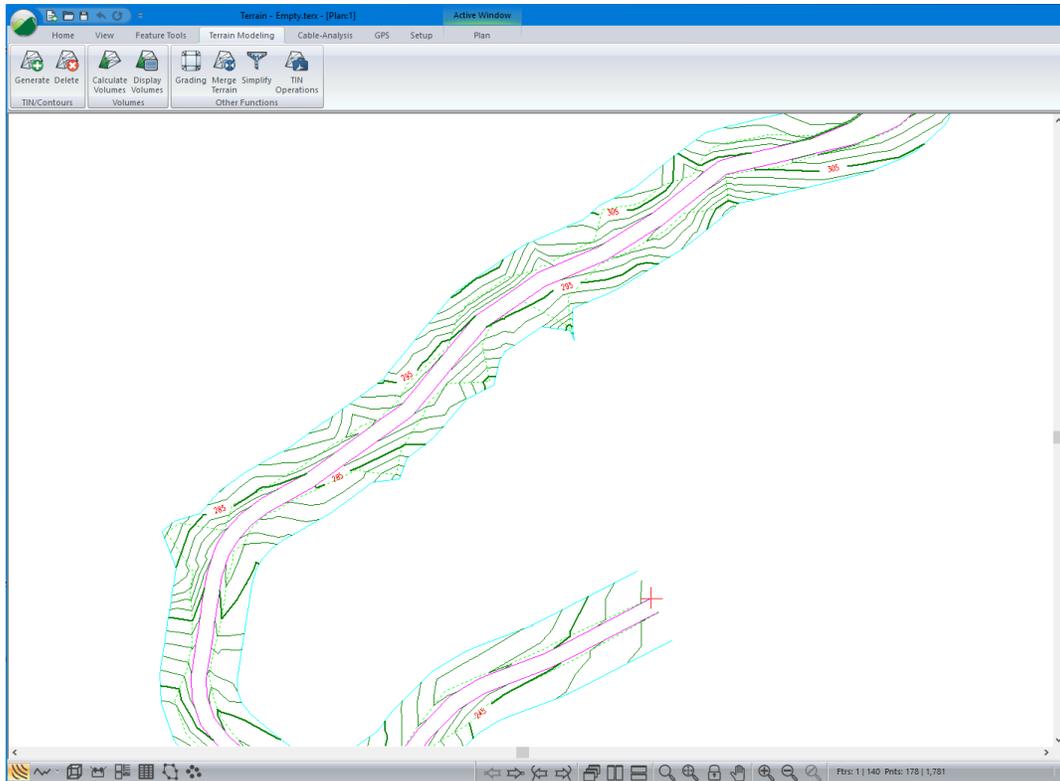


Figure 7-13: Contours Generated with Road Surface Excluded

24. **File** | **New**. Do not save changes.

Improving Contouring with Breaklines

Site Survey Example

Identifying and modeling breaklines can significantly improve the accuracy of a TIN model and associated contours. Breaklines are sharp changes in ground slope such as a creek bank, an edge of a road, an edge of ditch or a rock bluff.

Triangles should not be allowed to form across these features, since doing so would flatten the slope across the break. Features in the Terrain Module will be used as breaklines when their *Breakline* property is enabled. Triangle link lines will not cross *Breakline* features.

This breakline example uses a topographic survey around a creek. The data was created and adjusted in the Survey/Map module. See Survey/Map Tutorial - *Making a Map with Multiple Traverses* for more information.

1. **File** | **Open**. Change Files of Type to Softtree-Terrain File (*.TERX).
2. Select <Terrain>\DTM**breakline.terx**. Press **Open**.
3. **Terrain Modeling** | **Generate TIN** button.
4. In the *Terrain Calculation* dialogue box:
 - Turn on *Major Contours*, *Minor Contours* and *Smoothing*.
 - Check *Calculate triangles*, change the *Maximum Side Length* to **60** (there are no void areas in this model).

- Select the *Minor Contours* tab and change the *Interval* to **1.0**.
- Select the *Major Contours* tab and change the *Interval* to **5.0** and turn on *Labeling*. Press **OK**.

Once the calculation is complete, a model of a creek with poorly generated contours will be displayed.

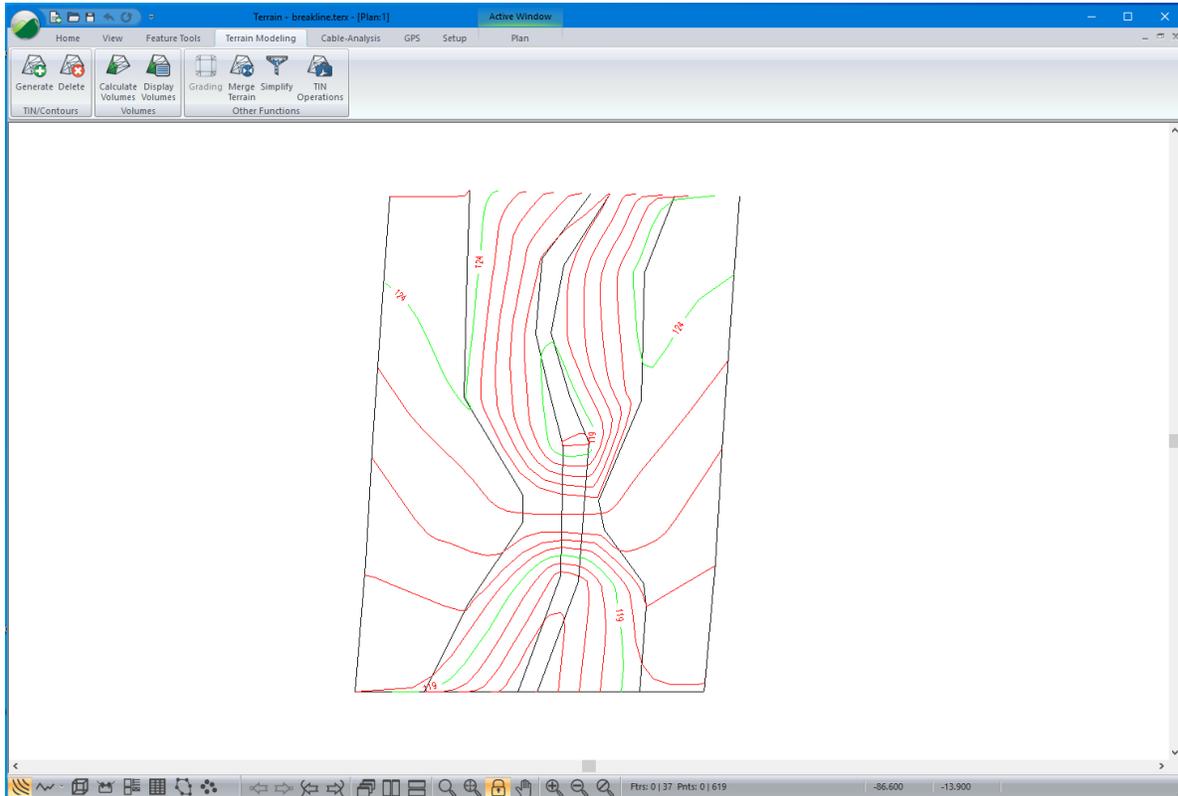


Figure 7-14: Model of Creek with Poorly Generated Contours

5. As an optional exercise, we can view the triangle outlines that the TIN model create: *Plan | Plan Options | Surface* tab. Enable *Triangle outlines*. After looking at the triangles that represent the TIN model, turn the display off again for the rest of this example.

The plan view in the figure above has contours that show the creek bottom rising up to the same elevation as the top of the banks (scarp 1, 2). This is due to triangles being formed between the scarp features and crossing over the creek features. To correct this, the defining features are made into breaklines.

6. *Home | Select | By name* in dropdown menu. Press *Un-Select All*, then select the features as shown in the figure below by *double-clicking* on them in the *Select feature (s) by name* window. Press **OK**.

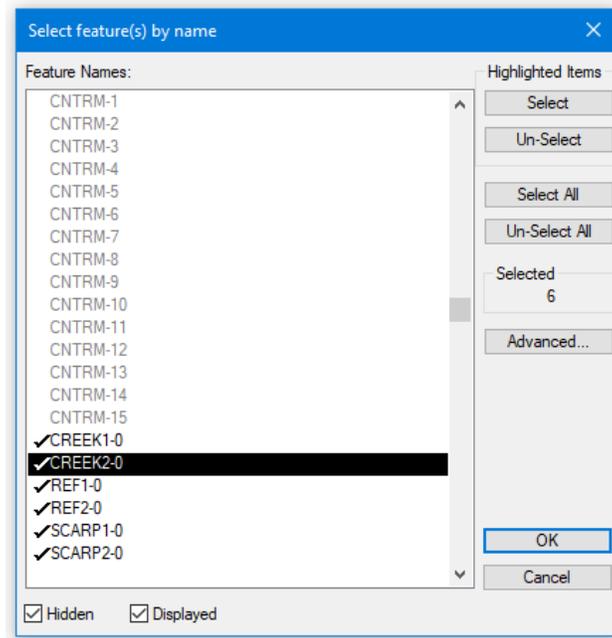


Figure 7-15: Select Feature(s) By Name Dialogue

7. Enable the *Feature Properties Panel* Enable *Breakline*. Press *Apply*.

8. *Terrain Modeling | Generate TIN*. Press *OK* to accept the settings.

After re-calculating, the contour lines now indicate a continuous gully as shown in the figure below.

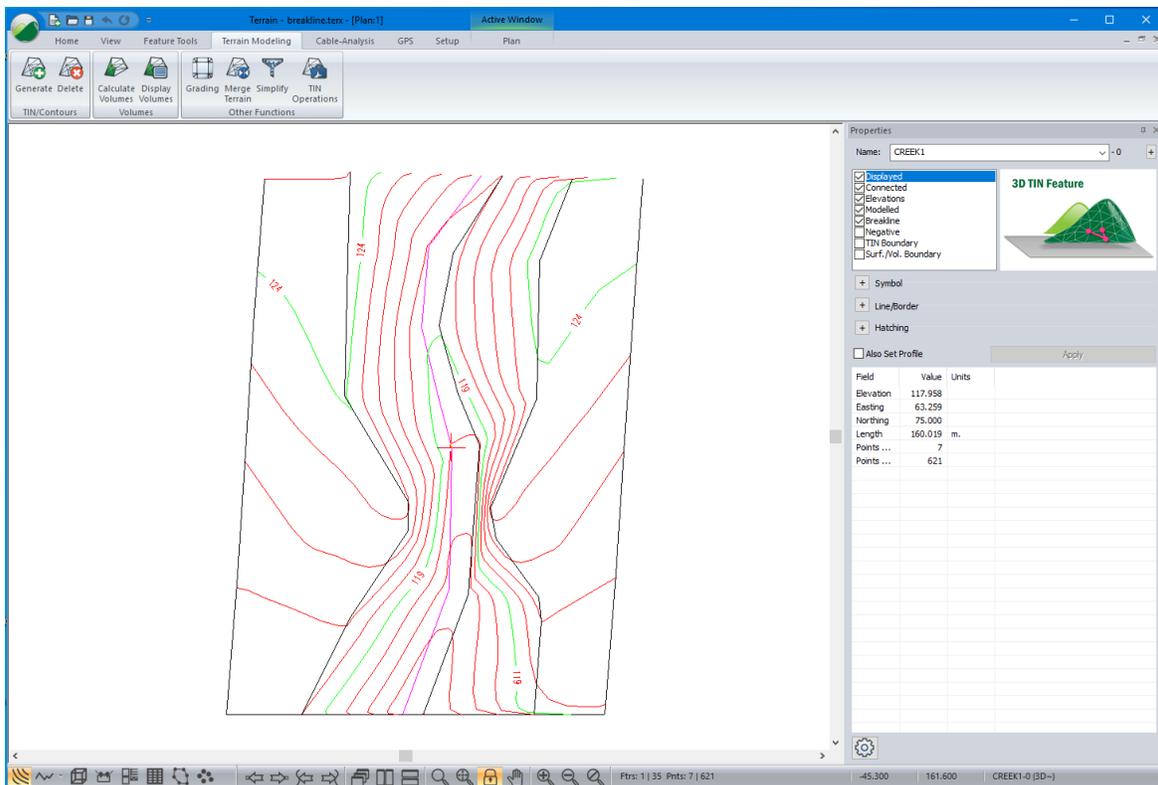


Figure 7-16: Contours After Breaklines Have Been Set

9.  File | New. Do not save changes.

Calculating Volumes

This example requires *Mapping and Drafting*, *Import Basic*, *Surface Generation and Contouring* and *Volume Calculation and Reporting* function groups enabled. See *Function Groups* in the On-line help for more information.

This example cannot be completed without the required function groups. Contact Softree to upgrade your license to permit more functions if required.

Cut and fill quantities can be computed between any two triangulated surfaces or one surface and a TIN Boundary (another polygonal boundary can also be included to restrict the calculation to a specific area). Applications of this facility are numerous and include site design, stockpile and as-built quantities. To illustrate the concept, a rock quarry and a stockpile example will be done. The rock quarry example demonstrates volumes of material excavated using two surfaces and the stockpile example demonstrates volumes using only one surface.

Calculating Volumes Using Two Surfaces

Rock Quarry Example

1.  File | Open <Terrain>\DTM\original ground.terx.

Original ground.terx was created from a total station survey of a rock quarry. The XYZ coordinate points were imported, a triangulated surface and corresponding contours were generated and saved in a Terrain file (original ground.terx)

After the rock was removed from the quarry, another survey was done and again imported, triangulated and saved in a second Terrain file (excavation.terx).

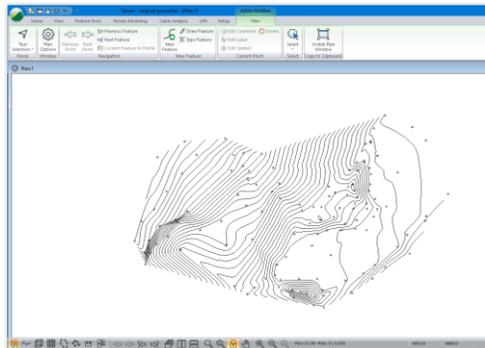


Figure 7-17: Original Surface
(original ground.terx)

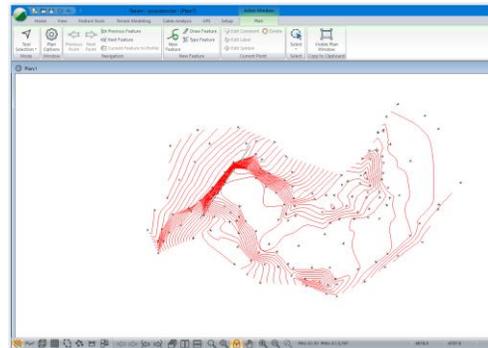


Figure 7-18: Surface After Excavation
(excavation.terx)

2. *Terrain Modeling* | *Calculate Volumes*. This will activate the dialogue box below.

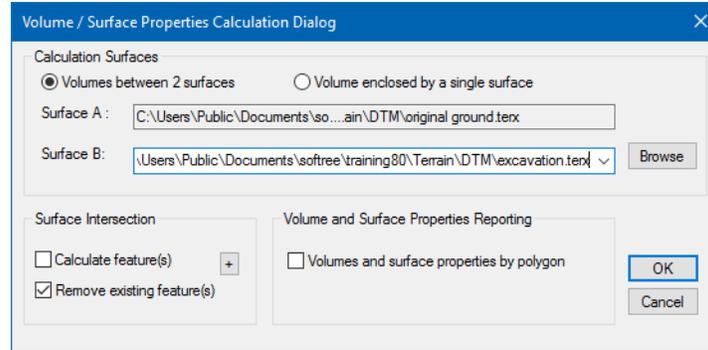


Figure 7-19: Volume / Surface Properties Calculation Dialogue

Note: To calculate volumes via this method, you must have created 2 terrain models and saved them in separate files. The first terrain model (surface A) is always the current Terrain.

The *Terrain Modeling | Calculate Volumes* is disabled if the current file does not have a terrain model. The user specifies the other surface (surface B) in the *Volume / Surface Properties Calculation dialogue box*.

3. Press the *Browse* button opposite *Surface B*. Select <Terrain>\DTM\excavation.terx. Press *Open*. Surface A should be set to *original ground.terx* and surface B should be set to *excavation.terx*. The order of these surfaces is not important as you will see later.

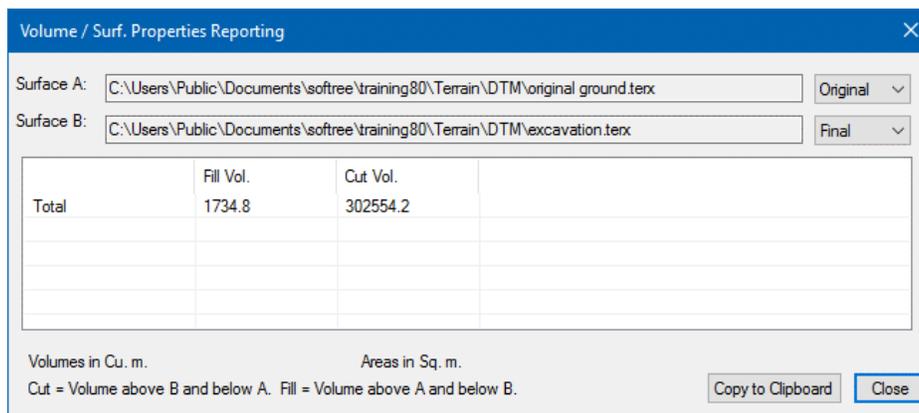


Figure 7-20: Volume / Surf. Properties Reporting Dialogue

4. Press *Close*.

The following steps demonstrate how to include two polygonal boundaries and calculate the volume inside each one.

5. *Home | Insert File*. Select and open <Terrain>\DTM\boundary.terx. *Open* button. The *Import Options Dialogue box* appears. Press *OK*.
6. *Softree Warning* may appear, select do not display again. Press *OK*.

Two boundary polygons should now be visible in the *Plan Window* as in the figure below. If not visible press the *Zoom Out*  button on the tool bar.

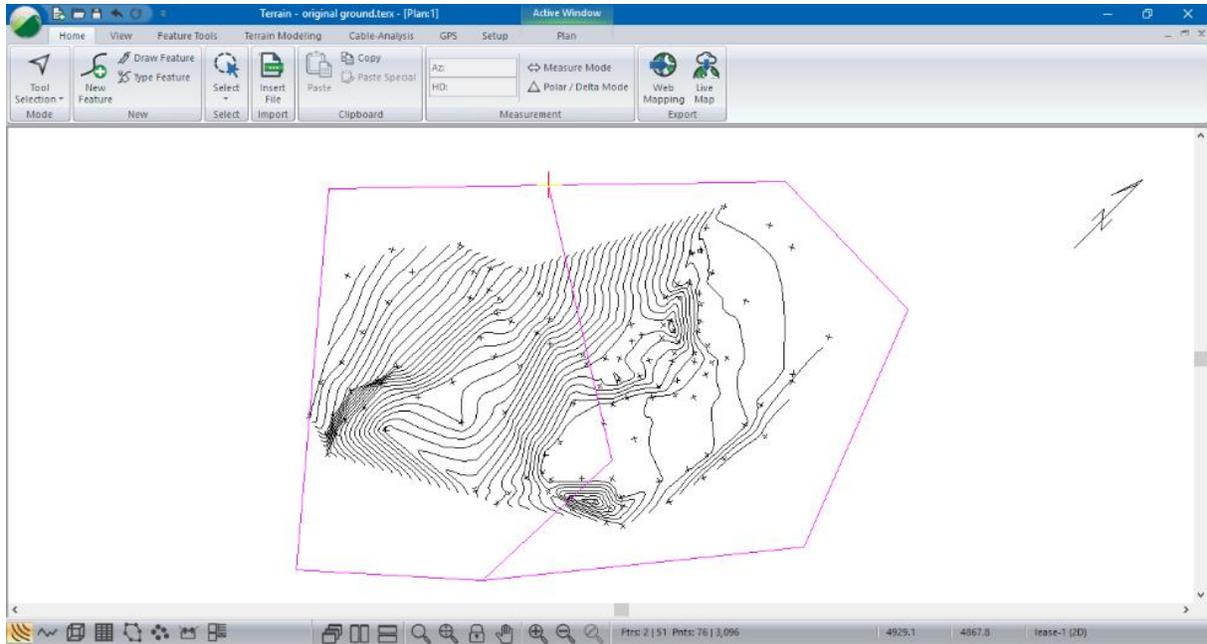


Figure 7-21: Original Topography with Boundary Polygons

7. Open the Feature Properties panel . Enable Surf/Vol. Boundary. Press Apply.

Note: When a feature has surface / volume boundary set volumes, surface area, slope and slope direction will be calculated and assigned to the feature as attributes.

8. Terrain Modeling | Calculate Volumes button to open the Volume / Surface Properties Calculation dialogue box shown in below.

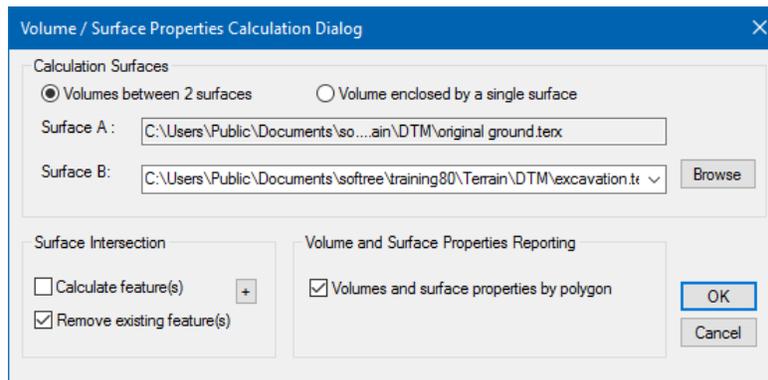


Figure 7-22: Volume / Surface Properties Calculation Dialogue - Volumes by Polygon

9. Check *Volumes and surface properties by polygon* and ensure all other selections are as indicated in the figure above. Press OK to begin the volume computation.

When completed, the *Volume/ Surf. Properties Reporting dialogue box* will appear (figure below). If you are working in imperial units (feet) the volumes will be reported in cubic yards.

Boundary	Fill Vol.	Cut Vol.	Surf. Area (A)	Av. Slope (A)	Av. Slope Dir (A)
lease-0	1477.8	302553.9	42836.3	33	89
lease-1	257.0	0.3	34797.0	19	71

Volumes in Cu. m. Areas in Sq. m.
 Cut = Volume above B and below A. Fill = Volume above A and below B.

Figure 7-23: Volumes/Surf. Properties by Polygon

Note the cut, fill quantities and surface properties are reported for the 2 polygons (lease-0 and lease-1).

10. Press *Close*. To view the values again, create a status window by *Terrain Modeling* | *Display Volumes* button. *Close* window.

Volumes can also be viewed in the *status* portion of the *Feature Properties* panel.

11. With the boundary feature selected. Attributes can be added if you press the  button at the base of the *Feature Properties* panel and press the *Add/Remove...* button. Change the Selected items list to include only *Area*, *Vol. above* and *Vol. below* (the latter two can be found in the *Surface Properties* folder).

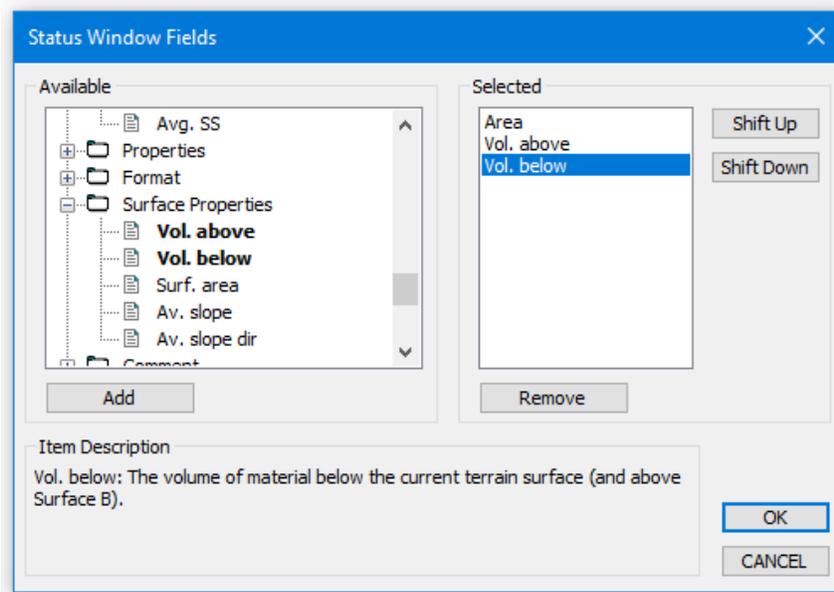


Figure 7-24: Add/Remove Items to Status Window

12. Press *OK* twice to return to the main screen.
13. The *Status* portion of the *Feature Properties* Panel displays the volumes associated with each *lease* feature. Select each *lease* feature and see how the volume changes.

14. To finish this example the results will be exported to a Microsoft Excel® spreadsheet using the Windows Clipboard. If you do not have a similar spreadsheet you can skip the next 2 steps.
15. *Terrain Modeling* | *Display Volumes* button. The Volume/Surf. Properties Reporting dialogue box will appear, then press *Copy to Clipboard* button.
16. Open Microsoft Excel® and create a new (blank) document. With the cursor positioned in the first cell select menu *Home* | *Paste*.

The volume information should appear as in the figure below:

	A	B	C	D	E	F	G
1	Boundary	Fill Vol.	Cut Vol.	Surf. Area (A)	Av. Slope (A)	Av. Slope Dir (A)	
2	lease-0	1477.8	302553.9	42836.3	33	89	
3	lease-1	257	0.3	34797	19	71	

Figure 7-25: Volume Report Exported To Microsoft Excel®

17. Close your spreadsheet. Close Volume / Surf. Properties Reporting dialogue box.
18. *File* | *New*. Do not save the changes.

Calculating Volumes using a Single Surface

Stockpile Example

This example demonstrates how to quickly calculate pile or excavation volumes using the TIN boundary to define the lower surface. For most piles with simple convex boundaries this technique is appropriate and can save time since only one TIN surface is required.

This method can be applied to any earthwork calculation where the surface is defined by the toe of the pile (or crest of the excavation), and is an accurate representation of the original surface.

1. *File* | *Open* <Terrain>\DTM\stockpile.terx.
2. Press the *Terrain Modeling* | *Calculate Volumes* button to open the Volume / Surface Properties Calculation dialogue box.

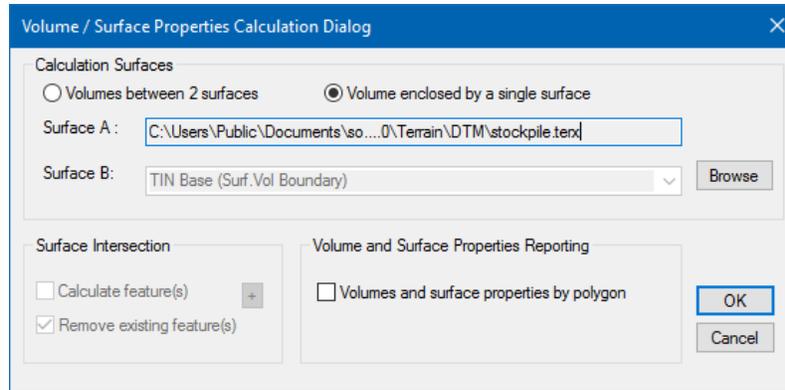


Figure 7-26: Volumes / Surface Properties Dialogue Box

3. Ensure the Volume enclosed by a single surface is enabled. Press OK.

Note: When *Volume enclosed by a single surface* is checked, the *Volume and surface properties by polygon* is automatically selected and disabled. This causes a boundary polygon to be automatically created but not shown.

4. Once the calculation is complete, the *Volume / Surf. Properties Reporting* dialogue box will display the cut and fill volumes.

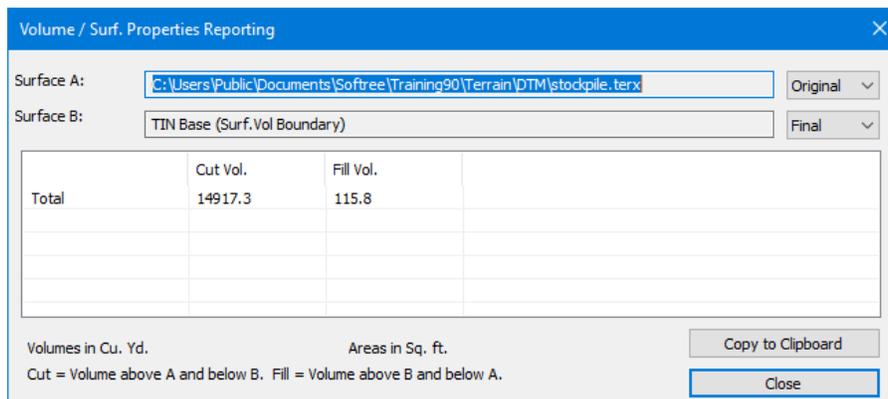


Figure 7-27: Display of Cut and Fill Volumes.

Note: The fill volume (small compared to the cut), is because the toe of the pile is not flat. If the initial surface is not planar, it is more accurate to use the 2-surface technique (described in the previous section) to calculate volumes.

5. File | New. Do not save changes.

Surface Display

Surface displays of the TIN model may be an important aid to design. Features such as Slope Vectors, Shading and 3D visualization can all simplify the design process.

Slope Vectors

1. File | Open <Terrain>\Attributes\theme17_sw.tex

2. Select *Plan* | *Plan Options*, then select the *Surface* tab.
3. Check *Slope Vectors* box as in the figure below and press the  sign beside *Slope Vectors* which will open the *TIN Slope Vector Options* dialogue box.

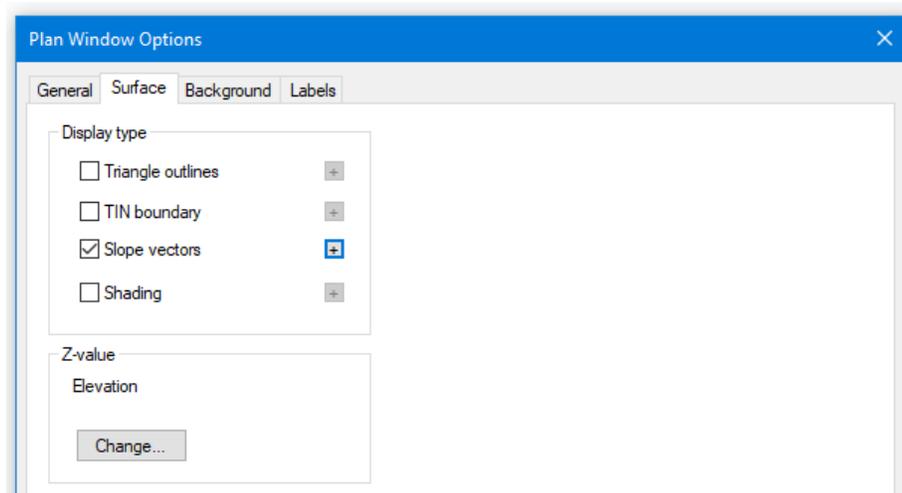


Figure 7-28: Plan Windows Options Dialogue Box – Surface Tab

4. In the *TIN Slope Vector* dialogue box:
 - o Turn off *Fixed size*.
 - o Turn on *Auto size*.
 - o Change *Maximum length (mm)* to **50**.
 - o Turn on *Display at grid locations*
 - o Type in a *Spacing* for both *X* and *Y* of **200** as shown in Figure 7-29 below.
5. Press *OK* twice.

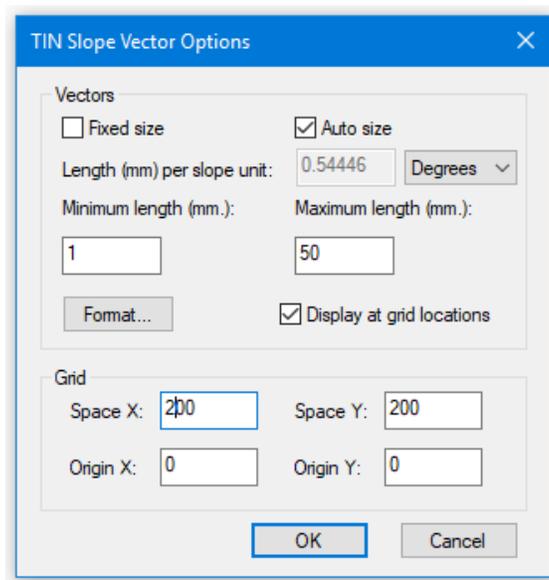


Figure 7-29: TIN Slope Vector Options Dialogue

- Zoom in on any location to view the directional arrows close up. Notice all these arrows point in the down slope direction and the length of the arrows is directly proportional to the slope. The steeper the slope the longer the arrow as shown in the figure below.

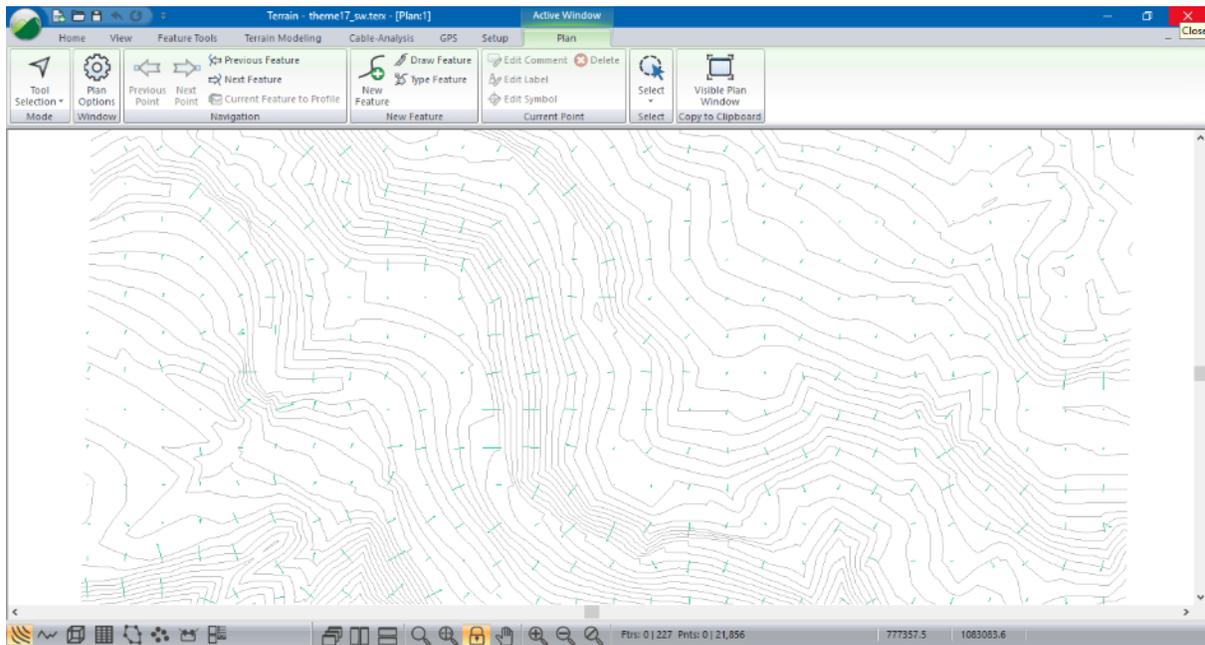


Figure 7-30: Slope Directional Arrows

Shading

- Return to *Plan | Plan Options, Surface Tab*. Turn off *Slope* and turn on *Shading*. Press the plus button \oplus beside *Shading*. Select *Slope* and *Degrees* as the shading type.
- Press the *Autogen* button and set the parameters as shown in the figure below. Press *OK*.

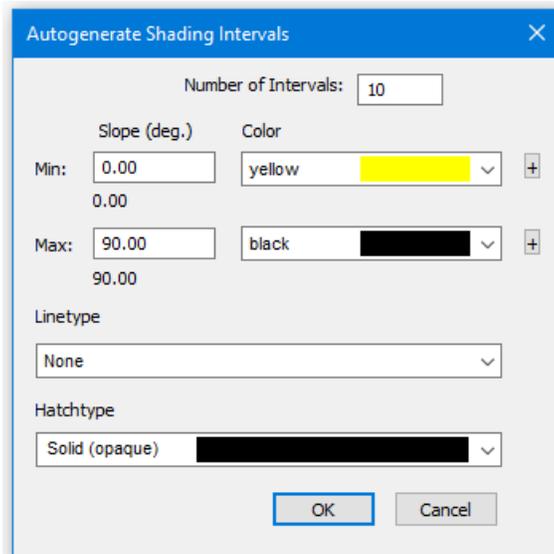


Figure 7-31: Autogenerate Shading Intervals Dialogue Box

Notice that there are 10 *Shading ranges* created. In this example only *Slope* is used. Try some of the other shading attributes to see what they do. They will not be explained in this example.

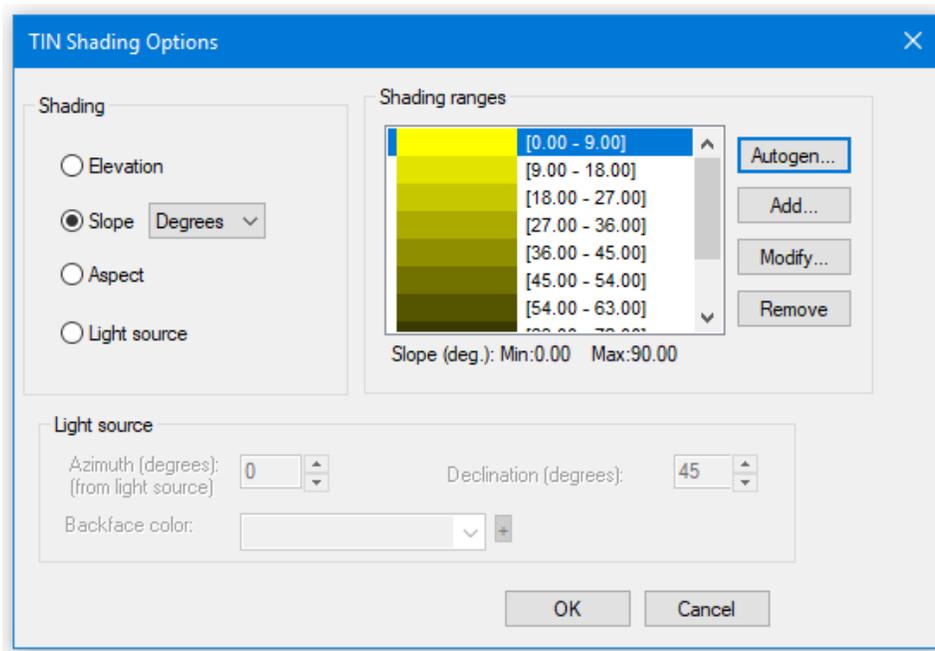


Figure 7-32: Tin Shading Options Dialogue

9. The *TIN Shading Options* should match those in the figure above. Press *OK*.

Notice the slope coloration. The steeper the slope the darker the color. The flatter the area the lighter the color (see Figure 7-33 below).

Note: *Number of shading intervals:* In this example, there are 10 shading intervals between yellow and black. The greater the shading intervals the smoother the transition from one color to the next.

Number of legend intervals: If this map is printed in a multi-plot window and a legend is created, the legend would show a color with an interval of slope breaking the total slope into 10 equal intervals.

Min/Max shading ranges: If *Auto* is checked min and max slopes will be determined from the maximum and minimum slopes in the file. If unchecked a limit to the shading slope range can be entered. All other slopes that are outside of the range will remain white.

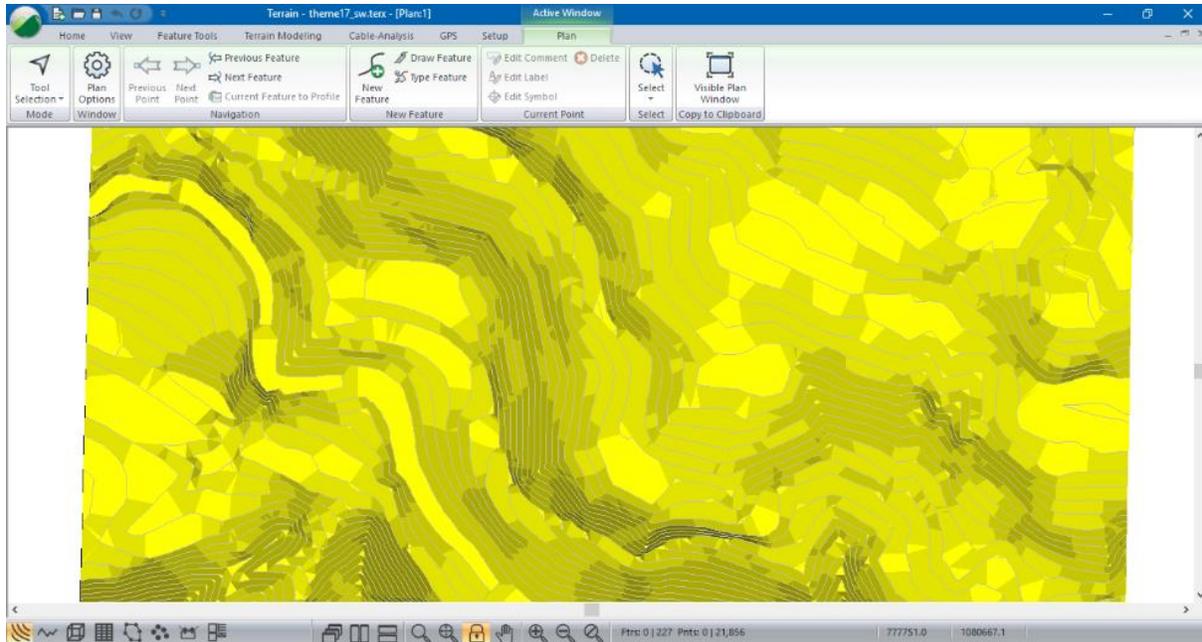


Figure 7-33: Shaded TIN Model

3D Displays

Another method of visualizing the TIN is with a 3D Window.

10. *Plan* | *Plan Options* button. Turn off *Shading* found in the *Surface* tab. Press *OK*.
11. Open the 3D Window. Select  from the *Navigation* part of the bottom *Status* bar.
12. *3D* | *3D Options*. Change your *3D Options* to match those shown in the figure below. There are two tabs (controlled at the bottom of the dialogue), *Content* and *View*. Press *OK*.

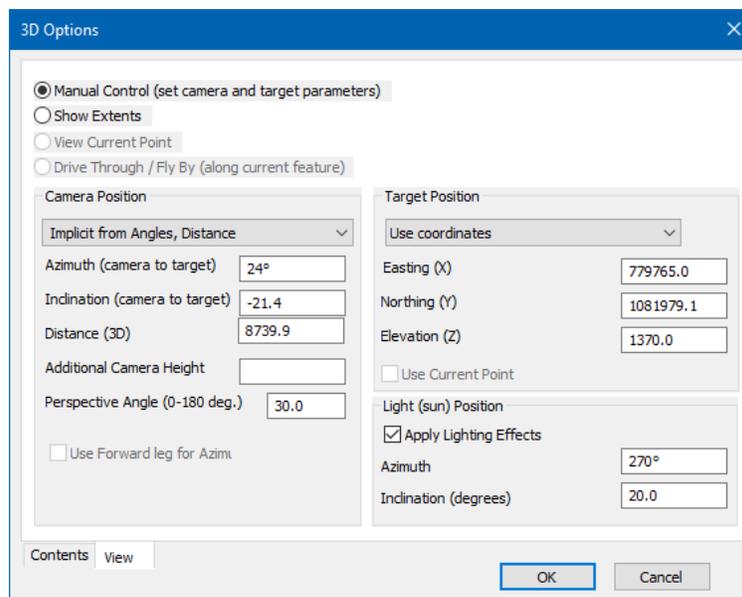


Figure 7-34: 3D Options Dialogue - View Tab

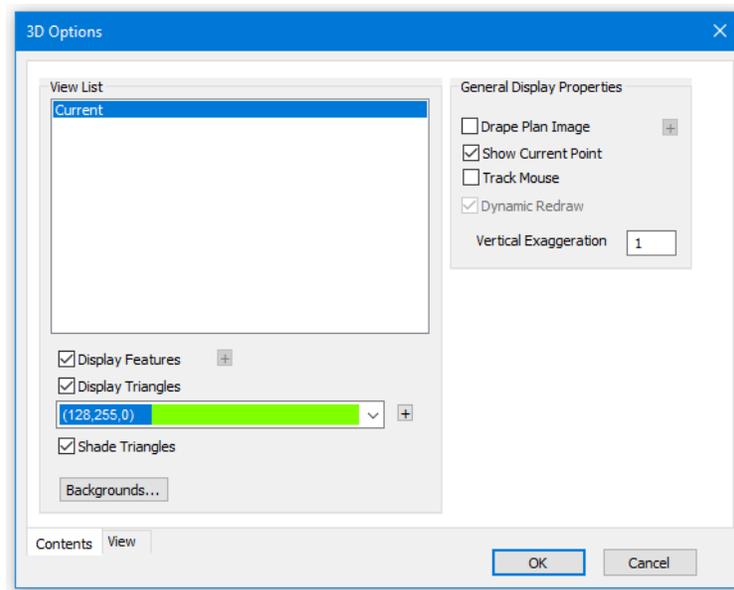


Figure 7-35: 3D Options Dialogue - Contents Tab

Note: *Show Extents:* Shows the entire View

Camera Position – Use Coordinates: Allows entry of the coordinates at which the camera will be placed and the *Perspective Angle*. The *Perspective Angle* is the view angle. The larger the angle the larger the view. If *Use Current Point* is checked the coordinates will be grayed out and the current point in the plan window will be used.

Camera Position - Implicit from Angles, Distance: Allows entry of the *Azimuth*, *Inclination*, and *Distance* to the target (which is a set of coordinates or the current point) entered in by the user in the *Target Position* area. If *Use Forward leg for Azim.* is checked then the camera will always face the direction of travel.

Light (sun) Position: The direction and angle of sun in the sky.

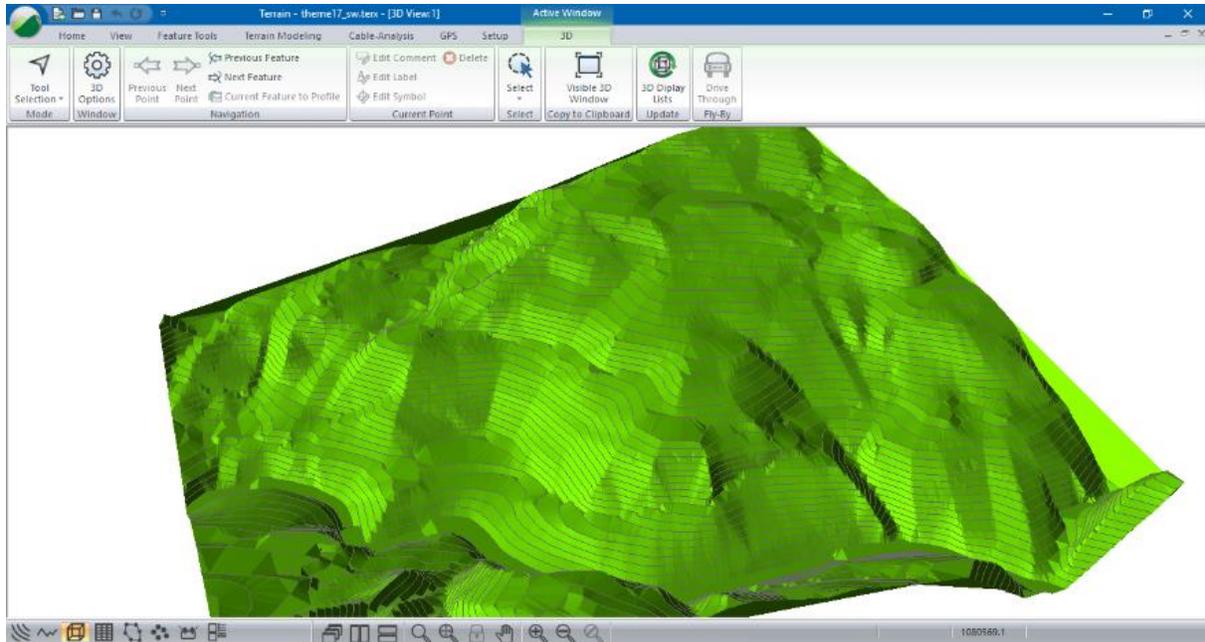


Figure 7-36: 3D View from GIS Contour Data

Zooming and *Panning* allow you to navigate the 3D image. The Zoom Tools toolbar allows you to zoom or pan once after selecting a function. If you have a mouse with a middle button and a roller you can zoom and pan at any time.

13. *View* | *Pan*, or select from the bottom status bar , move your cursor over the 3D window. Click and drag with the left mouse button.

Note: The view moves with your mouse. When you release the mouse the cursor changes back into its previous shape; you must click the *Pan* button again to initiate a second pan.

14. If you have a middle mouse (even if it is a roller), move your cursor over the 3D window, depress and hold the *middle mouse* button and note that the cursor changes to the Pan hand. Continue holding the middle mouse and drag to perform a Pan operation
15. *Left-click* (and hold) in the 3D window, you can now rotate and adjust the position of the 3D window.
16.  *File* | *New*. Do not save changes.

8. Profiles and Draped Features

The Terrain module allows you to display and edit features in profile (or cross section) and to drape features onto a surface. This section will provide you with an overview of these functions.

To follow the examples in this section the *Mapping and Drafting*, *Enhanced Mapping and Drafting*, *Surface Generation and Contouring*, *Profile Window*, and *Profile Drafting and Design* function groups must be enabled. See *Function Groups* in the On-line help for more information. Some examples will have additional requirements.

Creating a Profile

Stream Survey Example

This example demonstrates how to create a profile, set scales and display properties.

A profile is created by assigning a *fence section feature* to a *Profile Window*. The horizontal axis in the *Profile Window* is the distance (horizontal) along the fence section feature. The vertical axis is elevation.

Any feature can be a *fence section* (even closed loops or features which cross themselves). If the fence section consists of two points the profile becomes a standard cross section.

Note: See Getting Started section for file install folders (<Terrain> and <Defaults and Layouts>)

1.  *File* | *Open* <Terrain>\Profile\topograph.terx.

You will see the features shown in the figure below.

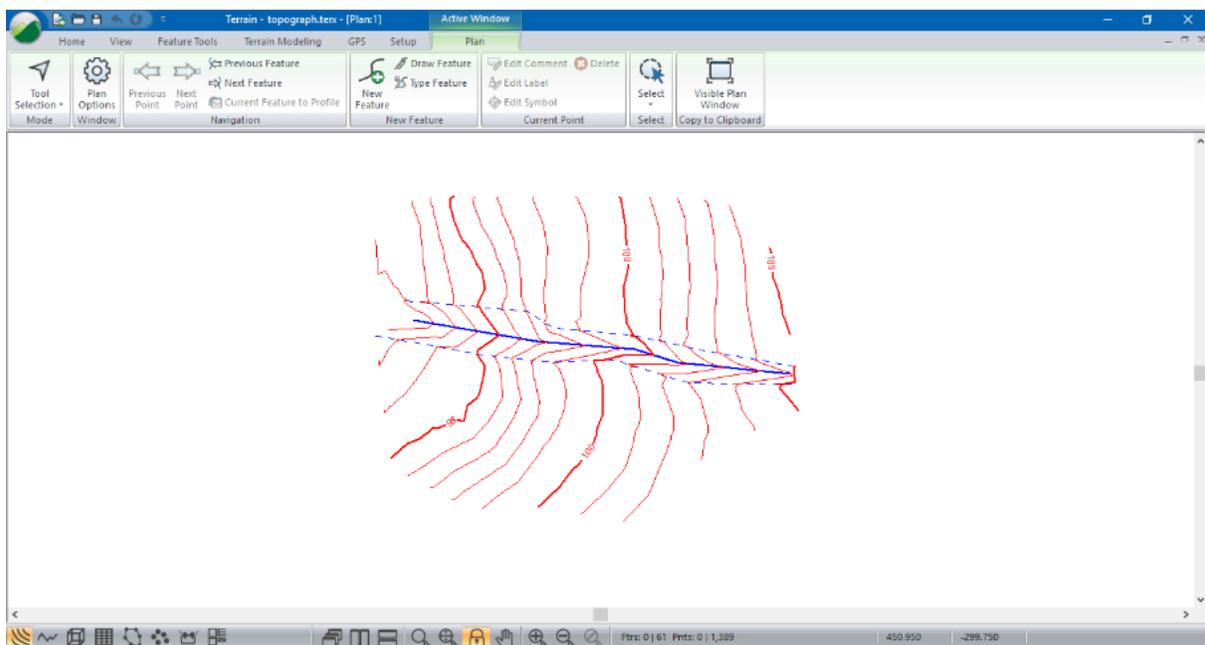


Figure 8-1: Stream Survey (topograph.terx)

The Terrain feature representing the stream is a three-dimensional polyline that is used to define the surface (and indirectly, to define the contours). In the steps below, you will view this feature in a Profile window.

Create a Profile window using the stream feature as you fence section:

2. Select *Stream-2* (the thick blue feature running across the middle) by clicking on it with the selection cursor .
3. *View* | *New Window* | *Profile* from dropdown menu.

The new Profile window uses the current feature as the fence section; the feature name is part of the Profile title bar (figure below).

4. View | Tile Vertically (or press  from the Status Bar) to show Profile and Plan windows side by side (figure below).

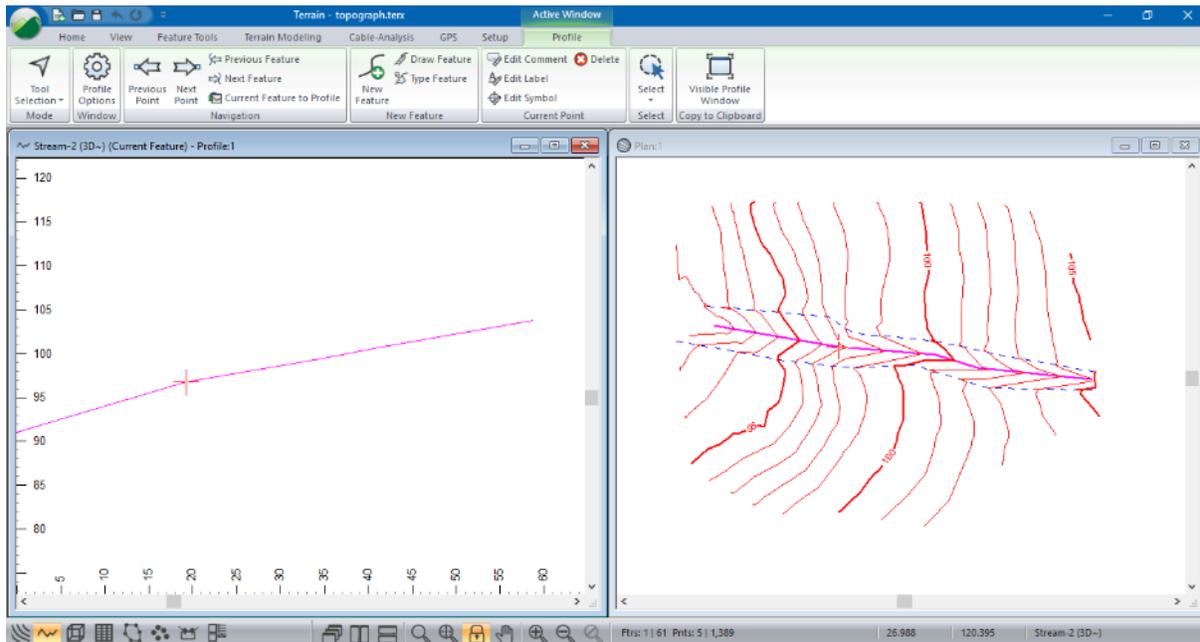


Figure 8-2: Profile with Stream-2 as Fence

Notice that the Plan and Profile windows both show the stream feature as selected (magenta in color) and both windows show the current point as a red cross. Sometimes it is not obvious how the profile view relates to the plan; the current point can help and there is a shadow cursor displayed in the windows that do not contain the mouse.

5. Using key strokes $\langle \text{Ctrl} + N \rangle$ and $\langle \text{Ctrl} + B \rangle$ move the current point forward and backward on the current feature.
6. Move your mouse around in the Plan window (don't click any mouse keys!) and watch the shadow cursor  in the Profile window.
7. Similarly, move your mouse around in the Profile window and watch the shadow cursor  in the Plan window.

The scale in the Profile is automatic, so the feature fills the window. Use the Profile window options to define an explicit scale with distortion:

8. *Right-click* the Profile window and select context menu *Active Window (Profile) Options....*

This will open *Profile Window Options* dialogue box (figure below). Notice the Scale is set to *Auto Scale*.

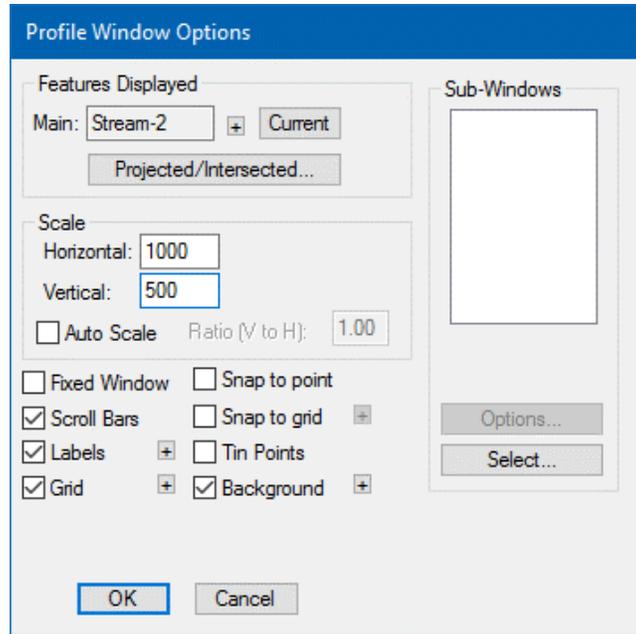


Figure 8-3: Profile Windows Options Dialogue Box

9. Clear the *Auto Scale* check box and change the *Horizontal* and *Vertical* scales to **1000** and **500** respectively.
10. Notice the other controls in the *Profile Windows Options* dialogue box; you can change the fence feature (*Main*) at the top of the dialogue box.
11. Press *OK* to close the dialogue box.

The Profile Window has a new scale with 2:1 vertical distortion. Now we'll display some automatic labels in the Profile.

12. Turn on *Elevations* and *Grades* labels: *Profile* | *Profile Options* to open the *Profile Window Options* dialogue box (Figure 8-3).
13. Push the  button beside *Labels* to open the Profile Window Labels dialogue box.
14. Turn on *Elevations* and *Grades* by *double-clicking* on them in the list-box.
15. Press *OK* twice to return to the main screen.

The screen should now look like the figure below.

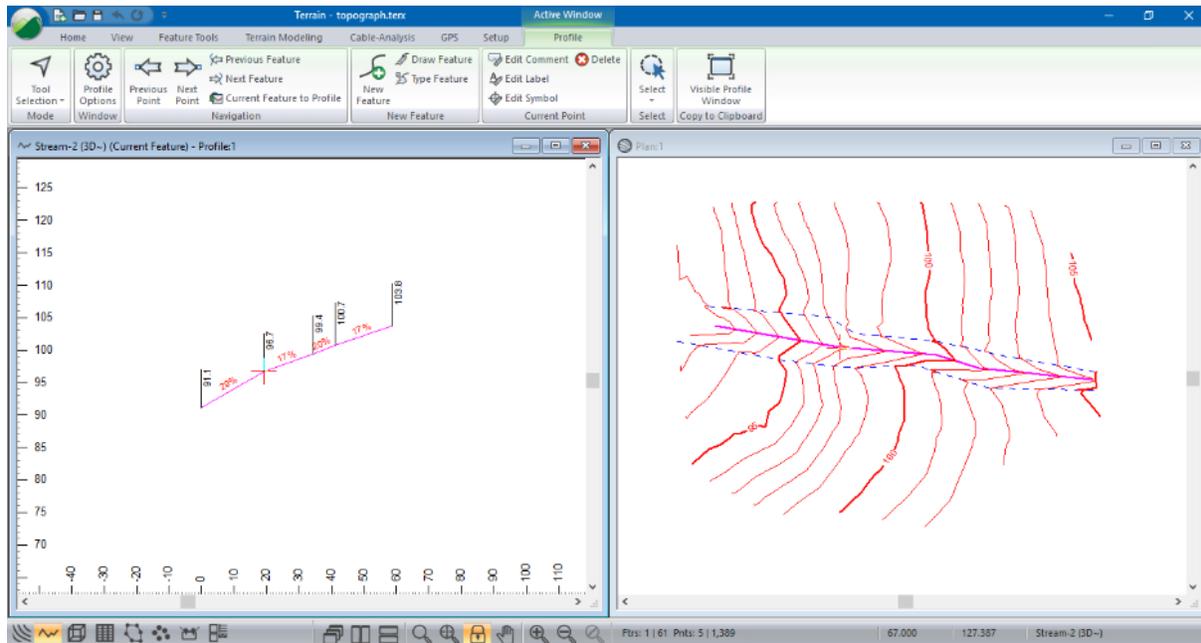


Figure 8-4: Stream Profile with Elevations and Grades

Reverse the direction of the stream feature:

16. Make sure the stream feature is still selected.
17. Feature Tools | Reverse button.
18. If there is a TIN surface in plan-view a dialogue box: *“Warning, existing Terrain Triangles will be cleared”*, press OK.

Notice that the labels update automatically. One should note that this reversal does not change the topographic contours and the natural direction of the stream would be such that the V’s in the contour would point to the downgrade direction of flow of the stream.

19.  File | New. Do not save the changes.

Cross Sections - 2D and 3D Features

Stream Survey Example

A 3D feature has elevation (Z) values explicitly defined at each point (X, Y). A 2D feature, on the other hand, does not contain elevation data.

There two kinds of 3D feature:

- **3D modelled (3D):** Points contain elevation values that are used by Terrain to create the DTM surface (for example ground survey points).
- **3D not modelled (3D):** Elevations are defined but not used in the surface model (for example the bridge deck points).

There are also two kinds of 2D features:

- **2D draped (2D):** The feature points can pick up the elevation of the DTM surface. If there is no surface under a point it will have an undefined elevation (-9999). A draped feature will create a profile (or cross section) of the surface wherever it is placed.
- **2D not draped (2D):** Elevations are always undefined (-9999).

The concept of 2D versus 3D features is simple but has several subtleties with important consequences. The next example investigates the properties of 2D and 3D features.

To follow the example the *Mapping and Drafting*, *Surface Generation and Contouring*, *Profile Window*, and *Profile Drafting and Design* function groups must be enabled.

1.  *File* | *Open*. <Terrain>\Profile**topograph.terx**

This is the same example used in the previous exercise, see first figure in the “creating a profile” exercise above.

2. Select the thick blue feature (*Stream-2*) by clicking on it with the selection cursor .

The name and type of the current selected feature is displayed in the lower right corner of the screen: *Stream-2 (3D~)*. This indicates that the current feature is *3D modelled*; it is incorporated into the surface. The ~ symbol indicates the feature is a breakline. (See Digital Terrain Modeling for information about breaklines.

3. Open the *Feature Property*  Panel.
4. The *Feature Properties* panel allows you to modify all properties (including the feature Name). Notice that both the *Elevations* and *Modelled* checkboxes are selected.

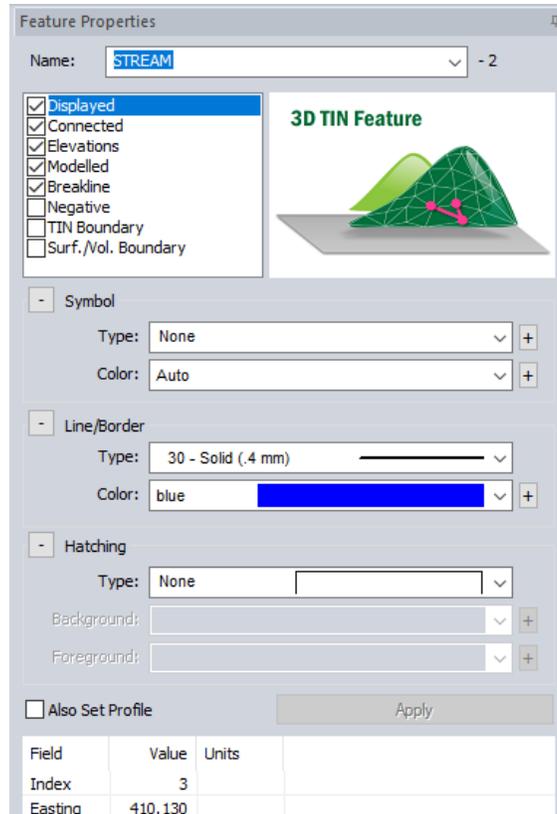


Figure 8-5: Feature Properties Panel

Now we will create a draped feature for cross section display.

Note: A draped feature has only X and Y coordinates the elevation Z of the feature comes from the existing terrain.

5. *Plan* | *New Feature*. This opens a *feature properties* dialogue box.

Note: If there is a feature selected, the feature created with *Right-click* | *New Feature...* will inherit the current feature properties.

6. Change the *Name* to **Cross Section**.
7. Uncheck the *Elevations* check box (this also clears the *Breakline* property).
8. Press the *Create using Mouse* button to close the dialogue box and begin creating points with the mouse.
9. Draw a feature with two points somewhat perpendicular to the stream (similar to that shown in Figure 8-6)
10. Right-click mouse and choose mode *Select with Mouse*.

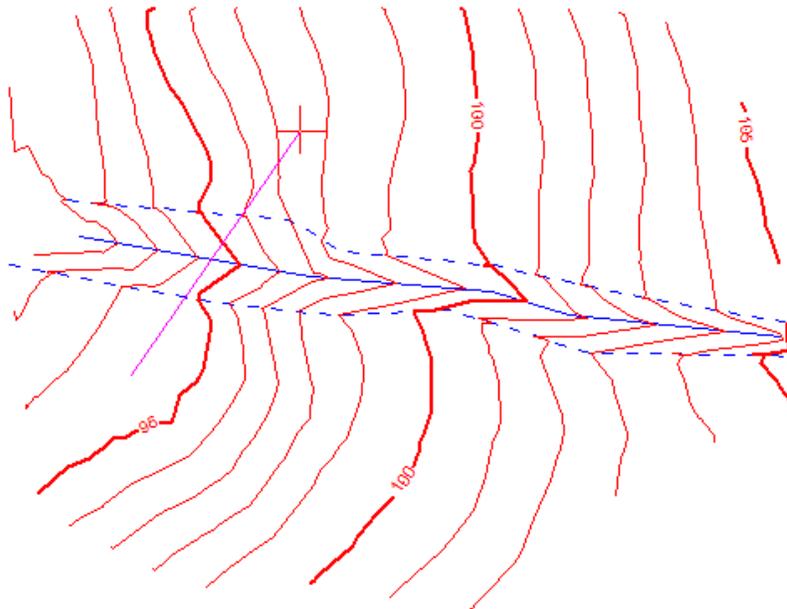


Figure 8-6: 2D Feature Across the Stream

11. With the cross section feature selected, *View | New Window | Profile* button to view a fence section of the feature.

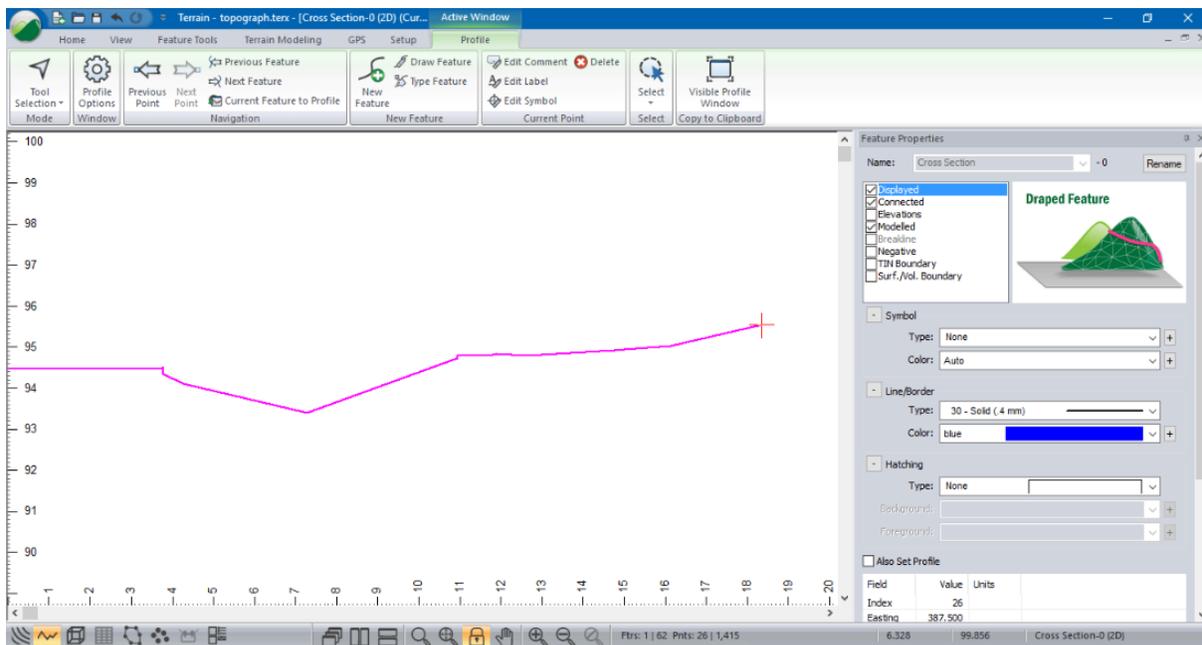


Figure 8-7: 2D Draped Feature Cross Section Depicts the Ground Elevation

Notice that the Profile window shows the ground surface between the two end points. These new points are called *TIN points* and they show the elevation of the underlying DTM. They are automatically inserted in 2D *draped features* wherever a triangle side is crossed.

Note: *TIN points* cannot be edited. They can, however, be labeled if you set the *TIN Points* check box in the Profile window options.

Stream Survey Example Continued

It is possible to drape a feature on multiple DTM surfaces. To do this, one or more Digital Terrain Models (DTM's) must have been created in separate terrain files. These files can be then displayed as *background terrains* in the Plan and Profile Windows.

For this example, two DTM's have been prepared, *overburden.terx* and *overburden1.terx* (separating two overburden layers). These surfaces will be set as background terrains and the profile will be draped on them.

To add background files:

12. *Profile* | *Profile Options* (also available in the right-click context menu) to open the *Profile Window Options* dialogue box.
13. Ensure *Background* is enabled and press the  button to open the *Background Display Files* dialogue box (figure below). Press *Add...* and choose *<Terrain>\Profile\overburden.terx* and press *OK*.
14. Repeat for *<Terrain>\Profile\overburden1.terx*.

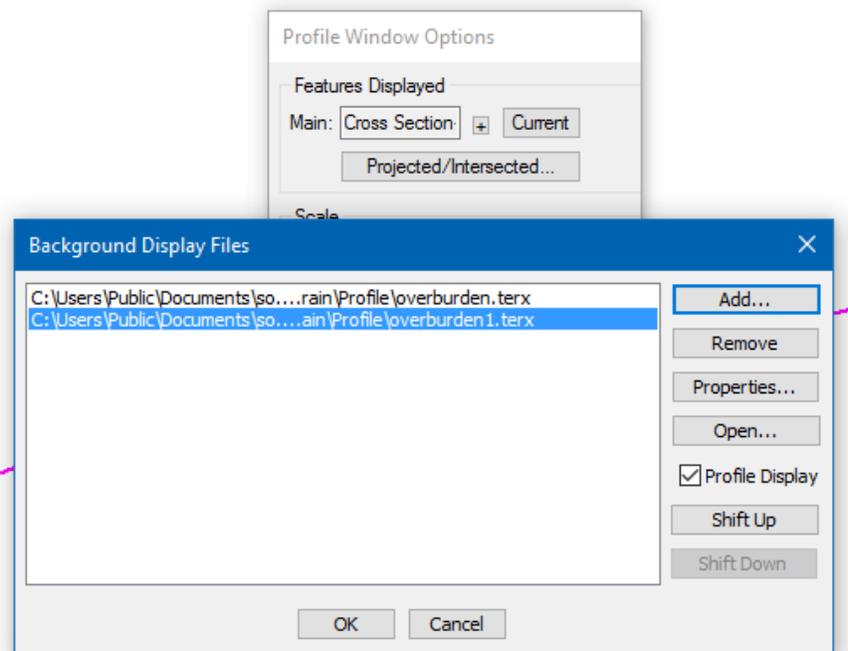


Figure 8-8: Adding Background Files

15. You should still be in the *Background Display Files* dialogue box. The next two steps set the color and hatching for each layer.
16. Select file *overburden.terx* and press the *Properties...* button.

17. Within the *Background Display Properties* dialogue, select *Profile Feature Format* button and set the color to *green* and hatch type to *dots 2* (Figure 8-9).

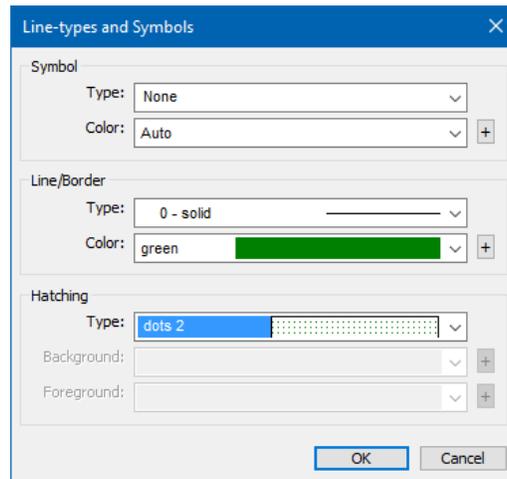


Figure 8-9: Configuring Background Surface Format.

18. Press *OK* twice to return to the *Background Display Files* dialogue.
19. Repeat for *overburden1.terx* (choose your own color and hatch type).
20. Press *OK* until you have returned to the main screen.

Your Profile Window should now appear similar to Figure 8-10.

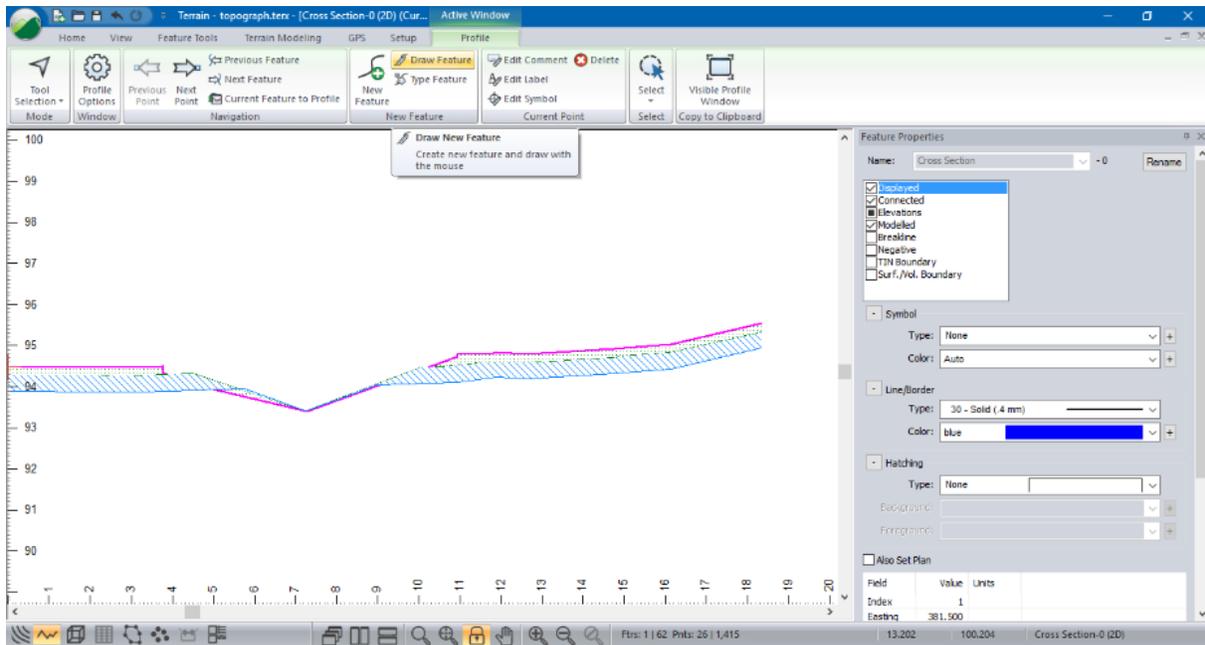


Figure 8-10: Profile Window with Multiple Layers

21. *File | New*. Do not save the changes.

Modifying Features in the Profile Window

Stream Survey Example

To follow this example, have the *Mapping and Drafting*, *Surface Generation and Contouring*, *Profile Window* and *Profile Window Drafting and Design* function groups enabled.

1.  *File* | *New*. <Terrain>\Profile**topograph.tex**. This is the same example used in the previous exercise, refer to figure at start of the previous section.
2. Select the thick blue feature (Stream-2) by clicking on it with the selection cursor .
3. *View* | *New Window* | *Profile* from dropdown list to view this feature in a Profile window.

Note: Editing a feature with *Auto Scale* set is confusing, because after each edit the screen redraws at a new scale.

Turn off auto-scaling by doing either of the following:

4. *Profile* tab | *Window* group | *Profile Options* button. Opens the *Profile Window Options* dialogue box. *De-select Auto Scale* and set the horizontal and vertical scales. Press *OK*.
5. Press the zoom button ; you will be prompted “OK to turn off auto-scale?” Choose *OK*.
6. *Zoom* and *scroll* to center the stream profile.
7. *Right-click* in the Profile window and choose mode *Edit/Insert Points with mouse* .

Add a point at the end of the feature:

8. *Click* to the right of the last point on right; respond *OK* to the warning.
9. *Move* your mouse around observing the captured point and connecting segment.
10. *Click* a second time to anchor the new point.

Edit an existing point:

11. *Move* your mouse over one of the vertex points in the feature, note that the mouse changes to the edit cursor . (The first point of a *fence* feature, however, is not editable.)
12. *Click* on a vertex  and capture the point.
13. *Move* your mouse around observing the captured point and connecting segments.
14. *Left-click* again to anchor the point in a new position.
15. *View* | *Tile Vertically* button to show Profile and Plan windows side by side as in the previous exercise.
16. Because you have just modified one of the features in the model, your contours will be out of date. *Terrain Modelling* | *Generate TIN*.
17. Press *OK* to re-calculate with the previous settings.
18.  *File* | *New*. Do not save the changes.

Profile Window Design and Drafting: Culvert Design

Culvert Design Example

This example illustrates profile window design and display using multiple features and multiple Profile Windows. The concept of *projected* and *intersected* features is also covered.

1.  **File** | **Open** <Terrain>\Profile\topograph.terx. Using the Selection cursor  select the thick blue feature running down the center of the creek (STREAM-2) as shown in the figure below. It will turn magenta when selected.

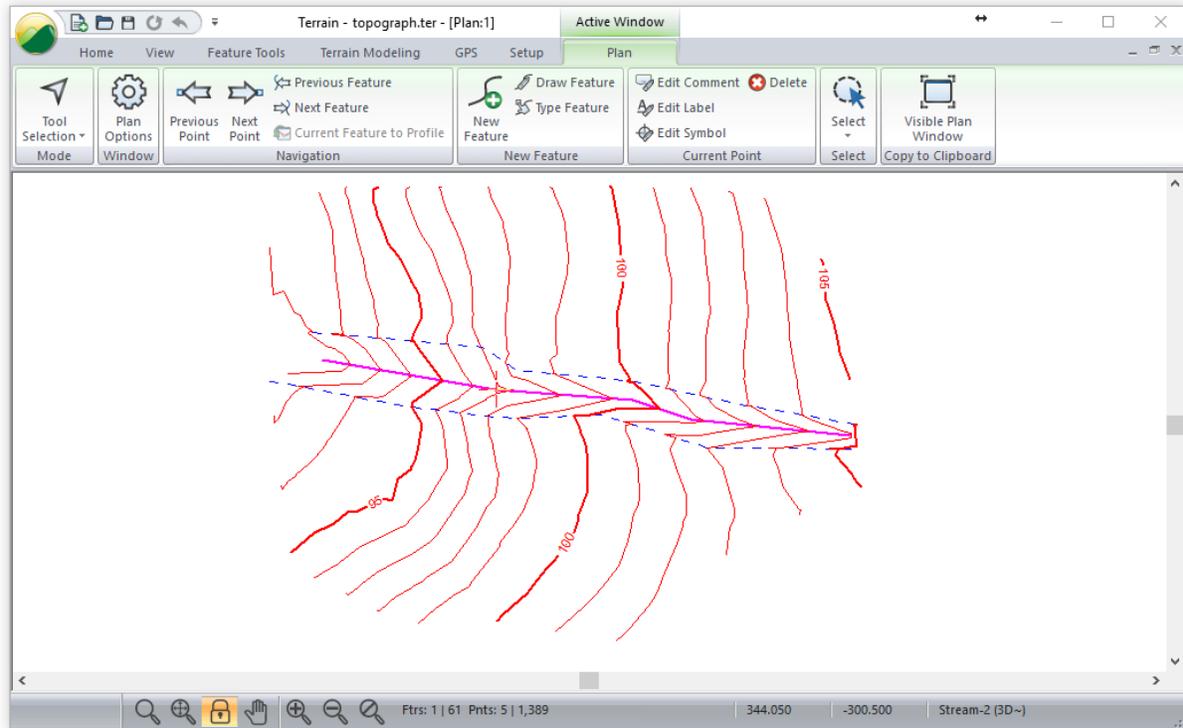


Figure 8-11: topograph.terx In Plan View

2. **View** | **New Window** | **Profile** from dropdown list. This opens a Profile Window with the feature name, STREAM-2.

Note: The Status Bar:

You can open or re-activate windows at any time using the *Status* Bar navigation buttons. To ensure it is displayed, right-click in the *Status* bar and make sure *Navigation* is selected.

3. Re-activate the Plan Window, by pressing .
4. Using the Selection cursor  in the Plan Window, select the upper stream bank (the upper blue dashed line) feature (STREAM-0). Switch to the Profile Window. Note the feature in the Profile Window remains the same (STREAM-2) but it is no longer the current feature (no longer highlighted in magenta).
5. **View** | **New Window** | **Profile**. A new Profile Window will open displaying STREAM-0.
6. **Current Feature to Profile** changes the Profile Window to display the current feature (this function changes the active Profile Window).

7. Switch back to the Plan Window. *Left-click* in an empty area to deselect all features.

Note: When a new feature is created it inherits the formatting (line-type and color) of the currently selected feature. By deselecting all features, the new feature will not inherit any formatting.

The next several steps involve entering the coordinates of the road centerline as it crosses the stream and then profiling the road centerline.

8. *Plan | New Feature*. Change the feature name to **ROADCL** and make sure **Displayed**, **Connected**, and **Modelled** are on – this creates a Draped Feature (as shown in the property image to the right of the options within the dialogue). All other properties should be off. Press the *Keyboard* button.
9. Enter the following X, Y coordinates:

399.2	<Tab>	-276.8	<Enter>
399.4	<Tab>	-288.7	<Enter>
399.4	<Tab>	-296.0	<Enter>
398.8	<Tab>	-310.6	<Tab>

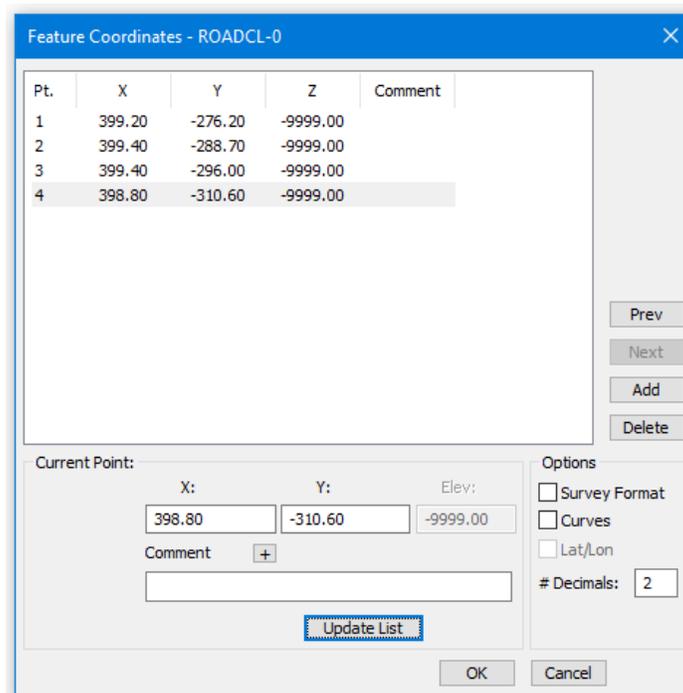


Figure 8-12: Feature Coordinates Dialogue Box

10. Do not press <Enter> after the last coordinate (if you accidentally do, use the *Delete* button to remove the last 0,0 coordinate).
11. Press the *Update List* button to accept the last coordinate.
12. Check the above coordinates if satisfied they are correct, press *OK*. Notice the Plan Window now displays the new **ROADCL** feature.
13. With the feature selected, select menu *View | New Window | Profile*. Refer to Figure 8-13.

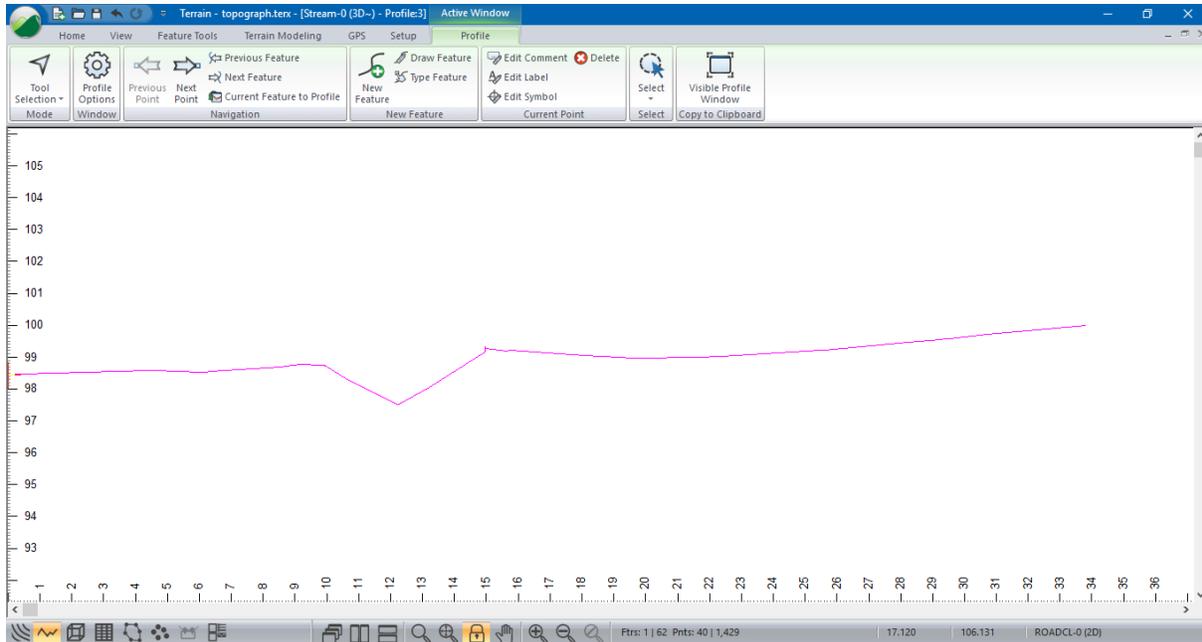


Figure 8-13: ROADCL Profile

14. *Profile | Window | Profile Options*. Re-ensure *Auto-Scale* is checked in the *Profile Window display options* will re-scale the view so that the profile line will fit to the extents of the profile view.

15. Set the *Ratio (V to H)* to **10.0**. Press *OK* to close the dialogue.

16. To create a cross section parallel to the creek, select *Profile | New Feature* button. Change the feature name to **SECTION**. Make sure *Displayed*, *Connected*, and *Modeled* are on. All other properties should be off. Press the *Keyboard* button and enter the following X, Y coordinates:

382.4 <Tab> **-287.1** <Enter>
421.7 <Tab> **-291.7** <Tab>

17. Do **not** press <Enter> after the last coordinate. Press the *Update List* button. Press *OK* provided the *Feature Coordinates - Section -0* dialogue box looks like the Figure 8-14.

Pt.	X	Y	Z	Comment
1	382.40	-287.10	99.99	
2	421.70	-291.70	-9999.00	

Prev
Next
Add
Delete

Figure 8-14: Feature Coordinates - Section-0 Dialogue Box

18. View | New Window | Profile. A Profile Window appears with the feature name, SECTION-0, in the bottom status bar.
19. Notice there is another feature in the Profile Window. This is feature STREAM-2 projected onto the SECTION-0 profile. See Figure 8-15.

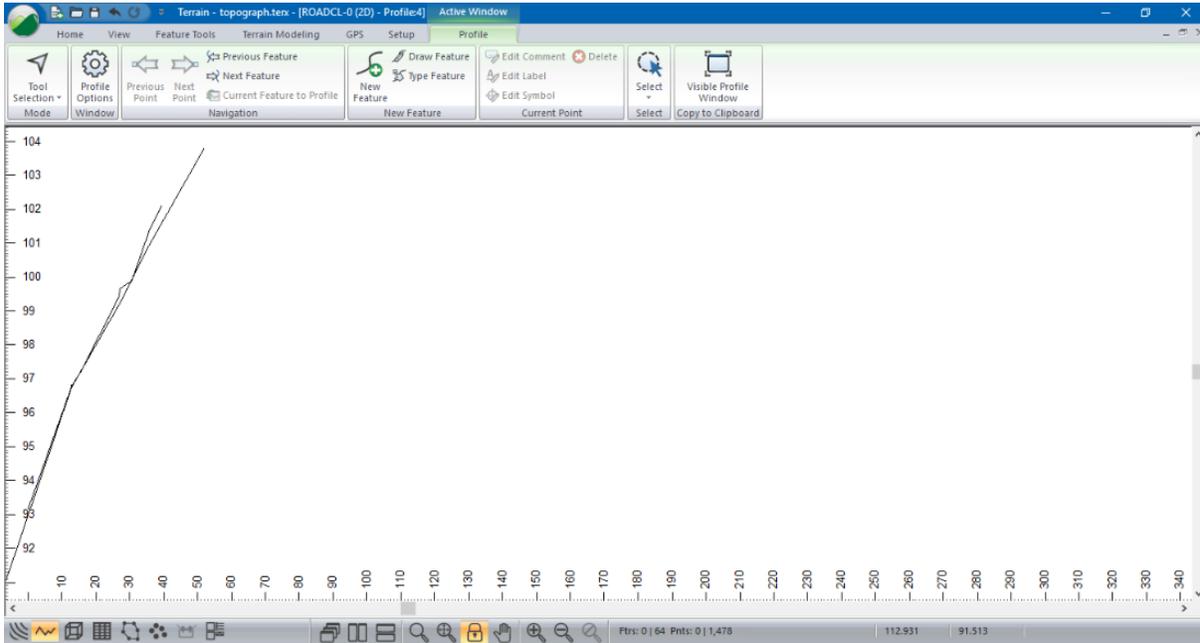


Figure 8-15: Screen Shot of STREAM-2 and SECTION-0 Profile

Intersected and Projected Features

Each Profile Window is based on a feature called the *Fence Section Feature*. It is possible to display additional *projected* or *intersected* features in a Profile Window.

Intersected features penetrate the vertical plane of the profile. These intersection points can be displayed with a symbol of your choice.

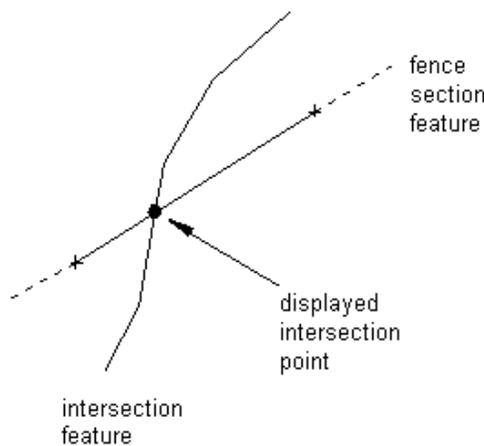


Figure 8-16: Intersected Feature (Plan View)

Projected features are displayed on the profile by projecting perpendicularly onto the fence section.

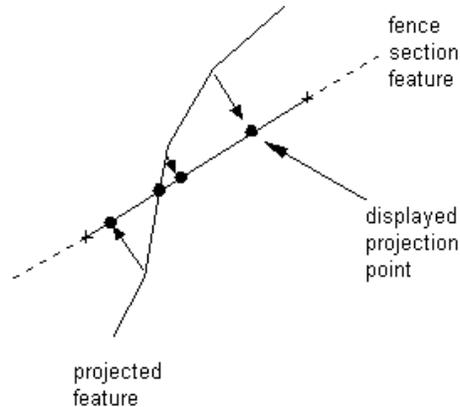


Figure 8-17: Projected Feature (Plan View)

Projected features are often on (or near) the fence section. If you draw features (other than the fence section) in a Profile Window they are automatically added to that window's list of Projected features.

A user configurable list of intersected and projected features is stored with each profile. This list can be accessed from the *Active Window (Profile) Options* dialogue box.

20. To display intersection of ROADCL on the creek section (SECTION-0):
 - a. Select Profile Window SECTION-0. With the cursor positioned in the Profile window, *right-click* and select *Active Window (Profile) Options*.
 - b. Click on the *Projected/ Intersected* button.
 - c. In the *Intersected Features* group box, press the *Select* button. Find and *Select* ROADCL-0. (figure below) Press *OK* until you have returned to the main screen.

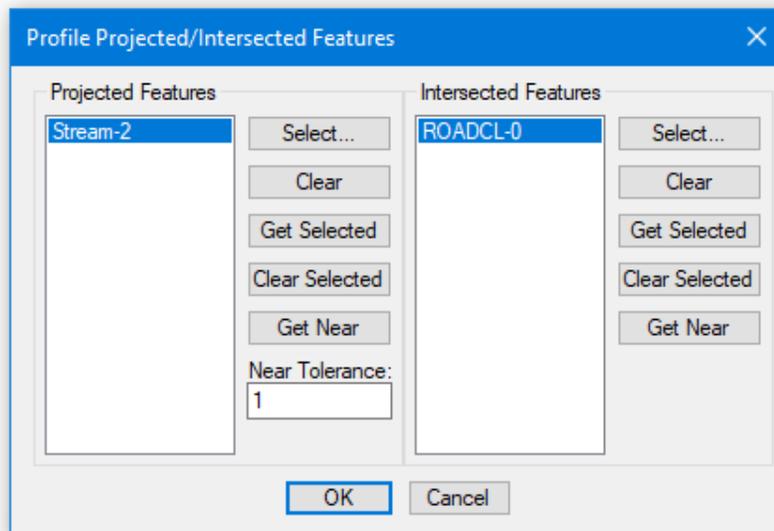


Figure 8-18: Profile Projected / Intersected Features

- d. *Home | Select | By Name* from dropdown list. Press the *Un-select All* button and select the ROADCL-0 from the list with a *double-click*. Press *OK* to return to the main screen.
- e. *Right-click* in the Profile Window, and select *Modify Selected Feature(s) | Line-types, Symbols*. Select symbol *Triangle (Large)*. Press *OK*. A large triangle is now in the center of the creek profile indicating the position of the road centerline feature. Use *Zoom extents* or *Pan* the view if the road centerline is not visible.

Note the elevation of the road centerline lies on the streambed. This is because the road centerline feature has been 'draped' over the TIN model.

Design in the Profile Window

21. To position the culvert pipe in the stream, activate the road centerline profile ROADCL-0. *Click* in the white space and press the *Profile* button  until the ROADCL-0 title appears in the Profile Window title bar.
22. Position the cursor in the Profile Window, *right-click* and select *Active Window (Profile) Options*. *Deselect* the *Autoscale* checkbox and set both horizontal and vertical scales to **200**.
23. *Select Snap to Grid* and press the *plus* button  to set the grid space (*SpaceX* and *SpaceY*) to **1.8** m (to create an 1800 mm diameter pipe). Press *OK*. Return to the main screen.
24. *Profile | Draw Feature*. Draw a horizontal line in the Profile window one grid space wide (1.8 m). Each point requires two left-clicks.
25. With the feature you drew still selected. *Feature Tools | Shape*. Choose *Diameter to circle* from the list box. Press *OK*.
26. *Feature Tools | Feature Properties*. Change the name to PIPE. Press *OK*.
27. Press *<Ctrl + M>* key to enter *move/size mode* or press the *Move/Size*  button. Move the cursor inside the circle. Note it changes shape to a four-headed arrow.
28. *Left-click* and drag the circle to a reasonable position in the creek. Release the left mouse and *right-click*. Select menu *Select with mouse* to exit *move/size mode*.

At this point your Profile Window should look like the screen capture in the figure below:

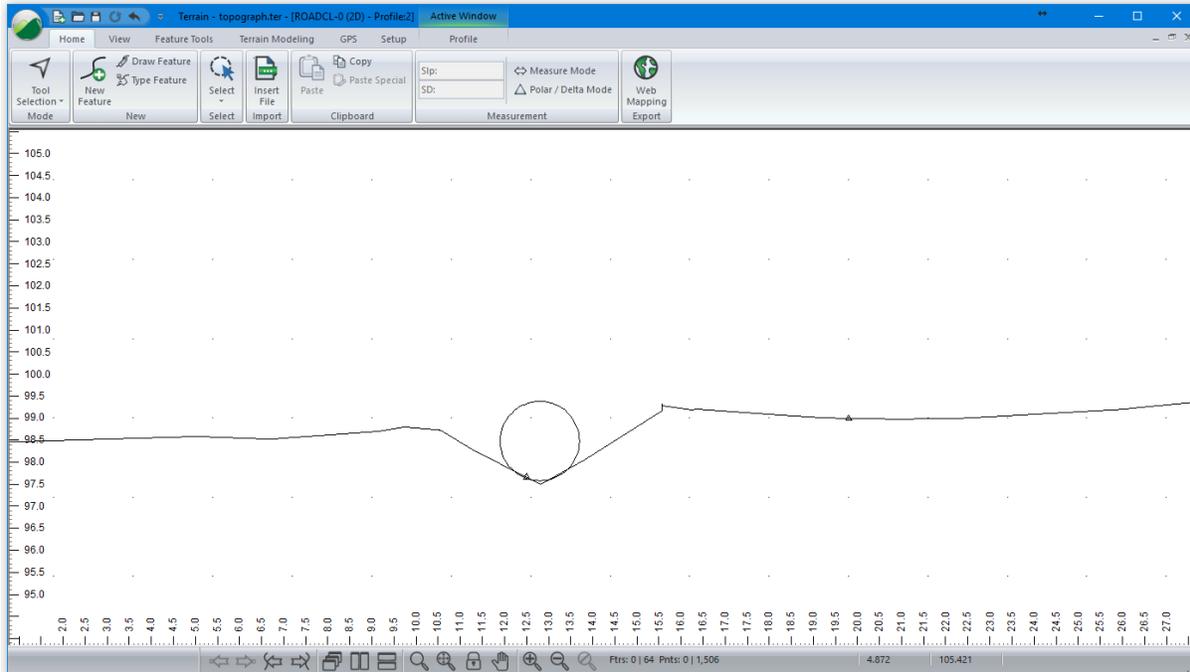


Figure 8-19: 1800 mm Pipe Displayed in Road Centerline Profile

29. Click on the *Profile Window* button  until SECTION-0 is displayed.
30. *Profile | Profile Options*. First, *de-select* the *Autoscale* checkbox and set both horizontal and vertical scales to **200**.
31. Click on the *Projected Intersected...* button. In the *Projected Features* group box, press the *Clear* button and then the *Select...* button. Scroll down the list and double-click on *PIPE-0*. Press *OK* three times to return to the main screen.
32. You should now be able to see the projection of the culvert on the stream cross section. Use *Zoom extents* or *Pan* the view if the cross section is not visible. The projected pipe is displayed as a very thin oval shape (if the cross section was exactly perpendicular to the centerline it would be displayed as a vertical line). This should appear similar to the figure below:

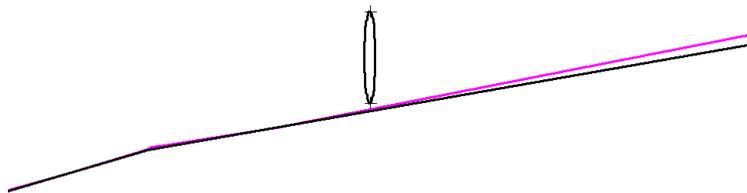


Figure 8-20: Culvert Displayed in SECTION-0 Profile

The next step is to draw a road template on the cross section:

33. Press the *Profile | New Feature* button. This will create a new feature with *Displayed, Connected, Elevation* and *Modeled* turned on. Select *Create using Mouse*.
34. *Left-click* once in the Profile window. Before continuing to draw our new feature, we will add labels to assist us.
35. With the cursor positioned in the Profile window. *Right-click* and select menu *Modify Selected Feature(s) | Labels*. Turn on the display of the *dLength* [length change] and *Grades* labels by finding them in the list box and *double-clicking*. Make sure all other labels are turned off. Press *OK* when they are selected.

The *dLength* label will display the 3D length of a segment. *Grades* label will display the slope % (rise/run *100%).

36. With the length and grades displayed, draw a road prism for a 10m wide road similar to the one shown below.

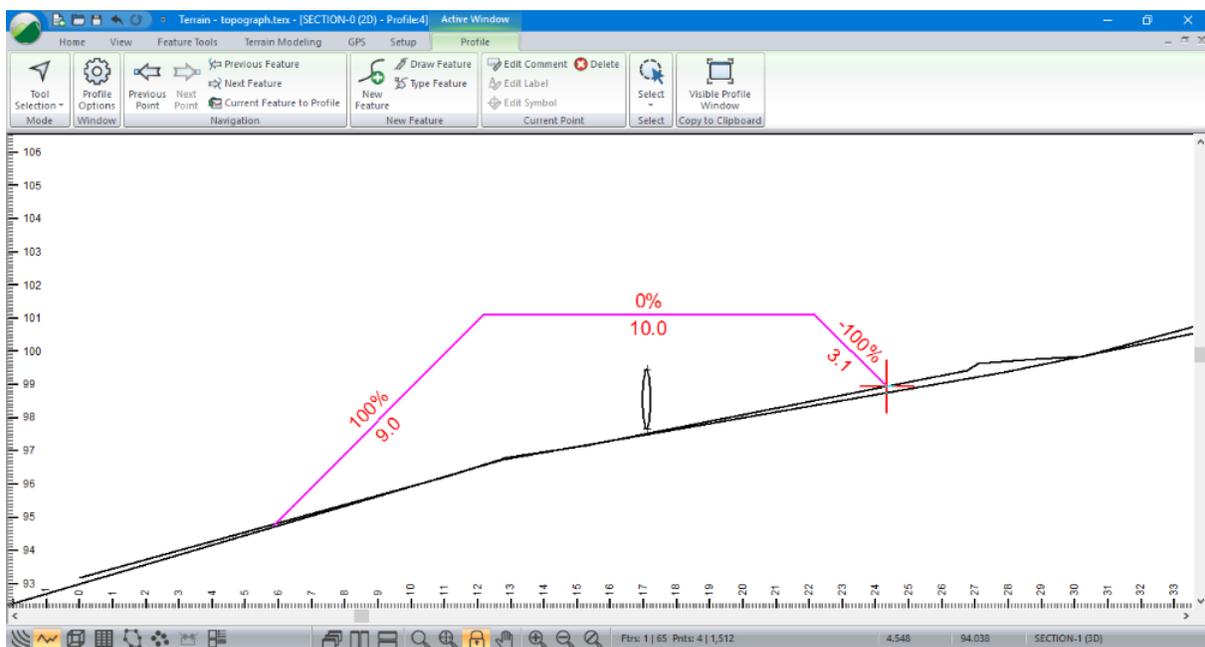


Figure 8-21: Cross Section with Road Template

37. Repeat the process to draw the top of the pipe. Press the *Profile | Draw Feature* button... | *Left-click* once over the Profile Window.
38. Keeping the cursor positioned in the Profile Window *Right mouse click* and select menu *Modify Selected Feature(s) | Labels*. In the list box find and enable the display of the *dLength* and *Grades* labels. Press *OK*.
39. Draw the top of the pipe line from one side of the road to the other as shown in below.

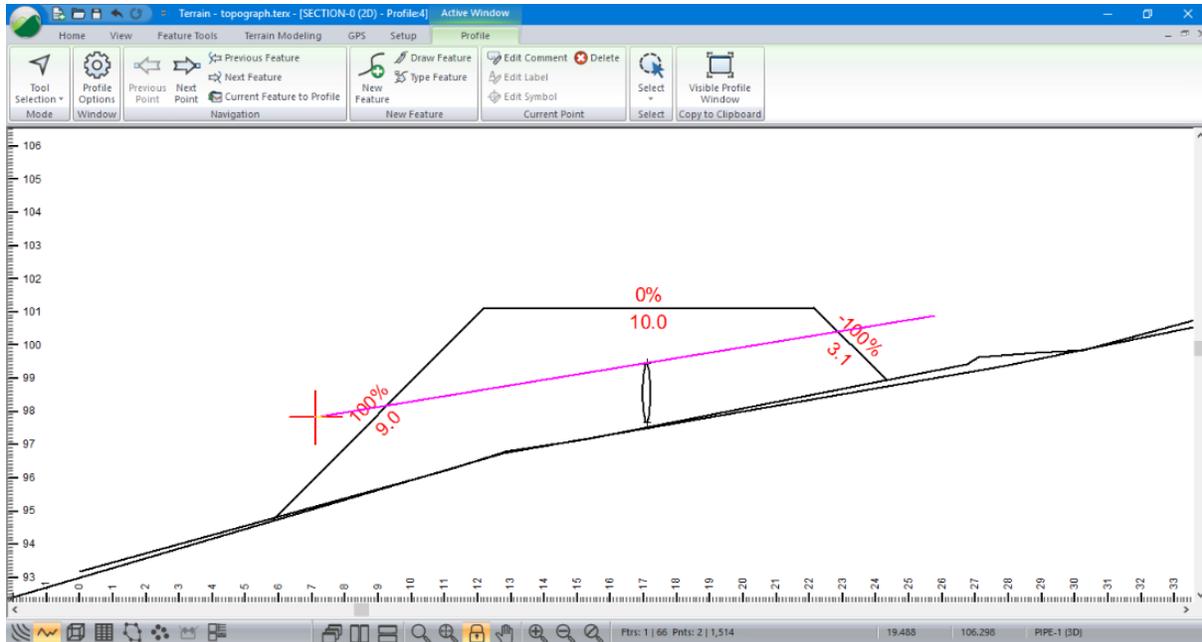


Figure 8-22: Cross Section with Preliminary Culvert Position

40. Using the selection cursor , select the top of the pipe feature. *Feature Tools | Duplicate* or press the <Ctrl + D> to duplicate it. Move the cursor inside the new feature. *Click and drag* to move it to the bottom of the circular pipe feature.
41. Using the selection cursor , select the circular pipe feature in the center of the Profile Window. *Feature Tools | Duplicate*. Move the cursor inside the new feature. *Click and drag* to move it to a new position at the end of the pipe on the right side. Repeat this procedure for the left. The result will be as shown in below.

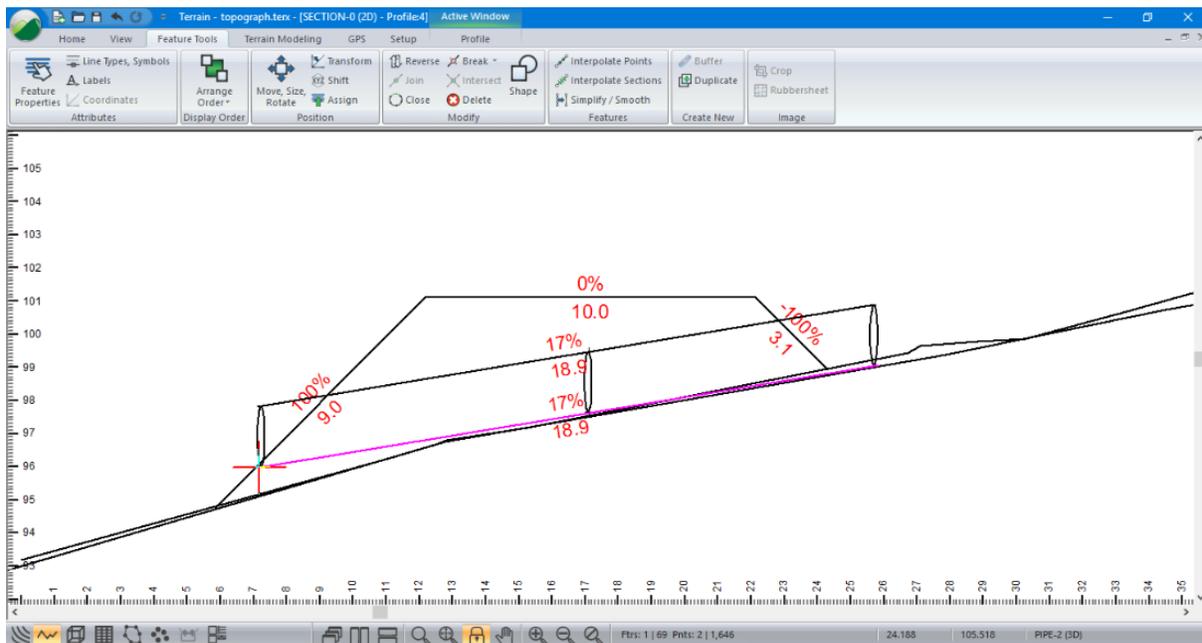


Figure 8-23: Cross Section with Culvert Position

42. Changing line-types makes it easier to identify the culvert features in the Plan Window.
43. Open the *Feature Properties* panel . Using the selection cursor  depress <shift>, select the top of the pipe, the bottom of the pipe, and the circular elements. Under *Line-types*, *Symbols*: Choose *Line-type 5-thick (medium)* and check *Also Set Plan* indicating that changes will also affect the Plan Window. Press *Apply*.
44. Activate the Plan Window by pressing the *Plan* button . Your screen should be similar to the figure below.

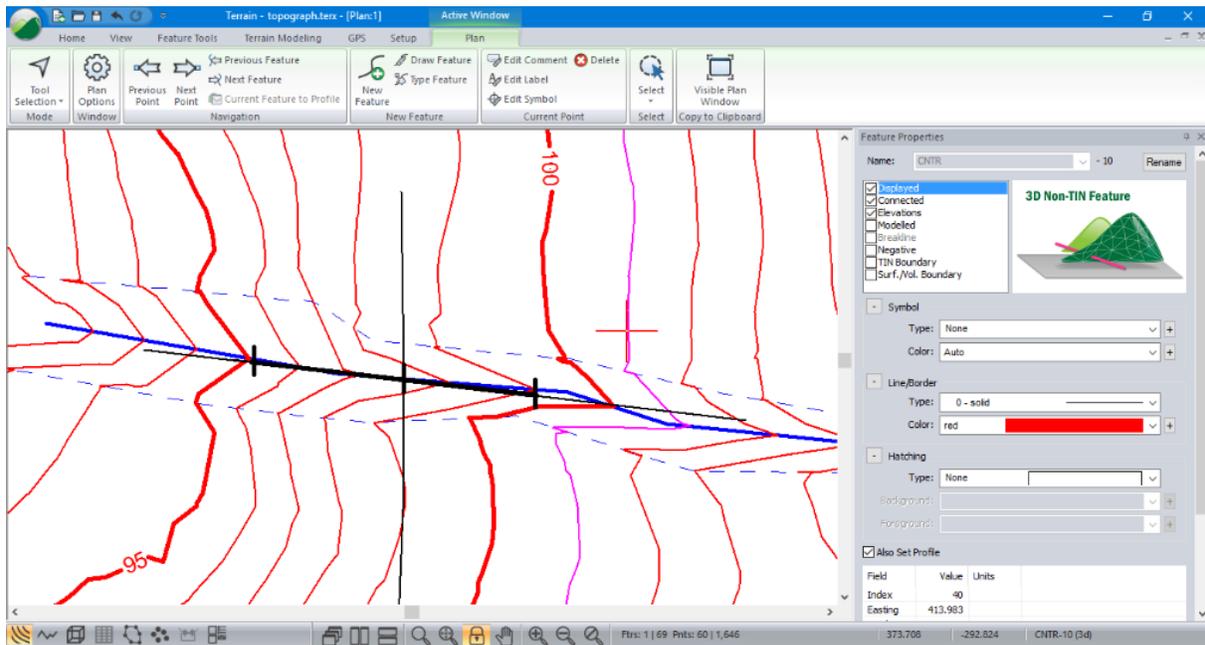


Figure 8-24: Plan Window with Culvert Position

45.  *File* | *New*. Do not save the changes.

9. Grading

The Grading functions in Terrain are useful for designing polygonal shaped objects such as pits, ponds and pads. It can also be used to design linear objects such as roads, channels and walls etc. although the RoadEng Location module is better suited for this purpose. To illustrate the concepts of grading we will design a platform.

Grading Concepts

Platform Example

In this example, a platform outline (polygon) will be created using the mouse. We will then iteratively adjust the elevation of the pad to balance the cut and fill quantities.

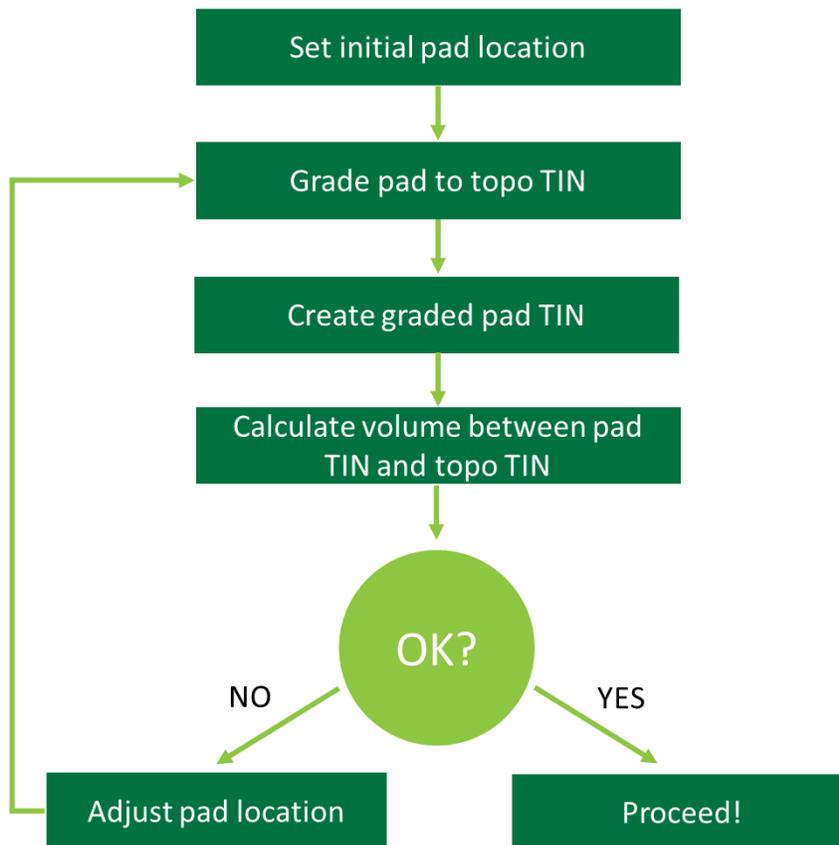


Figure 9-1: Procedure for Balancing Cut and Fill

Platform Design

The following steps will demonstrate how to set the initial pad location by entering its coordinates. The initial pad location could also be established by drawing it with the mouse or importing it from an external file (shape, dxf etc.).

Before the pad is created we will place the topo contours (“*OriginalGroundGrading.terx*”) in the background for reference.

1. In a blank Terrain file, bring in the original ground terrain file in the background: *Plan | Plan Options | Background tab | Add...* button and select <Terrain>\Grading\OriginalGroundGrading.terx. Press *Open*.
2. Use *Zoom Extents (View | Zoom Extents)* or *Pan* the view if the background is not visible.

Now, we will draw in the pad for grading:

3. *Plan | New Feature*, the *Feature Properties* dialogue box will appear. Type in the name “Platform” and keep the default properties (*displayed, connected, elevations, modeled*) as shown in the figure below.

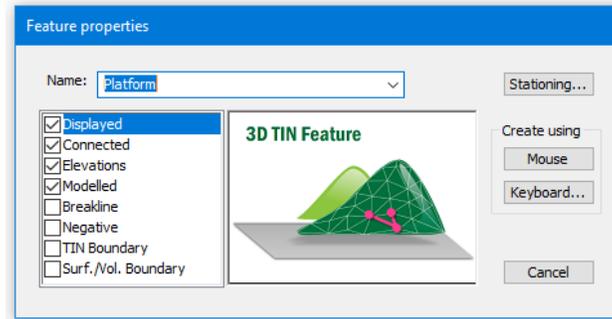


Figure 9-2: Feature Properties Dialogue

4. Create a rectangular platform by adding coordinates: Press the *Keyboard...* button, and the *Feature Coordinates* dialogue box for the new feature called “Platform-0” will appear.
5. Add the coordinates found in the figure below. Make sure not to press <Enter> after the last entry, instead press *Update List*. With *Survey Format* option *unchecked*, press *OK*.

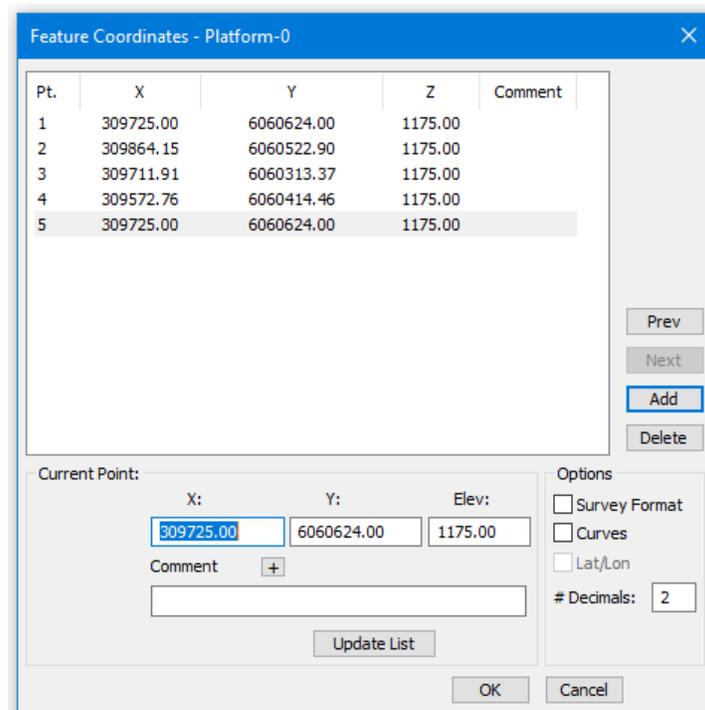


Figure 9-3: Feature Coordinates Dialogue

This should result in a rectangle the same as the figure below:

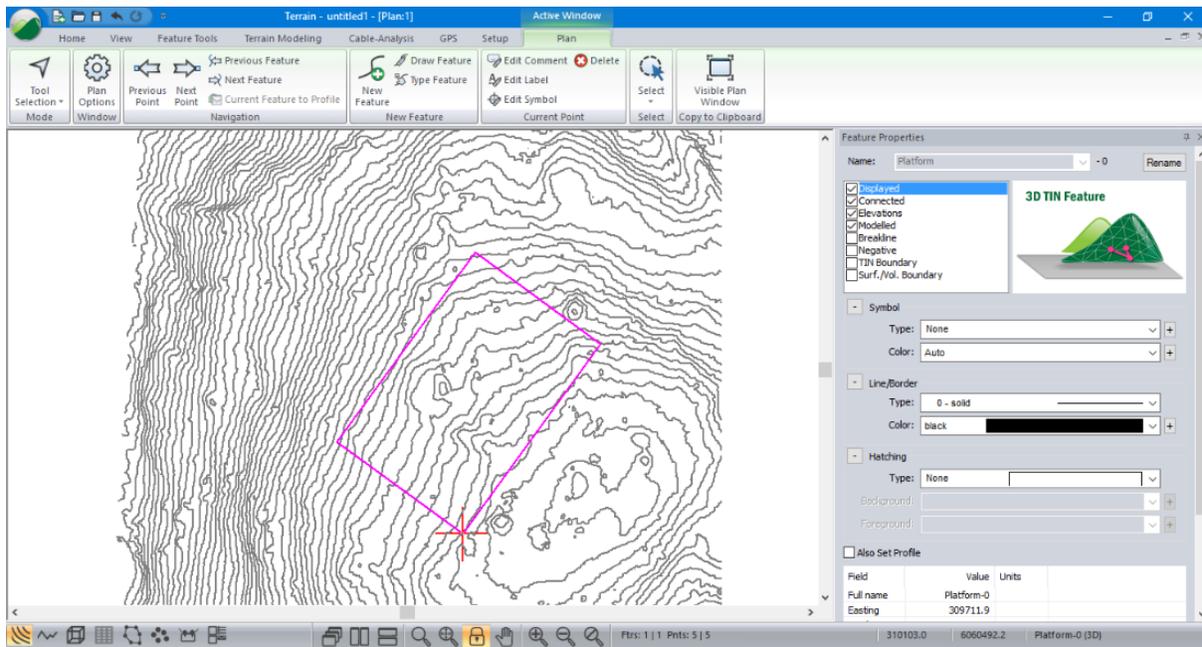


Figure 9-4: Initial Pad Location Overlaid on Topo Contours

Grading the Platform

The Grading option projects a feature at user specified cut/fill angles to a 'Target surface'. Slope lines are created at each feature point and at user specified interpolated points. The daylight line is also calculated as shown in the figure below.

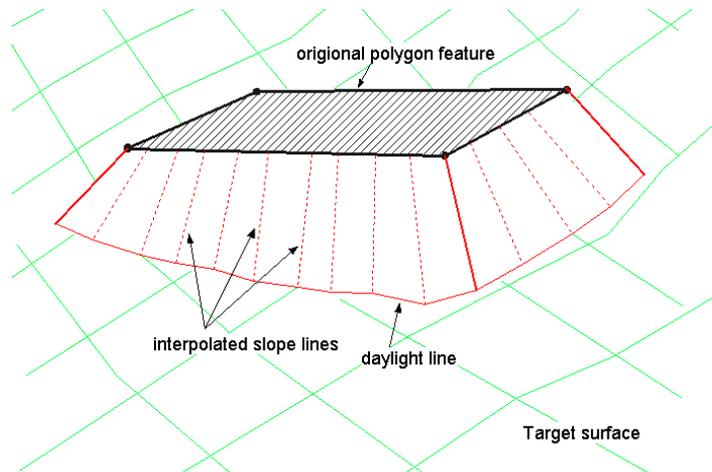


Figure 9-5: Grading a Polygon to a Target Surface

In this platform design example, we will assume the platform is in a good plan location (if this is not the case, the pad can be easily dragged to a new location using *Ctrl + M*). We will grade the platform top to a topo surface.

6. With the rectangle selected. Open the *Grading* Dialogue box: *Terrain Modeling | Grading*.

7. Within the *Grading Dialogue* box press the *Browse...* button and select file <Terrain>\Grading**OriginalGroundGrading.ter**. Press *Open*. Change the other fields to match those shown in the figure below. Press *OK*.
8. Still within the *Grading Dialogue* box, check boxes *Interpolate*; *Spacing: 5.0*; Set breakline property. Check all the boxes under *TIN / Volumes: Set Daylight to TIN boundary; Calculate TIN; Calculate Volumes*.

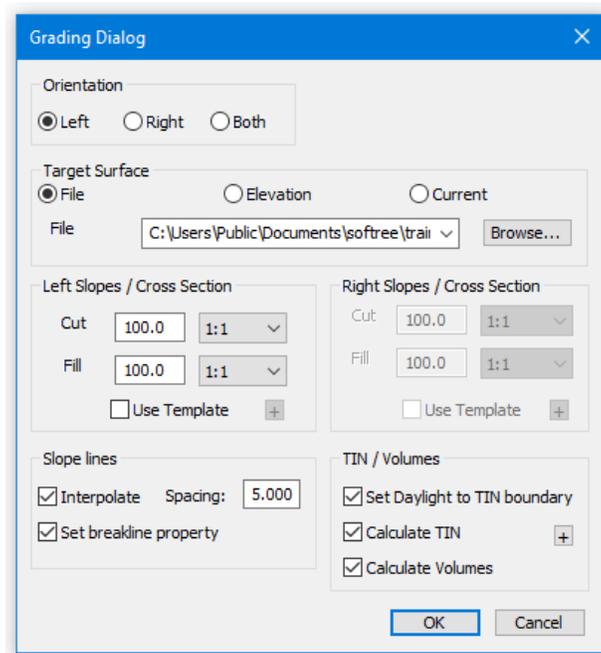


Figure 9-6: Grading Dialogue Box

The *Grading Dialogue* box controls how the slope is projected (*Orientation*), the elevation or surface (*Target Surface*) the *Slopes* from the pad to the surface, and the spacing (*Slope line interpolation spacing*) of the projected slope lines. The dialogue also allows you to calculate the TIN model as well as volumes after the grading calculation operation is complete.

After a few seconds, the grading calculation will complete and the *Volume / Surf. Properties Reporting* dialogue box will appear. Notice that there is a considerable amount of fill indicated in the *Volume / Surf. Properties Reporting* dialogue box.

9. Press *Close*.

Note: Ensure that the *OriginalGroundGrading.ter* file is designated as “Original” and the *Untitled.ter* file is designated as “Final” otherwise the cut and fills will be reversed. (Refer to the figure below).

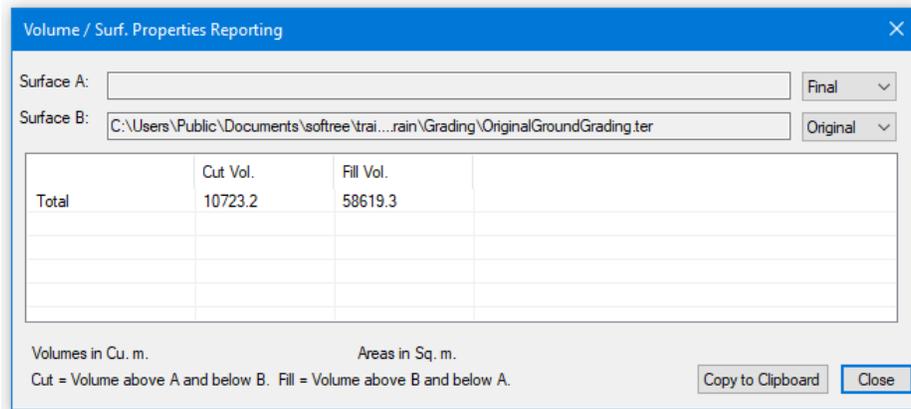


Figure 9-7: Volume/Surf. Properties Reporting Dialog Box

To balance the cut and fills, let's try dropping the pad by 1-meter increments.

10. First, select the pad if it is not already selected. Select the pad top by using the selection cursor . It is not necessary to select the slope and daylight lines. (Refer to the Figure 9-8)

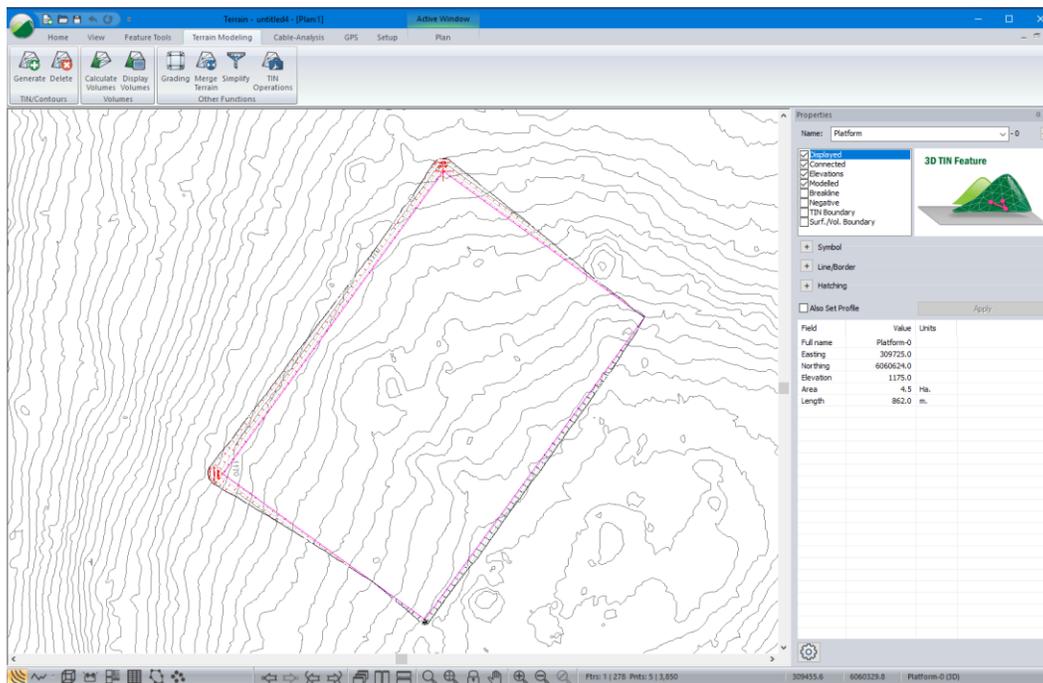


Figure 9-8: Screen Shot with Pad Top Selected

11. *Feature Tools | Transform*. You may get a Terrain warning dialog box as shown in the figure below. Press OK. Select the *Rotate/Translate/Scale* tab.

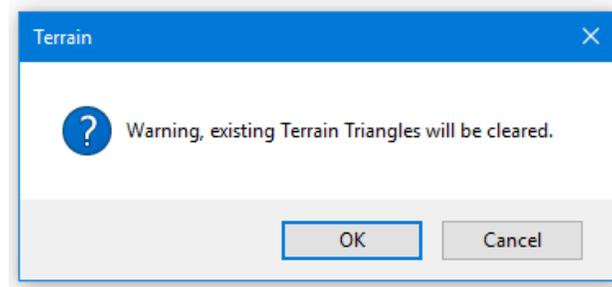


Figure 9-9: Terrain Warning Dialogue Box

12. Uncheck *Disable (no coordinate adjustment)* box. Change the *Shift Offset Z* to -1 as shown below. Press *OK*.

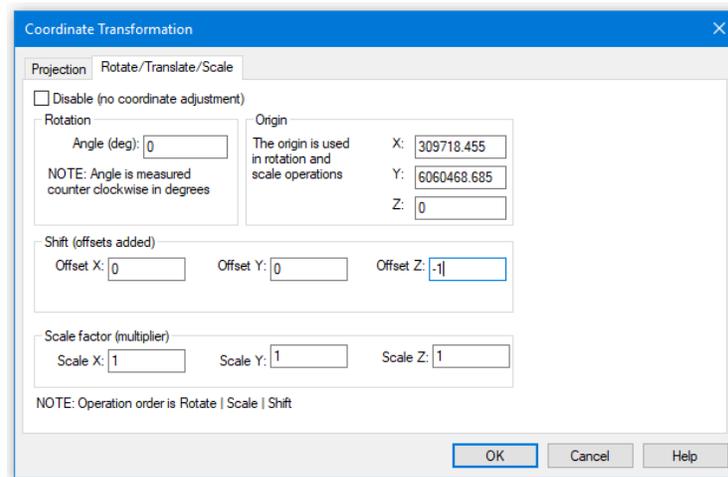


Figure 9-10: Coordinate Transformation Dialogue Box

13. Terrain Modeling | Grading button. Press *OK*.

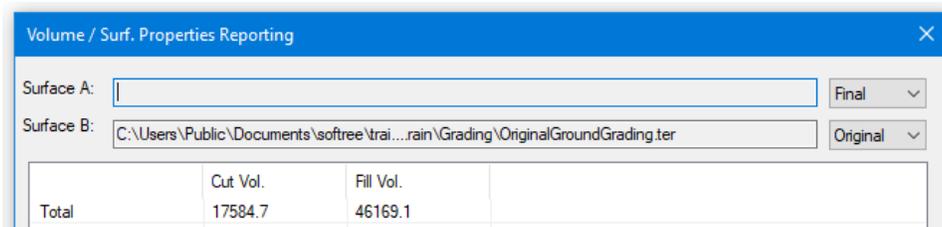


Figure 9-11: Volumes After Dropping the Pad by 1-meter

14. Open the *Feature Properties* panel. You should see the elevation of the platform decreased from *1175* to *1174* in the status portion.
15. Transform the elevation down 1m again. Repeat the above transform, grading, TIN and volume calculation as in Steps 11 through 13. Press *OK*. Once the grading calculation has completed you will notice that there is still too much fill.
16. Now select *Feature Tools* | *Shift*. Change *Z* to **1172.5** as shown in the figure below. Press *OK*.

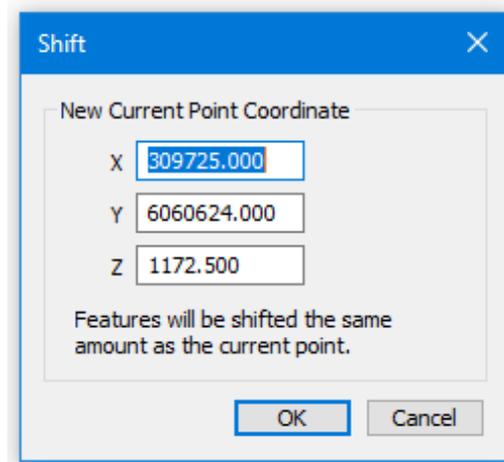


Figure.9-12: Using Shift to change elevation of “Platform”

17. Terrain Modeling | Grading button. Press OK.

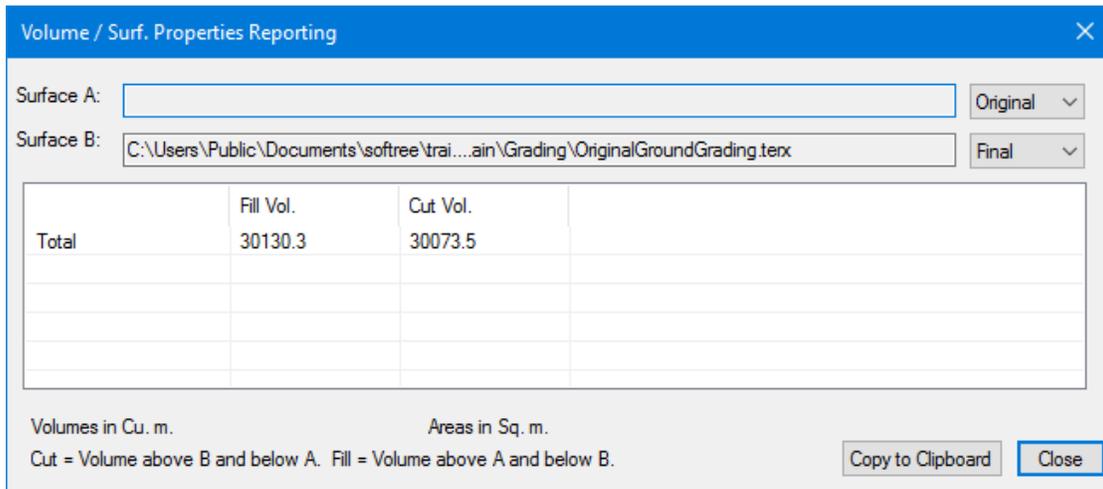


Figure 9-13: Screen Shot of Final Cut and Fill Slopes

The cut and fill are close to being balanced. (Refer to figure above).

18. File | New. Do not save changes.

Merging Terrains

The next few steps to will describe how to merge the pad with the **OriginalGroundGrading** file contours.

1. File | Open <Terrain>\Grading**OriginalGroundGrading.terx** A contour file will appear on your screen.
2. Next, we will merge the pad terrain into this terrain file. *Terrain Modeling | Merge Terrain.*

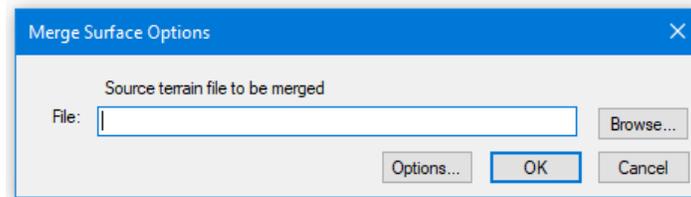


Figure 9-14: Merge Surface

- Before continuing, make sure that the slope stakes on the pad form a distinct boundary. This is done by pressing the *Options...* button and *check Include inside stitching (source) breakline* in the *TIN Merge Options* dialogue box as in the figure below. Press *OK* twice.

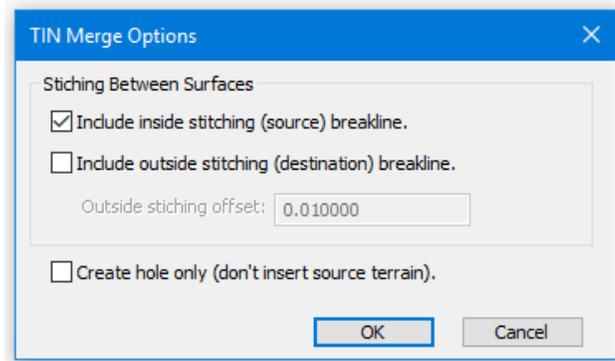


Figure 9-15: TIN Merge Options

- Press the *Browse...* button. Select <Terrain>\Grading*pad-grading after volume calc.terx*. A "Warning No Space for Undo" message box may pop up (figure below). Press *OK* to continue.



Figure 9-16: Warning No Space for Undo Dialogue Box

After a few seconds, the screen should now look like the figure below. Notice that the pad is now merged into the original ground surface.

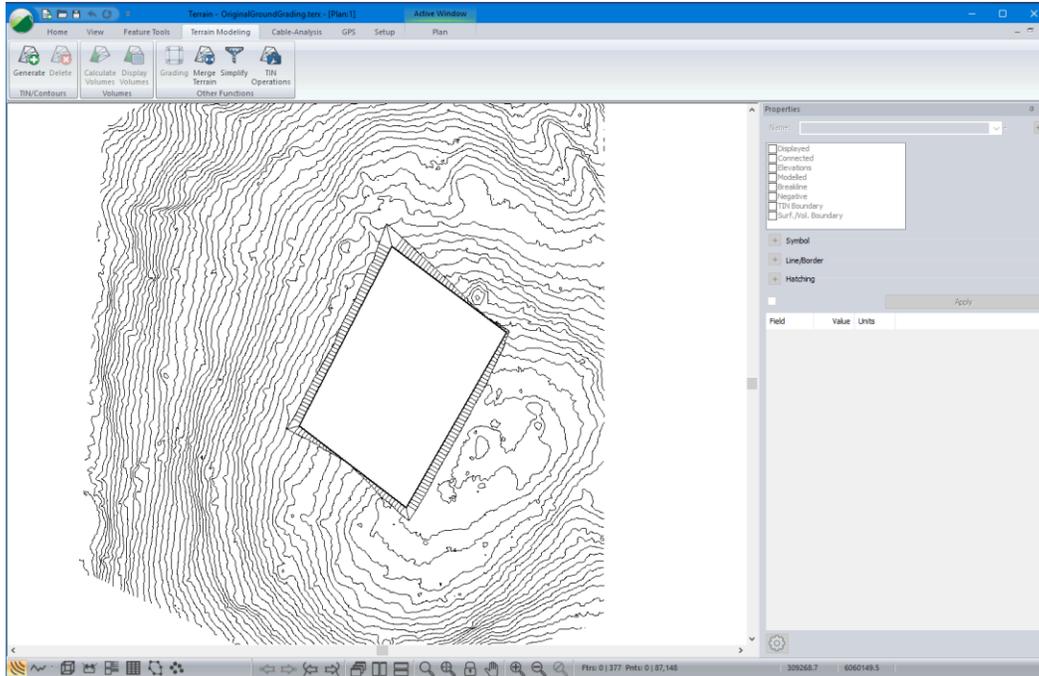


Figure 9-17: Platform Merged into OriginalGroundGrading.terx

5. *Terrain Modeling* | *Generate TIN*. Set the parameters as shown in the *Terrain Calculation* dialogue box below and press *OK* to re-triangulate the surface.

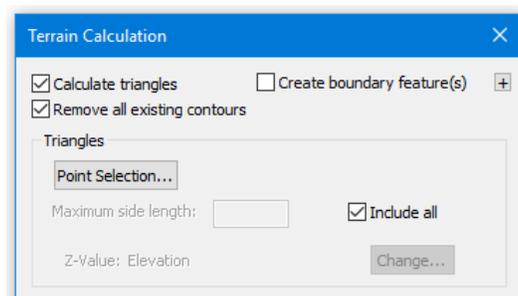


Figure 9-18: Terrain Calculation Dialogue Box

6. To view the platform file merged into the *OriginalGroundGrading.ter* contours let us look at it in 3D. *View* | *New Window* | *3D* from dropdown menu. Rotate as required and you can see that the two files have been merged.

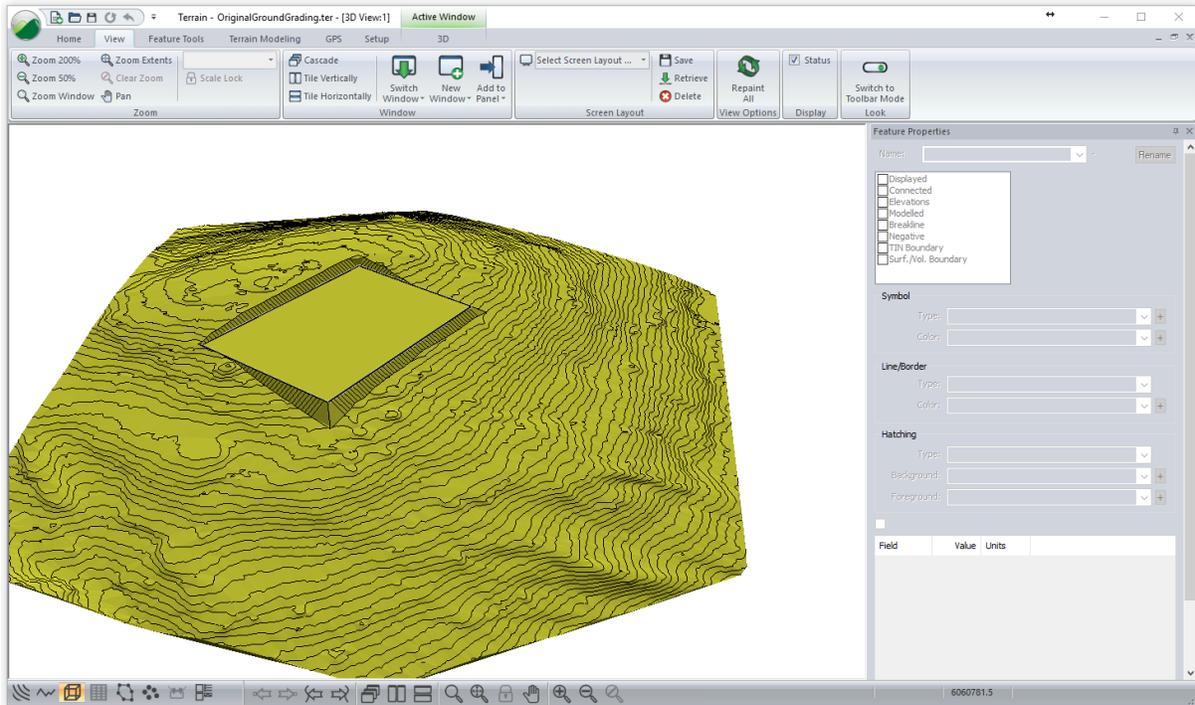


Figure 9-19: 3D Image of Merged Files (Platform.terx and OriginalGroundGrading.terx)

7.  File | New. Do not save changes.

10. Traverse Data

The Terrain Module imports and exports traverse files used by the Survey/ Map and Location modules. This section will describe the procedures for working with traverses.

To follow the examples and procedures in this section the *Mapping and Drafting*, *Import Basic*, *Export Basic*, *Import Enhanced*, *Export Enhanced*, *Profile Window*, and *Surface Generation and Contouring* function groups must be enabled. See Function Groups in the On-line help for more information.

Creating a Profile from a Traverse

Road Design Example

A traverse document has been entered into the Survey/Map Module. This example will demonstrate how to display a profile of the traverse.

Note: See Getting Started section for file install folders (<Terrain> and <Defaults and Layouts>)

1. *View | Retrieve Screen Layout* <Defaults and Layouts>\Training**training terrain profile.ilt**. This screen layout has Scroll Bars, TIN, Labels, Grid, North Arrow and Background enabled.
2. *Home | Insert File*. From the Files of Type pull-down choose *Softfree Traverse Document* (*.TR1,*.DB1). Select <Terrain>\Survey**road.tr1**. Press *Open*.

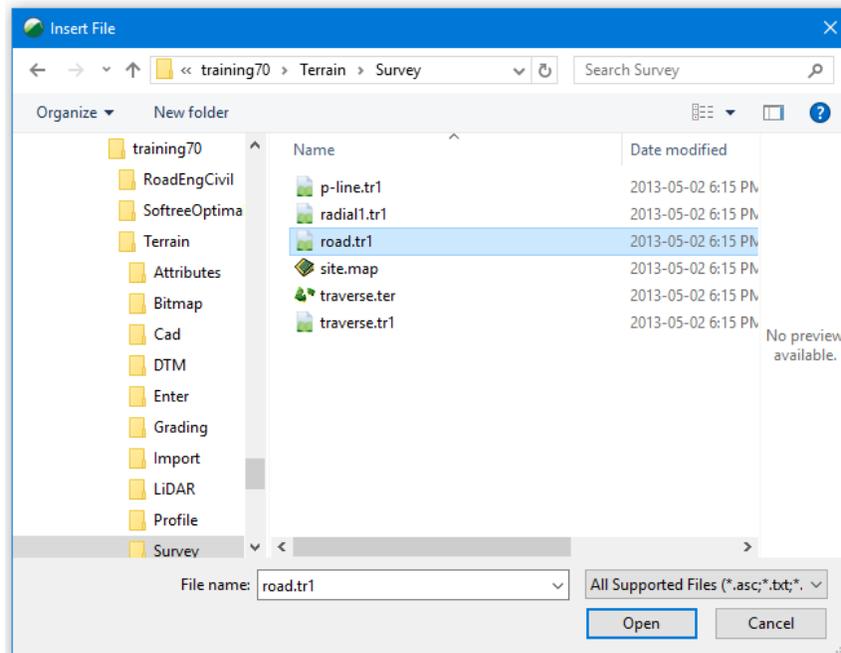


Figure 10-1: Insert File – Softfree Traverse Document

3. Press *OK* to bypass the *Import Options* dialogue box.
4. Display the profile: *View | New Window | Profile* from drop down menu.
5. *Profile | Profile Options*. Change Ratio (V to H) to **10.0**. *OK*.

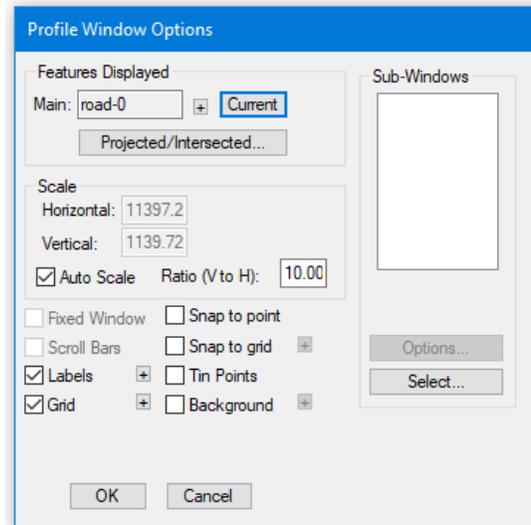


Figure 10-2: Profile of a Survey/Map Traverse Document

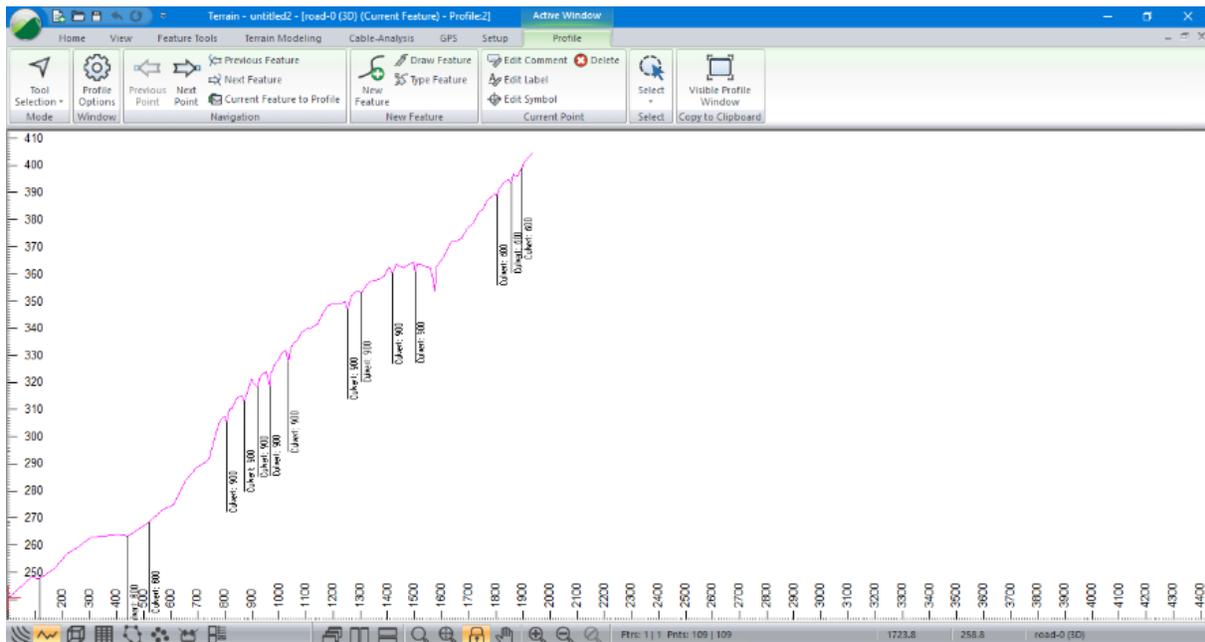


Figure 10-3: Profile of a Survey/Map Traverse Document

6. The scale has automatically been set to fit the entire traverse into the Profile Window. To change the scale: activate the Profile Window. *Profile | Profile Options* as shown in the figure below:

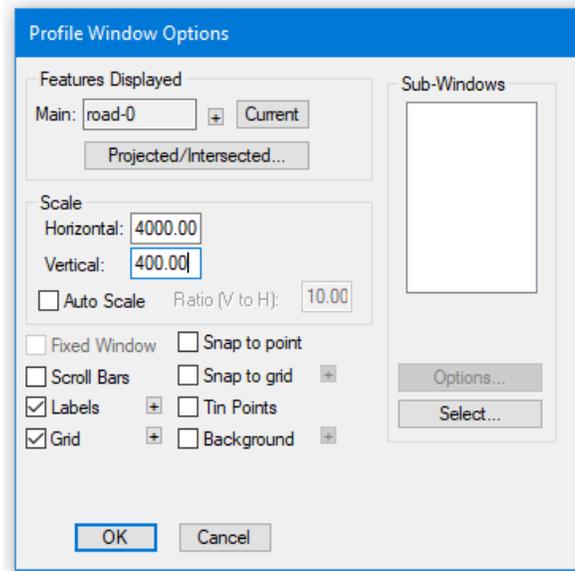


Figure 10-4: Profile Window Options Dialogue

7. De-select *Auto Scale*. Set the *Horizontal* scale to **4000**, the *Vertical* scale to **400** as shown above. Press *OK*.
8. At this point the Profile Window may be blank. Press the *<Ctrl + N>* key; the traverse should come into view.

Note: The *<Ctrl + N>* and *<Ctrl + B>* keys will change the current point (N=Next and B=Back).

9. To examine the profile near the proposed culvert at station 522 (the grid numbers in the X axis correspond with the stations). Using *<Ctrl + N>* and *<Ctrl + B>* move the current point to station 522 (as shown below). You can also use *Previous Point* and *Next Point* buttons in the *Profile* tab.

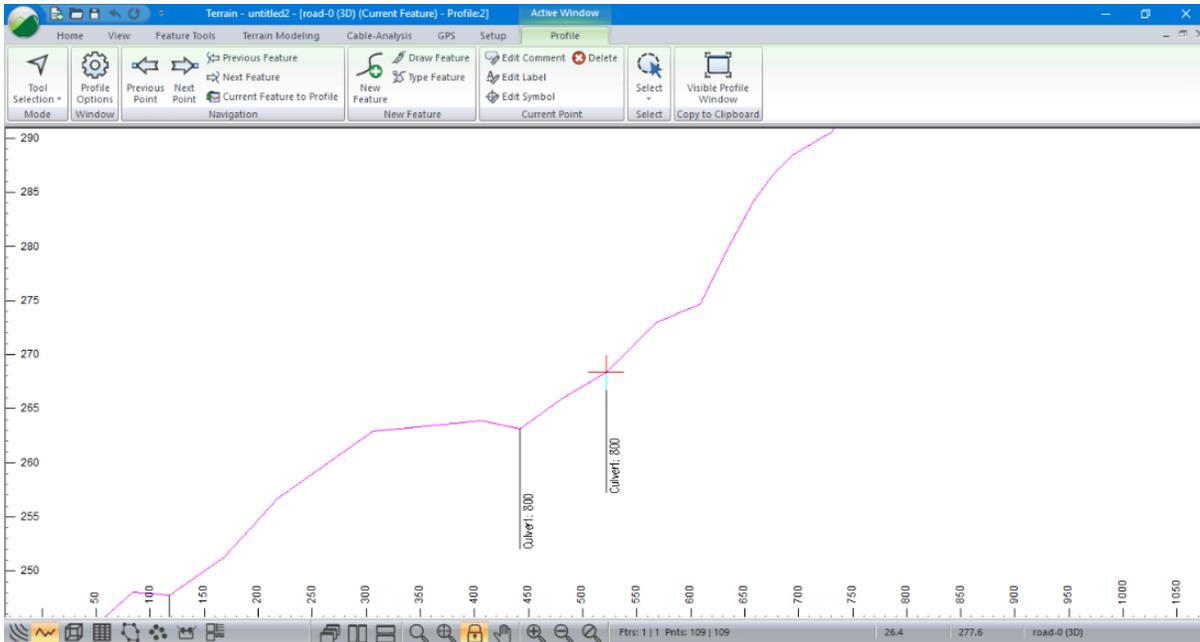


Figure 10-5: Profile with Current Station at 522

10. To display the station numbers: *Profile | Profile Options*. Press the *plus* button  next to *Labels*. *Double-click* to select *Stations*. Press *OK* to return to main screen. The Station numbers are now displayed.

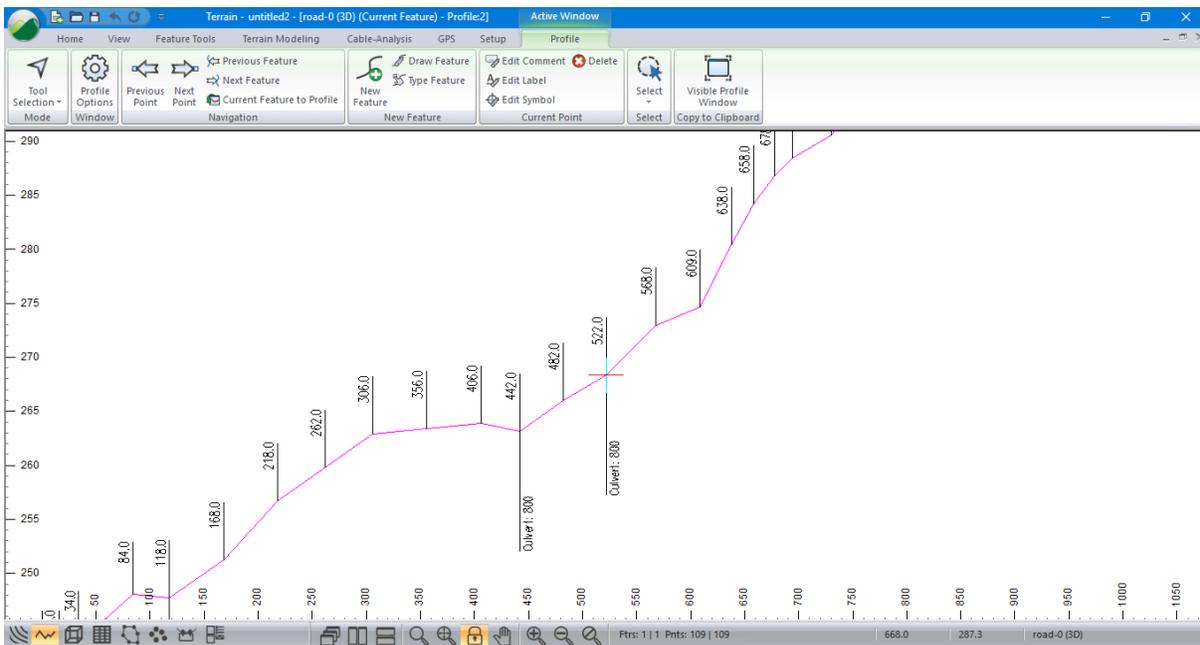


Figure 10-6: Traverse Profile with Station Numbers Displayed

11.  *File | New*. Do not save changes.

Creating a DTM from a Radial Survey

Site Survey Example

The following example imports a *map document* containing a site survey. This example demonstrates how to import a map, format the points and create a DTM with contours.

The map consists of a radial survey taken from a single setup (See Survey/Map Tutorial - *Radial Surveys* for more information) and a road P-Line traverse.

1.  **File | Open.** <Terrain>\Survey\site.map (You may need to adjust the file type drop-down to include .map files). Press *Open*.
2. Make sure that *Include Side Shots* is not checked in the *Import Options* dialogue box. Press *OK*.
3. **View | Retrieve Screen Layout** <Defaults and Layouts>\training\training site.ilt
4. **View | Zoom Extents.** Your screen should resemble the figure below.

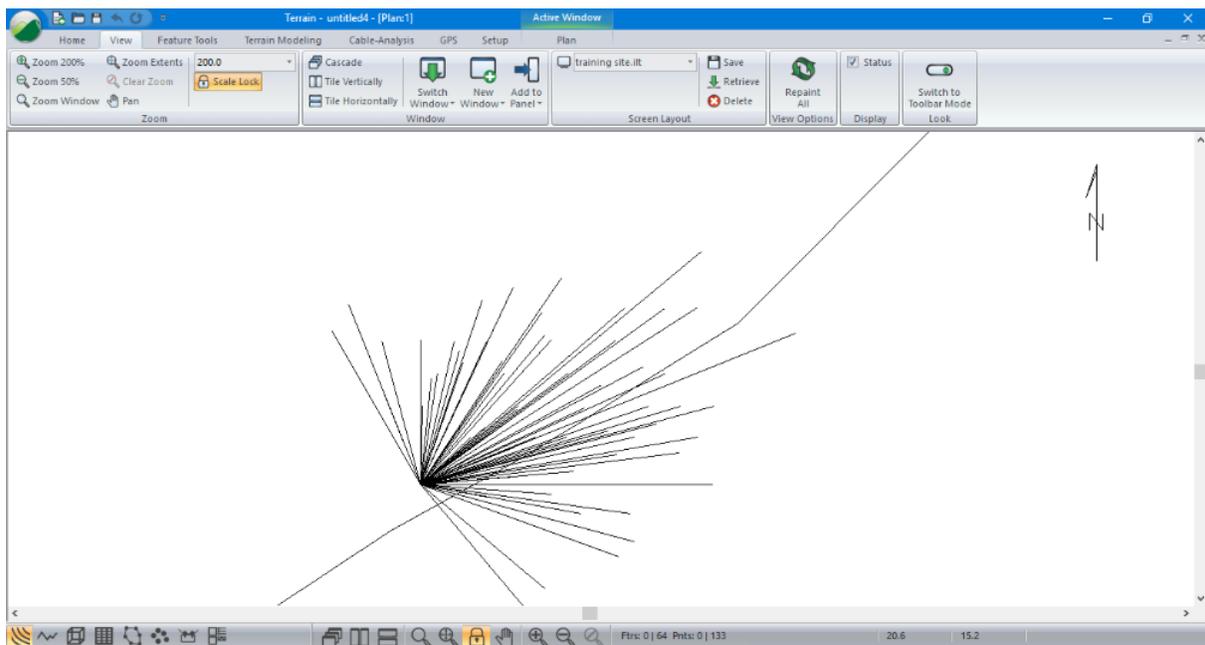


Figure 10-7: Imported site.map

For presentation purposes, the imported survey information will be re-formatted and 'cleaned up'.

5. **Home | Select | By Name** from dropdown list.
6. Press the *Un-select All* button. Click on the *Advanced...* button and type *RADIAL ** in the *Select Matching Names* area as shown in the figure below. Press the *Select* button in the *Select Matching Names* area. 63 features should be selected. Press *OK*. The selected features are displayed in magenta.

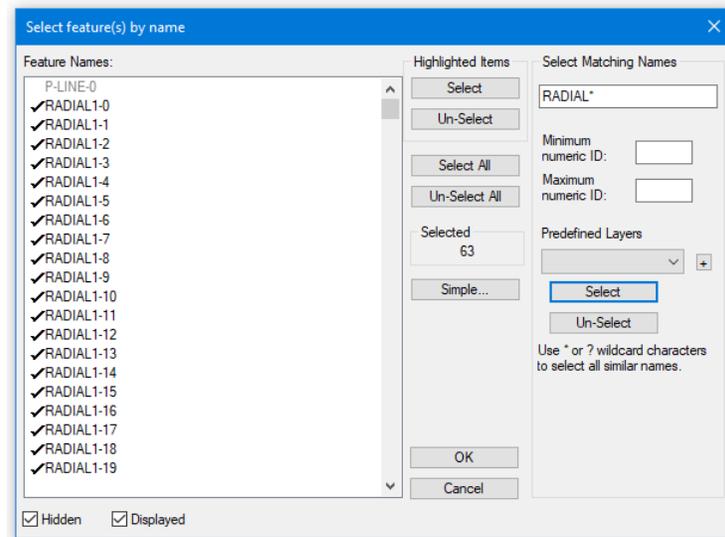


Figure 10-8: Select Features By Name Dialogue

Note: The *Select Matching Options* names fields in the *Advanced* section of the *Select feature(s) by name* dialogue box allows you to enter a character in each field you wish to match. "?" matches all characters, "*" matches all following characters and an empty field matches nothing.

For Example

"?ABC?????" or "?ABC*" will match:

1ABC
1ABCXYZ
AABC

It will not match:

ABC
1AB2

Minimum and maximum numeric ID's allow you to select by a features numeric ID (for more information about feature naming see *Features* in the On-line Help).

7. *Feature Tools* | *Line Types, Symbols* button. Set symbols to *Cross*. See figure below. Press *OK*.

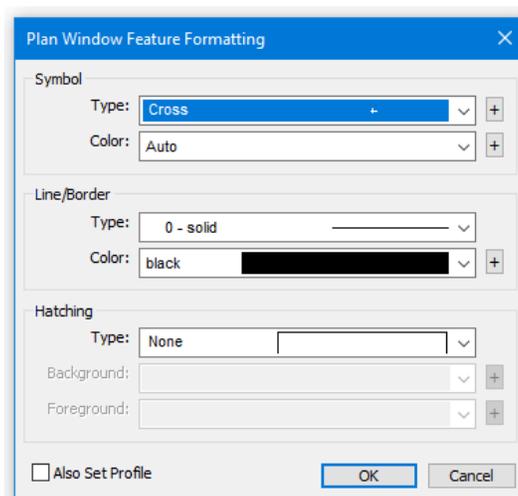


Figure 10-9: Line-Types and Symbols Dialogue

8. *Feature Tools* | *Feature Properties* button. De-select the *Connected* property option. This will make the feature a *Loose 3D Tin Feature*, as shown in the picture within the dialogue. Press **OK**.

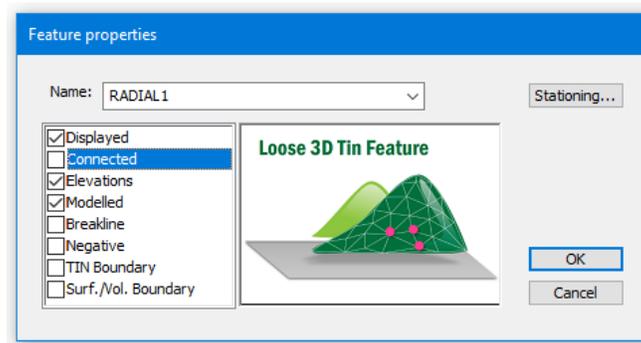


Figure 10-10: Feature Properties Dialogue

9. Select the *P-Line traverse* (the only remaining linear feature) by clicking on it with the Selection Cursor .
10. *Feature Tools* | *Labels*. In addition to what is already selected, select *Stations (Survey)* by double-clicking on the list box entry. Press **OK**.

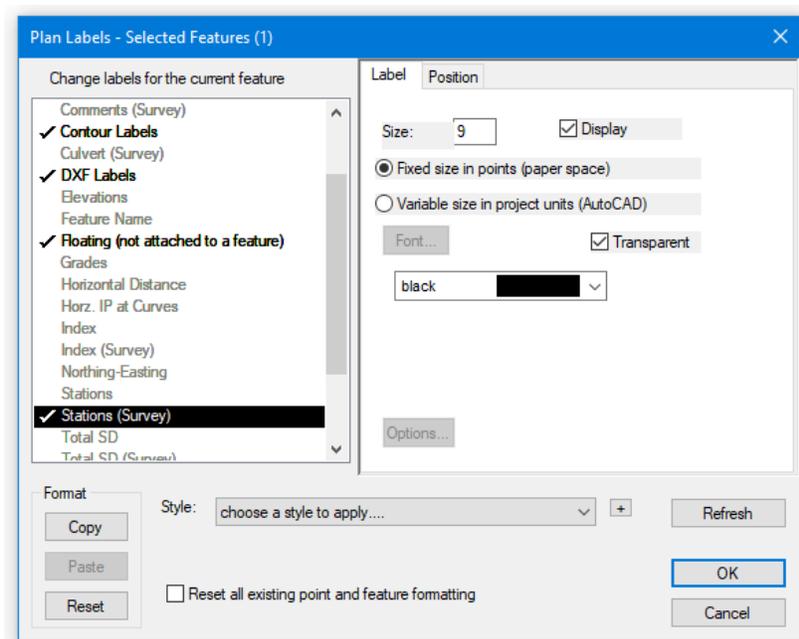


Figure 10-11: Label Selection and Formatting Dialogue

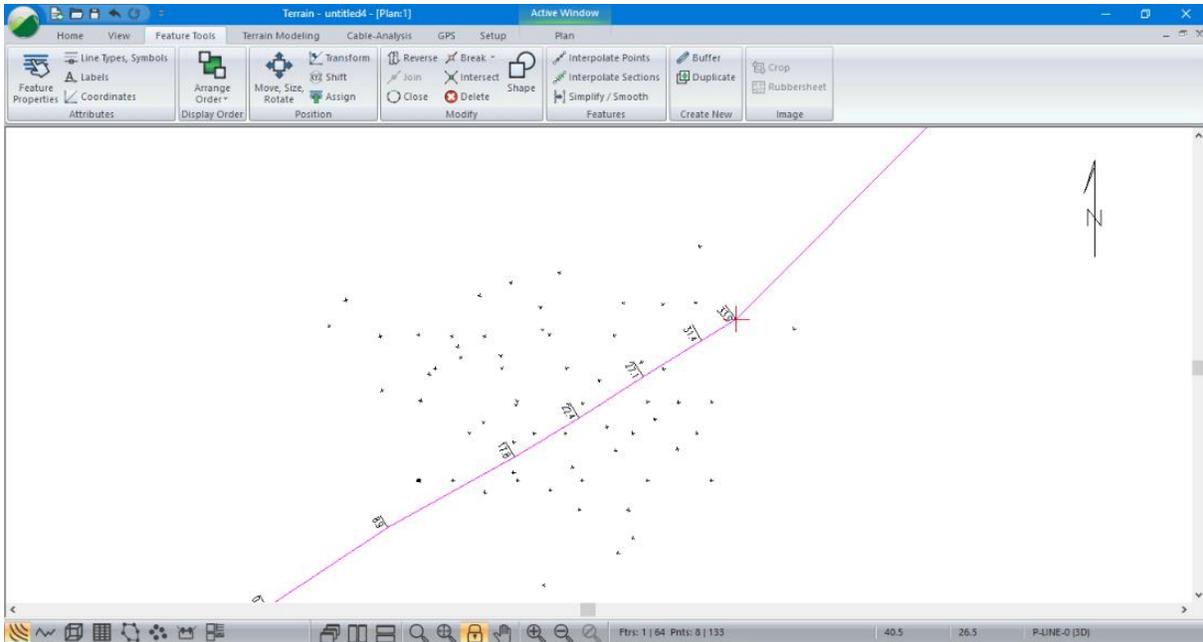


Figure 10-12: Site Plan after Formatting

11. *Terrain Modeling* | *Generate TIN* button to create a digital terrain model (DTM) and calculate contours. Set the parameters as shown in the figure below. Press OK.

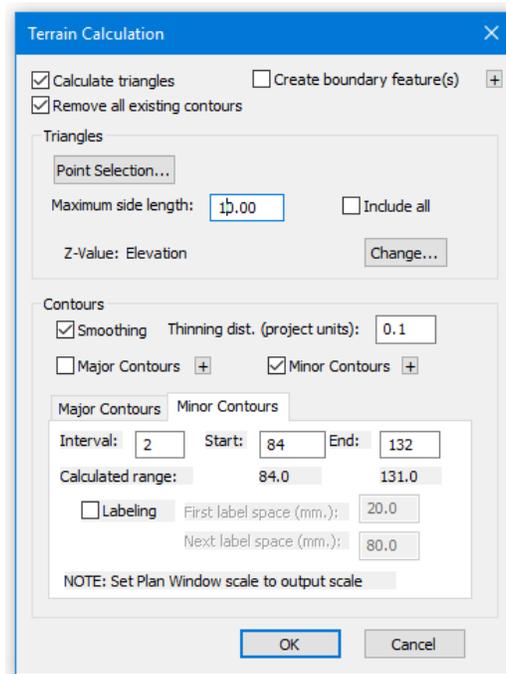


Figure 10-13: Terrain Calculation Dialogue

Your screen should now display contours of the stream crossing as shown in the figure below.

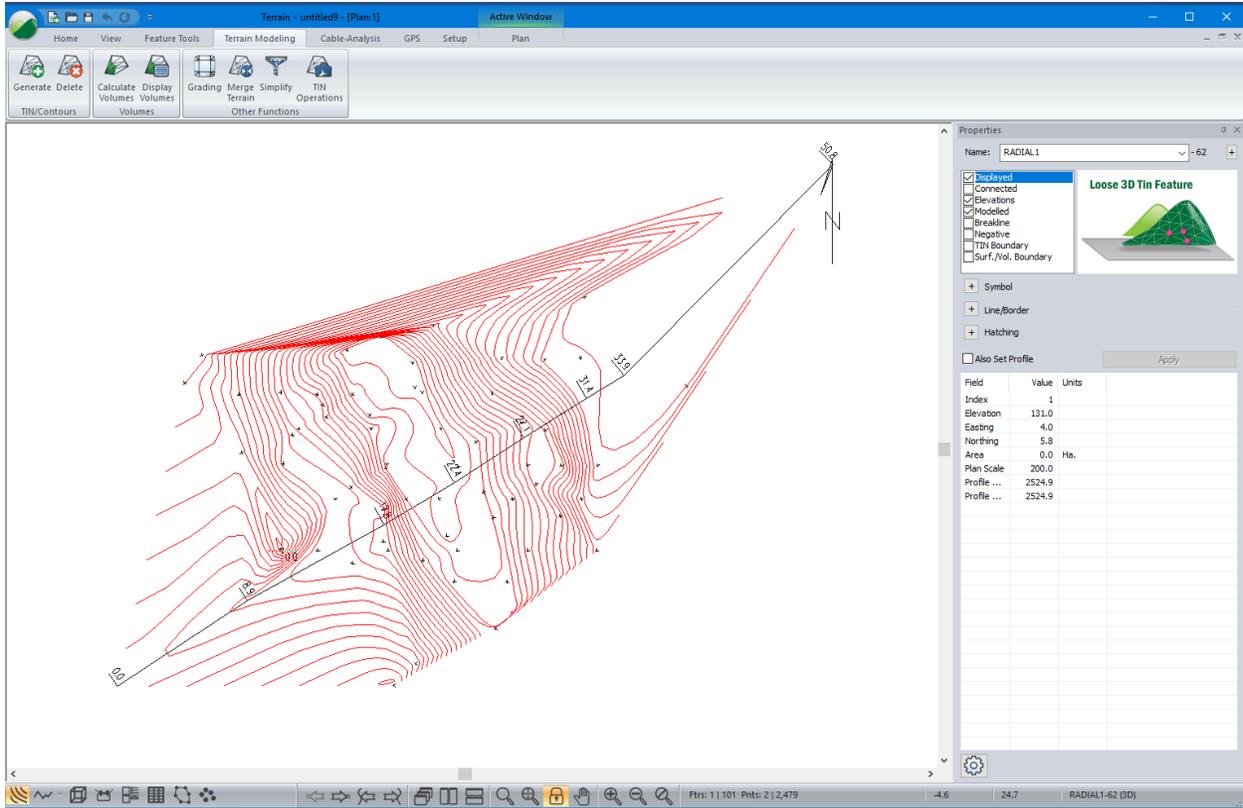


Figure 10-14: Site Plan with Contours

12.  File | New. Do not save changes.

11. Creating Custom Symbols & Line-types

In this section, new symbols and line-types will be created. Tables of symbols and line-types are stored together in TRF files. The default symbol and line table file is <Defaults and Layouts>\normal.trf.

Note: RoadEng does not write over your <Defaults and Layouts> files during an update; customizations you made in the past will not be overwritten. If you want to see the latest version of *normal.trf* (or any other setup file) look in <Defaults and Layouts>\LastInstall.

Terrain and Location documents have private symbol/line tables stored in their files (extension .te1 for Terrain and .ds3 for Location). Survey/Map documents always use the defaults in *normal.trf*.

Creating Symbols

In this example, we will examine the tools for creating and editing symbols.

Note: See Getting Started section for file install folders (<Terrain> and <Defaults and Layouts>)

1. Setup | Module Setup button. Choose the *General* tab.

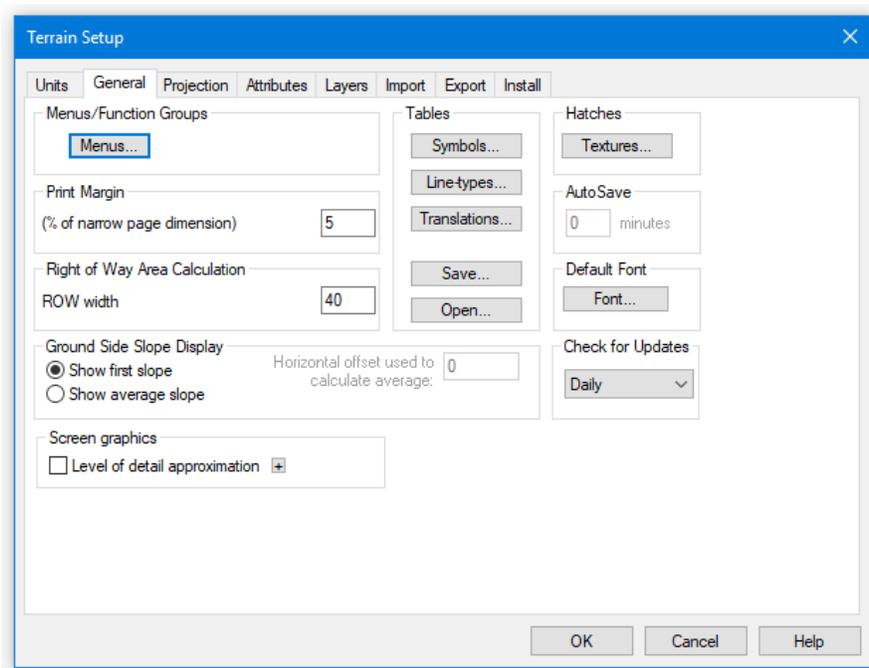


Figure 11-1: Module | Setup, General tab.

The tables on your computer may have been customized; the step below will open a Line/Symbol table suitable for this exercise.

2. Press the *Open...* button in the *Tables* group, and browse for <Defaults and Layouts>\Training\training normal.trf. Press *Open*.
3. Press the *Symbols...* button to open the *Edit Symbols* dialogue box (figure below).

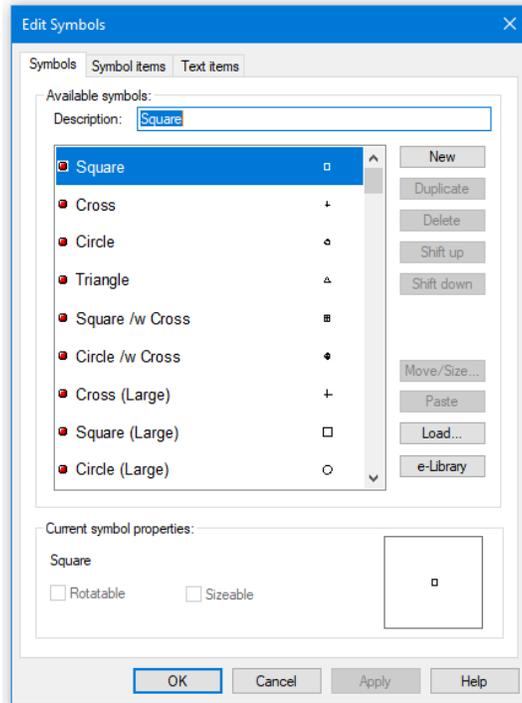


Figure 11-2: Edit Symbols dialogue box, Symbols tab.

The *Symbols* tab shows the same list you would see if you were changing the formatting of a Terrain or Location feature. The items preceded with the green dot  are modifiable, those with a red dot  are not.

A Symbol consists of *Symbol Items* and *Text Items*. Symbol items are a series of line segments; text items are characters with font information. When you select a modifiable symbol, you can click on the other two tabs to modify the selected symbol.

Load external Symbols

4. While it is possible to create *New* symbols from scratch, it is usually easier to *Load* (import) from an external source.

Note: Symbols and line-types can be loaded from Translation Files (extension TRF, TE1, or DS3), old-style symbol or line-type files (SYM or LIN), or from AutoCAD DWG files.

5. Scroll to the bottom of the list.
 - Notice that the last item in the list is open arrow.
 - Load a version 3.1 symbol table: Press the Load... button.
 - Set the Files of Type from the drop-down menu to Softree V3.1 Symbols (*.sym).
 - Browse and select <Defaults and Layouts>\Training\training example.sym.
 - Press *Open*.
6. This will open the *Selective Load* dialogue box shown below.

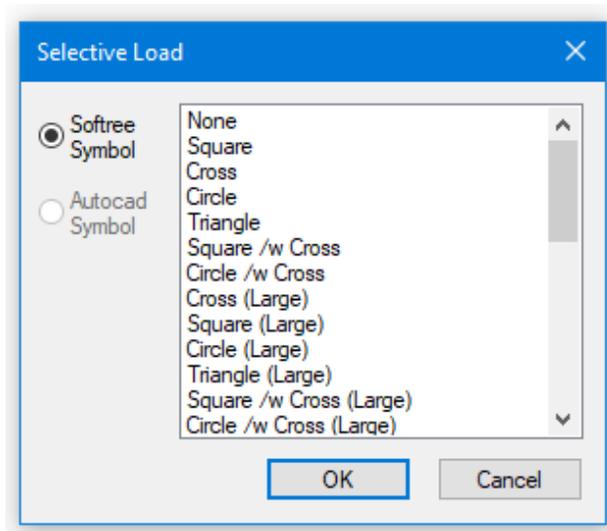


Figure 11-3: Selective load Dialogue Box for Symbols.

7. Select all of the symbols in the list:
 - Click on the first item in the list.
 - Scroll down to the bottom of the list.
 - Hold down the <shift> key, and click on the last item.
 - Press *OK* to load all selected symbols.
 - You will be prompted with the dialogue box shown below.
 - Press *Skip All*. Do not overwrite the existing symbols.

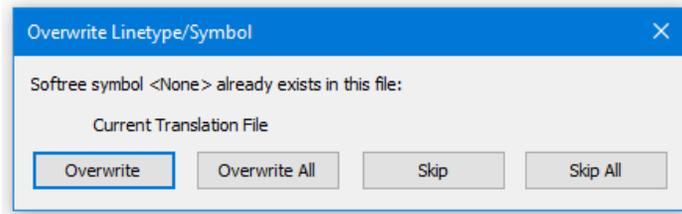


Figure 11-4: Overwrite Line-type / Symbol Dialogue Box

You will now see six new symbols at the end of the list.

Create a New Symbol

8. Still within the *Edit Symbols* dialogue, press the *New* button. A new symbol xxx will appear at the bottom of the *Available symbols* list.
9. Change the *Description* from xxx symbol to *Tree*.
10. Click on the *Symbol items* tab. The *Edit Symbols* dialogue box will appear as shown below.

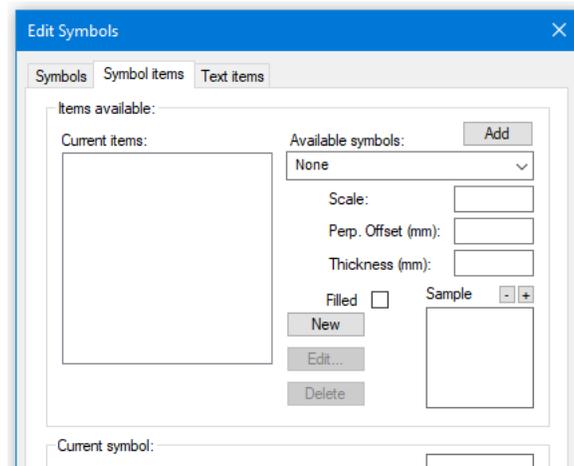


Figure 11-5: Edit Symbols dialogue box, Symbol items Tab

11. Press the *New* button.

You are ready to draw a new symbol. Notice that the main drawing surface is composed of a grid, and that the *Snap To Grid* and *Add* options are set as in **Error! Reference source not found.** below.

12. Press the *Zoom* button  until you have zoomed to X8.
13. Move the cursor around the drawing area and notice that the *Pointer position* is dynamically updated.

Note: The *Pointer position* is in units of 1/10mm. The symbol below will be 6mm on your screen (if not scaled).

14. Draw a vertical line:
 - Select *Add* mode (if it is not selected).
 - Move your mouse pointer above the center point (red cross-hair) until the *Pointer position* is roughly (0, 350).

- Click and drag with the mouse until you draw a straight line that ends the same distance below the center. Watch the Pointer position for (0, -350).
 - Release the mouse button to finish the segment.
 - If you need to edit the line, select *Edit* mode, and click and drag an end point.
15. Repeat the step above to draw a horizontal line: (350, 0) to (-350, 0).
16. Draw two more lines that run diagonally as shown in the figure below: (225, 225) to (-225, -225) and (-225, 225) to (225, -225).

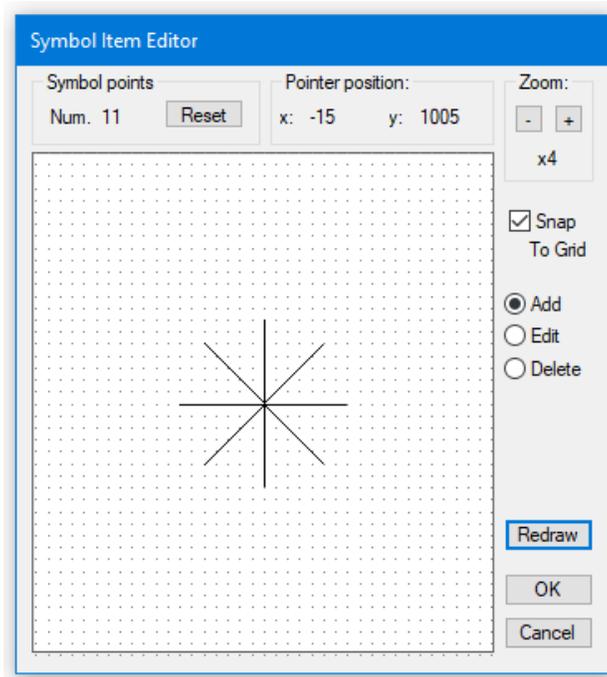


Figure 11-6: Symbol Item Editor Box

Note: This dialogue box contains some other useful features. The *Reset* button will clear the whole drawing, so that you can redraw the symbol. Activating the *Edit* or the *Delete* options will allow you to edit or delete a line segment by clicking on a point. The *Redraw* button refreshes the drawing surface. If you do not want the lines to attach to grid points, turn off the *Snap To Grid* option. Up to 20 points can be added to an item.

17. Once you are done press *OK*.

If the symbol is more complex than the one just drawn (i.e. more than 20 points) you will have to add portions of the symbol as separate items. You can also add *Available symbols* to the *Current items* list by selecting a symbol in the pull down box and pressing the *Add* button.

18. A Symbol is a collection of items. Each item can be controlled individually:

- Fill an item by setting the *Filled* check box (do this *after* you have drawn the item).
- Change the *Scale* to something other than the default value of **1.00**.
- Offset the item (perpendicular from the line it is assigned to) by changing the *Perp Offset* option.
- Change the thickness of the segments in the item.

19. Select the *Symbols* tab. Do not press *OK* it closes the whole dialogue box.
20. The new symbol *Tree* appears in the *Available Symbols* list and the sample box (figure below).

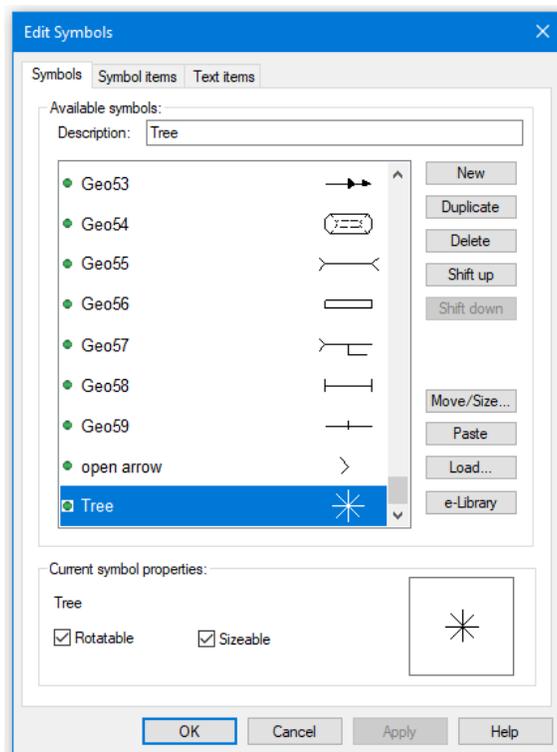


Figure 11-7: Creating a New Symbol

It is also possible to create symbols from characters and fonts. Or, to make a compound symbol with one or more characters combined with one or more graphic items.

Let's make a new symbol from a character with a special font.

21. Again, press the *New* button.
22. Change the *Description* from "xxx" to **Omega**.
23. Click on the *Text items* tab.

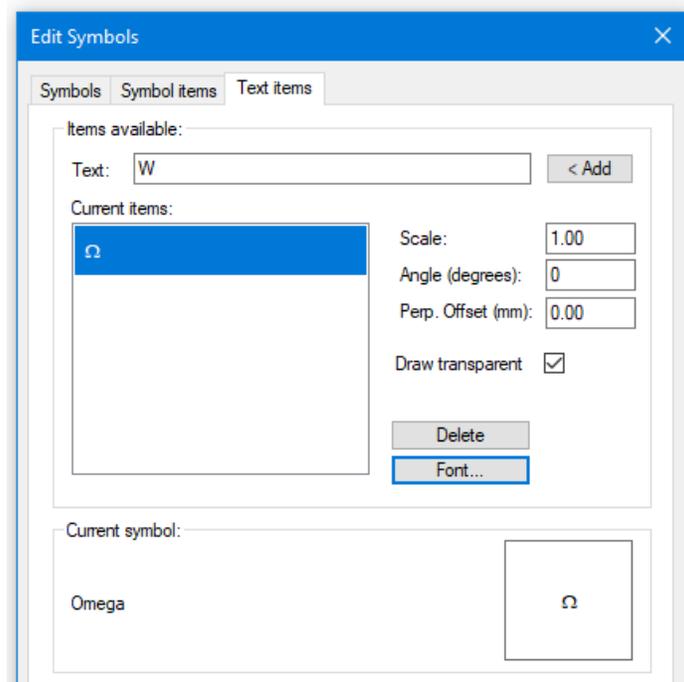


Figure 11-8: Symbol Editor Dialogue - Text Items Tab

24. Type *W* in the *Text* field and press the *Add* button.

25. Press the *Font...* button to open the *Font Selection* dialogue box. Select *Symbol* font, if available. Press *OK*.

The “*W*” is now rendered as the Greek character omega.

Note: It is possible to create symbols from other specialized fonts as shown in the figure below. Fonts are not provided with the Terrain Module (use the Internet to locate specialized font sets).

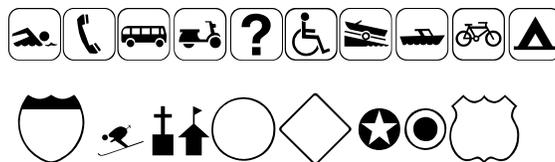


Figure 11-9: Symbols Created Using Specialized Fonts

Fonts are not provided with the Terrain Module (use the Internet to locate specialized font sets).

26. Select the *Symbols* tab again.

27. The new symbol *Omega* appears at the bottom of the list.

28. Press *OK*, to close the *Edit Symbols* dialogue box.

29. Press *Save...* in the *Tables* section of the *Terrain Setup* dialogue box.

30. You are prompted with the *File Save* dialogue box to save this table. You could save over your *normal.trf* file to modify your defaults, or you could save to another file.

31. Press *Cancel*. We do not want to save this example table.
32. Continue to step 3 in Creating Line-types below or *Cancel* to close.

Creating Line-types

Line-types can contain periodic symbols and text as well as lines. In this exercise, we will load lines from an external table and create a new line type from scratch.

1. Open the Terrain module and select menu *Setup | Module Setup*. Choose the *General* tab.

You will be presented with the *Terrain Setup* dialogue box as shown in Figure 11-1

The tables on your computer may have been customized; the step below will open a Line/Symbol table suitable for this exercise.

2. Press the *Open...* button in the Tables group, and browse for <Defaults and Layouts>\Training\training normal.trf. Press *Open*.
3. Press the *Line-types...* button in the Tables group to open the *Edit Line Types* dialogue box (Figure 11-10).

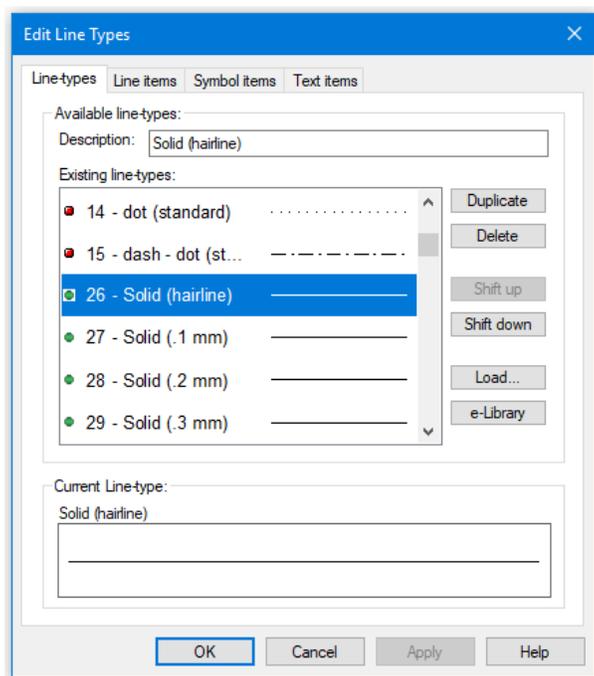


Figure 11-10: Edit Line Types Dialogue Box

The *Line-types* tab shows the same list you would see if you were changing the formatting of a Terrain or Location feature. The items preceded with the green dot ■ are modifiable, those with a red dot ■ are not.

A Line-type consists of *Line-Items*, *Symbol Items* and *Text Items*. *Line items* are linear patterns that may or may not be offset. *Symbol items* and *Text items* can be included at regular intervals or on the line vertex points. When you select a modifiable line-type, you can click on the other tabs to modify it.

Load External Lines

While it is possible to create *New* line-types from scratch, it is also possible to *Load* (import) from an external source.

Note: Symbols and line-types can be loaded from Translation Files (extension TRF, TE1, or DS3), old-style symbol or line-type files (SYM or LIN), or from AutoCAD DWG files.

4. Scroll to the bottom of the *Existing line-types* list. Notice that the last item in the list is ZIGZAG.
5. Load a version 3.1 line table:
 - Press the *Load...* button.
 - Set the Files of Type from the drop-down menu to *Softree V3.1 Lines (*.lin)*.
 - Browse for <Defaults and Layouts>\Training***training example.lin***. Press *Open*.
6. This will open the *Selective Load* dialogue box shown below.

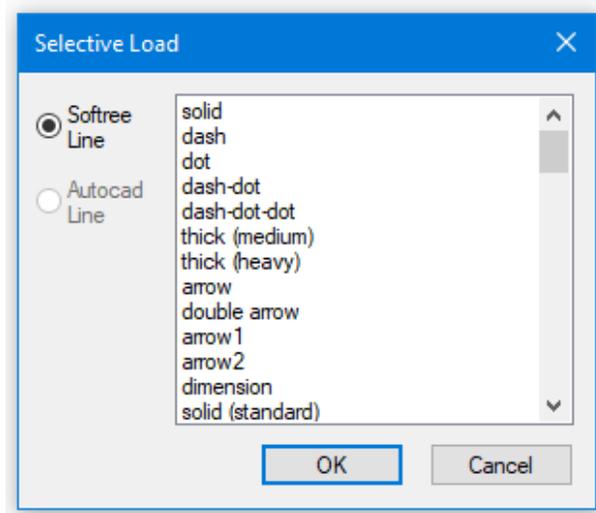


Figure 11-11: Selective Load Dialogue Box for Line-Types

7. Select all the line-types in the list:
 - Click on the first item in the list.
 - Scroll down to the bottom of the list.
 - Hold down the <shift> key, and click on the last item.
 8. Press *OK* to load all selected symbols.
- You will be prompted with the dialogue box shown below.

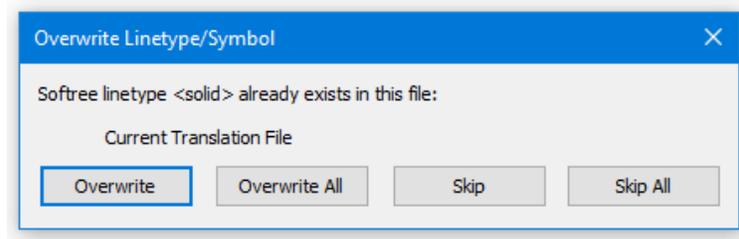


Figure 11-12: Overwrite Line-type/Symbol Dialogue Box

9. Press *Skip All*. Do not overwrite the existing line-types. You will now see six new line-types at the end of the list.

Create a new Line-type

10. We will now create a new line-type by duplicating an existing one.

11. Duplicate Solid (.3 mm):

- Scroll until you find 29 - *Solid (.3 mm)* and select it.
- Press the *Duplicate* button.
- The line-type will be duplicated and placed at the end of the list.
- Change the Description: to *Gully with S6 stream*.
- The line type is OK for our purposes. You may want to look in the Line items tab to see what options are set.

12. Add the *open arrow* symbol every 5mm:

- Select the *Symbol items* tab.
- The *Edit Line Types* dialogue box will change to look like the figure below.

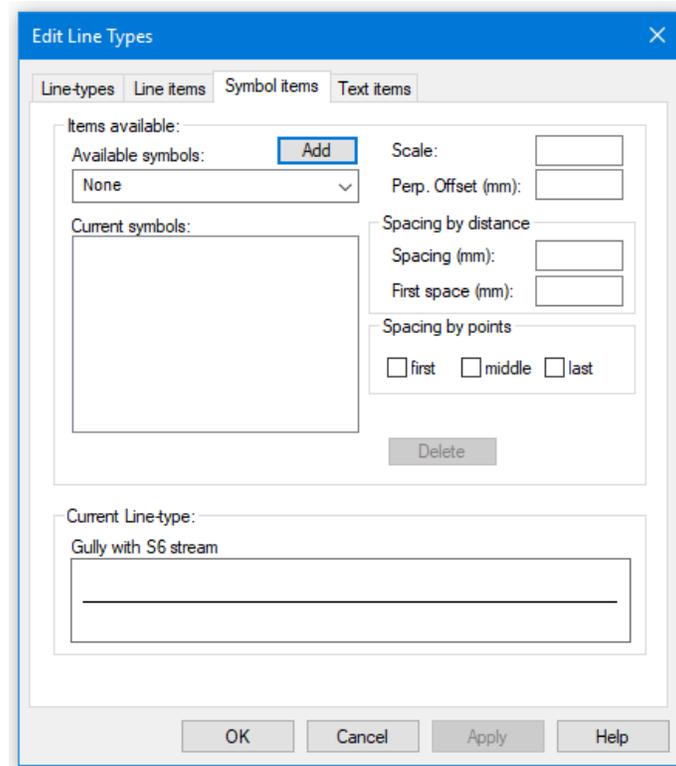


Figure 11-13: Edit Line Types Dialogue box - Symbol Items Tab

- Scroll through the *Available symbols* list until you find a symbol called *open arrow* (near the end of the list). Select this symbol.
- Press the *Add* button.

The arrow symbol will be added to the *Current symbols* list, and you will see it at the start of the *Current Line-type* graphic at the bottom of the dialogue box.

13. Clear the *first* check box under *Spacing by points*.

14. The symbol is now *Spacing by distance*; every 10 mm by default. Change the *Spacing (mm)* to **5 mm**.

15. Add an arrow symbol at the end of the line:

- Again, scroll through the *Available symbols* list select the symbol called *Arrow R1*.
- Press the *Add* button.
- Clear *first* and select *last* in the *Spacing by points* section.

The arrowhead is now at the end of the line and should look like the *Current Line-type* in figure below:

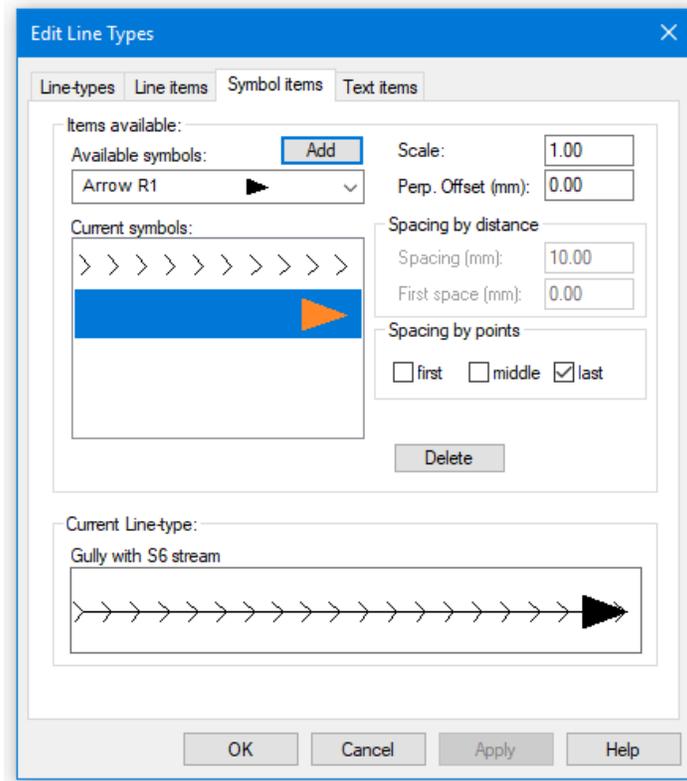


Figure 11-14: Edit Line Types dialog box - Symbol Items Tab

16. Add "S6" text along the line:

- Press the *Text items* tab. The dialog box now looks like the figure below.
- Type **S6** in the *Text* field.
- Press the *Add* button.
- Change the *Spacing (mm)* to **20.0 mm**.
- Turn off the *Draw transparent* option.
- The result will be as displayed in the *Current Line-type* box below.

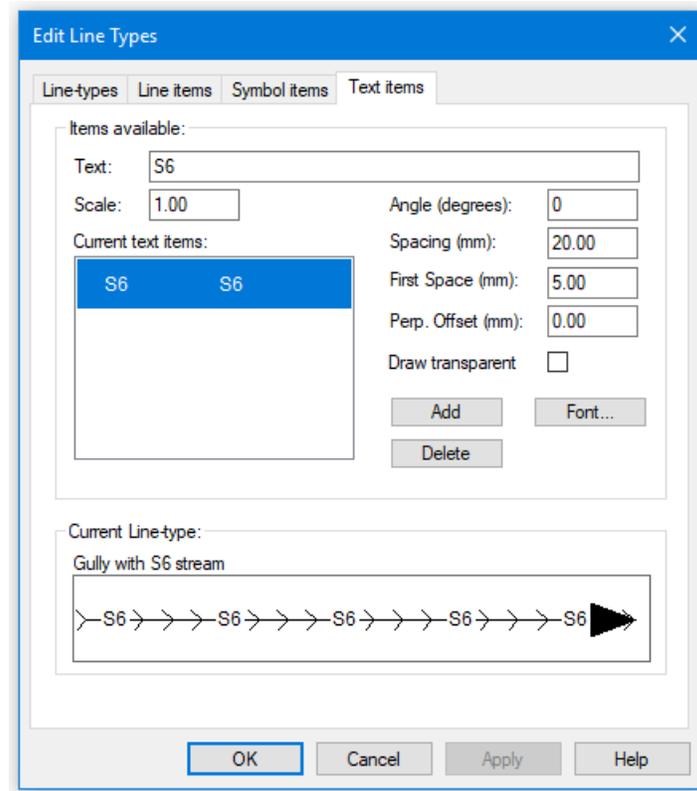


Figure 11-15: Edit Line Types Dialogue Box - Text items Tab

17. Click *OK* to return to the *Terrain Setup* dialogue box.
18. Press *Save...* in the *Tables* section of the *Terrain Setup* dialogue box. You are prompted with the file *Save As* dialogue box. If you write over <Defaults and Layouts>**Normal.trf**, you will update your defaults for Terrain and Location modules.
19. Press *Cancel*. Do not save this example table.

Any TRF file you create is available from the *Open...* button. If you open an existing Terrain document and then change Line/Symbol table, the lines and symbols you have applied will change. Only the non-modifiable  symbols and lines are guaranteed to remain unchanged.

20. You can draw a feature with the mouse and try changing it to the new line type *Gully with S6 Stream*.

Note: Symbols and Line-types are referenced by table index (not name). If you open an existing Terrain document and then insert lines or symbols near the beginning of the table, all features containing lines or symbols after the insertion point will change.

Note: Terrain documents can be created with different line/symbol tables. If you insert or paste features from one Terrain document into another, the line/symbol formatting may change.

21. Press *Cancel* again to exit the *Terrain Setup* dialogue box.
22.  *File | Close*. Do not save changes.

12. Cable Analysis

To use this tutorial, you should be well versed in Terrain Module functions such as:

- Selecting features
- Drawing/editing features.
- Displaying profiles

The Cable Analysis Module calculates the behaviour of cable yarding systems. You provide a ground profile, a logging system (cable configuration, cable working tensions and weight as well as carriage weight) and a calculation type. You can then display graphic or tabular results including tensions, load capabilities and ground clearance. The proposed cable alignment and the calculated cable deflection is usually referred to as a deflection line. Throughout this chapter deflection lines will be referred to as D-Lines.

See the Cable Analysis On-line Help for details on modelling techniques and limitations. Calculations that require modelling (all except the *simple third point* method) assume a quasi-static load with no ground interference (flying load).

The examples in this section require a license for one of the Softree products that includes Cable Analysis: *Terrain Tools – Forest Engineer* or *RoadEng Forest Engineer*.

Note: While most of the units in this example are metric, cable logging equipment often originates in the United States. For that reason, the inputs for creating new equipment and logging systems are in imperial units.

Adding Custom Equipment and Logging Systems

To evaluate a D-Line for acceptable deflection, clearance, load, and tensions you must use a *Logging System* that models what is in the field. In the example we add a new piece of *Equipment* (to represent a yarder) and then create a new *Logging System* that uses this yarder.

Note: See Getting Started section for file install folders (<Terrain> and <Defaults and Layouts>)

1.  File | Open <Terrain>\Cable\CableAnalysis.tex.
2. Select the *Cable-Analysis* tab in the ribbon bar, then click on the  *Equipment* button. The *Equipment* dialogue box shown in **Error! Reference source not found.** will appear

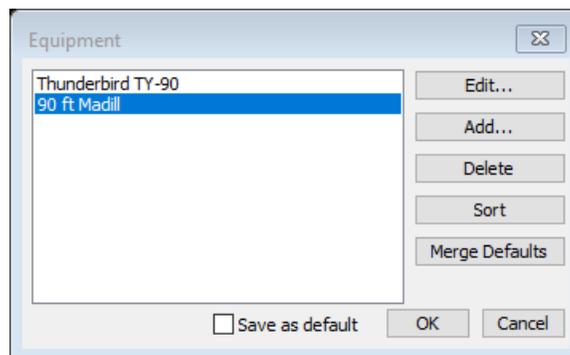


Figure 12-1: Equipment dialogue box

- In the *Equipment* dialogue box, press *Add*. The *Equipment Edit* dialogue box will appear.

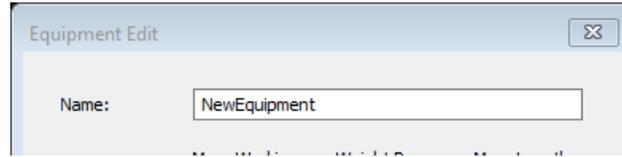


Figure 12-2: *Equipment Edit* dialogue box.

- Fill in all of the parameters as shown in Figure 12-3 below and press *OK* to return to the previous window.

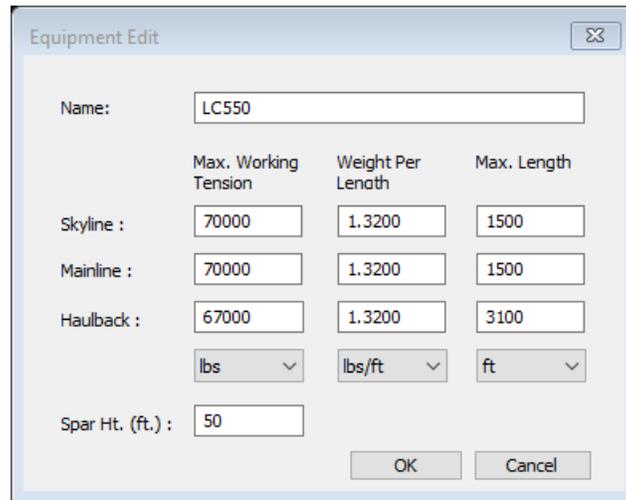


Figure 12-3: New equipment parameters in the *Equipment Edit* dialogue box.

- Skip this step if you do not want to change the default settings on this computer.* To avoid having to re-enter the custom equipment parameters for future projects, check the *Save as default* box in the *Equipment* dialogue box.
- Press *OK* to return to the main screen.
- Select *Cable-Analysis* tab in the ribbon bar, then click on the  *Logging Systems* button. The *Logging Systems* dialogue box shown in Figure 12-4 below will appear.

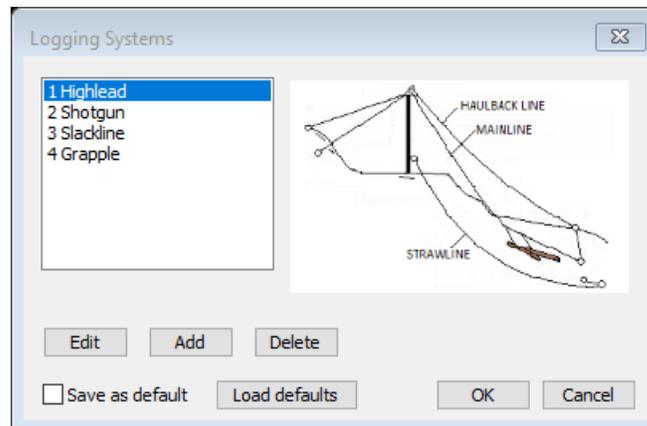


Figure 12-4: Logging Systems dialogue box.

8. Select *Add* to open the *Logging Systems* dialogue box.

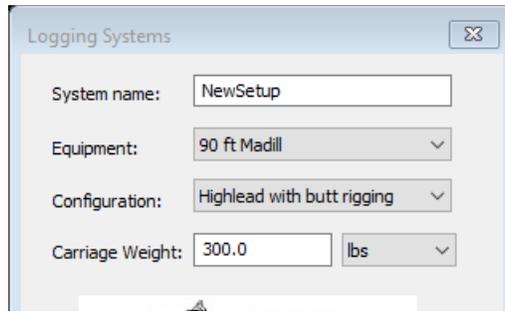


Figure 12-5: New Logging Systems dialogue box.

9. Change the parameters in the *Logging Systems* dialogue box to the parameters shown in the figure **Error! Reference source not found.** and press *OK* to return to the previous screen.

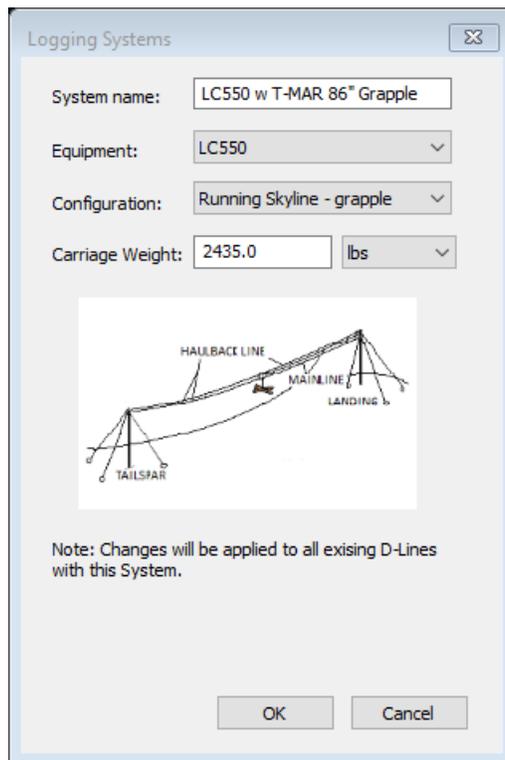


Figure 12-6: New parameters in the Logging Systems dialogue box

Note: A *Logging System* is the combination of *Equipment* (a yarder) and cable *Configuration*.

10. Skip this step if you do not want to change the default settings on this computer. To avoid having to re-enter system parameters for future projects, check the *Save as default* box in the *Logging System* dialogue box.
11. Press *OK* to return to the main screen.

12. Choose  **File** | **New**, do not save changes.

Cable Analysis on a Draped Feature

Once the desired equipment and logging system parameters have been entered you may start analyzing various cable roads for deflection, clearance, load, and tensions. In the following example you will analyze the deflection of a predefined cable road using the previously defined equipment and logging system.

1.  **File** | **Open** <Terrain>\Cable\CableAnalysis-1.terx.
2. Select the feature named *Deflection1-0* by clicking with the selection  cursor or by using the *Select - By name* function found in the *Home* ribbon.

The Profile window has been set up to display this *draped* feature (see *Properties* panel); the ground profile is defined by the surface model.

3. Select the *Cable-Analysis* tab in the ribbon bar, then click on the  **New** button. The *D-line System* dialogue box shown in Figure 12-7 will appear.

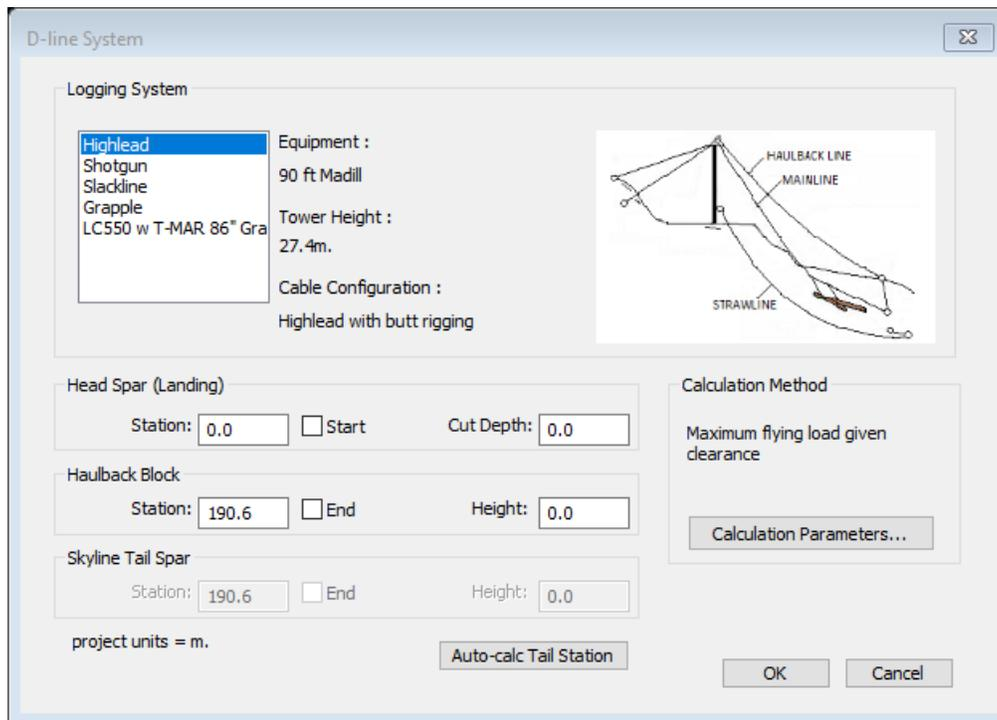


Figure 12-7: D-Line System dialogue box.

Note: The  **New**,  **Edit** and  **Delete** buttons in the *Cable-Analysis* ribbon operate on the *selected* features.

4. Press the *Calculation Parameters* button to open the *D-Line Calculation Options* dialogue box.

5. Change the parameters to match those shown in Figure 12-8 below (*Simple third point, 8% Deflection*) then press *OK* to return to the previous dialogue box.

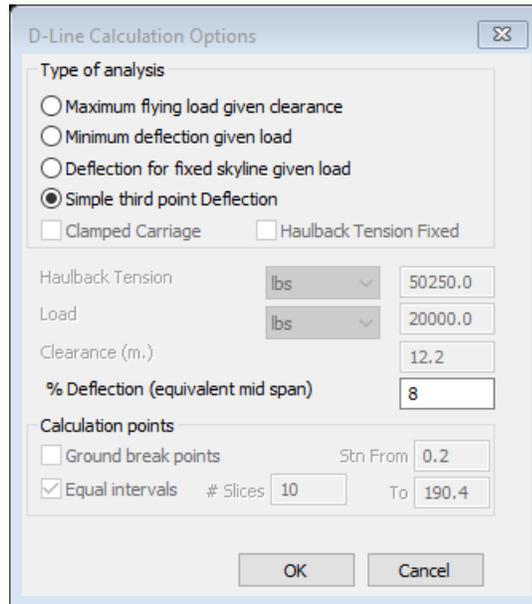


Figure 12-8: New parameters in the *D-Line Calculation Options* dialogue box.

6. In the *D-line System* dialogue box, change the parameters to those shown in Figure 12-9:
 - Select the correct Logging System.
 - Set *Head Spar* to use *Start* of feature.
 - Set *Haulback Block* to use *End*.
 - Set *Haulback Block Height* to **4.0**
 - Press *OK*.

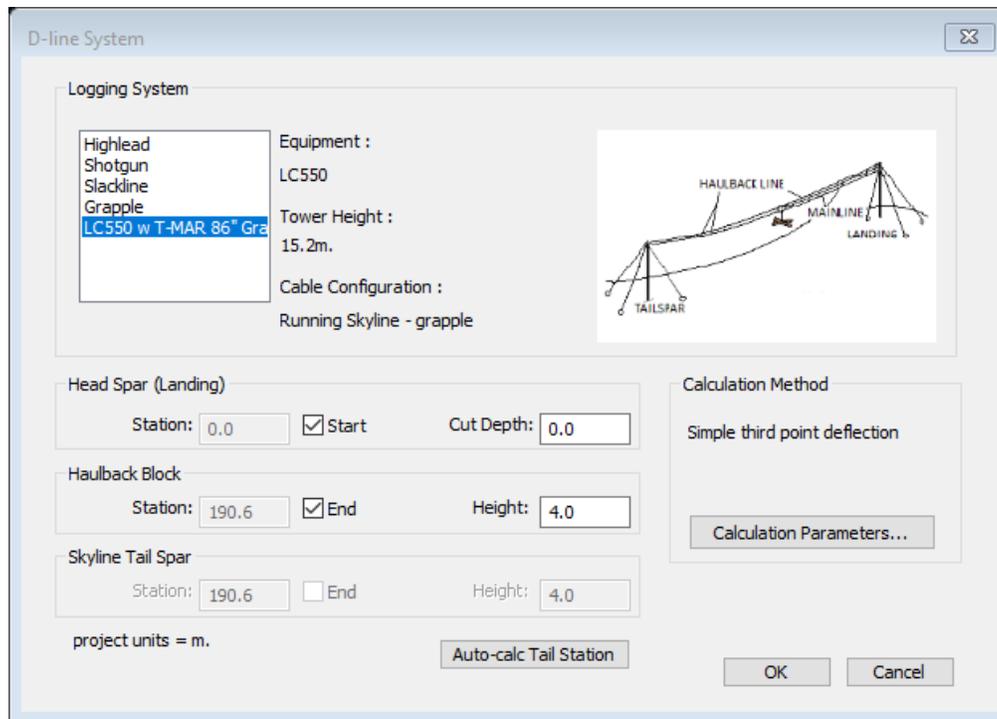


Figure 12-9: New parameters in the D-line system dialogue box

Note: In the *D-Line System* dialogue box, the location and height of the Head Spar, Haulback Block, and, if applicable, Skyline Tail Spar can be customized.

With the *Start* box checked in the *Head Spar (Landing)* section, the yarder will be placed at the start of the selected feature (usually station 0). Uncheck the *Start* box to specify the station explicitly. The *Cut Depth* value can be used to account for earthworks at the landing; use a negative value when fill has raised the landing elevation above the profile.

With the *End* box checked in the *Haulback Block* section, the block will be placed at the end of the selected feature. Uncheck the *End* box to specify the station explicitly. Alternatively, you can press the *Auto-calc Tail Station* button and the haulback block *Station* will be set to the furthest position where the deflection line clears the ground (clearance can be set by pushing the associated \pm button). The haulback block *Height* can also be specified.

The Skyline Tail Spar parameters are configured in the same manner as the Haulback Block parameters

In both the plan and profile view, a D-line is shown that does not clear the reference surface as it first contacts the ground near station 0+065. This ground interference is shown as intersecting lines in the profile view and by the change from a green to red in the plan view as shown in Figure 12-10.

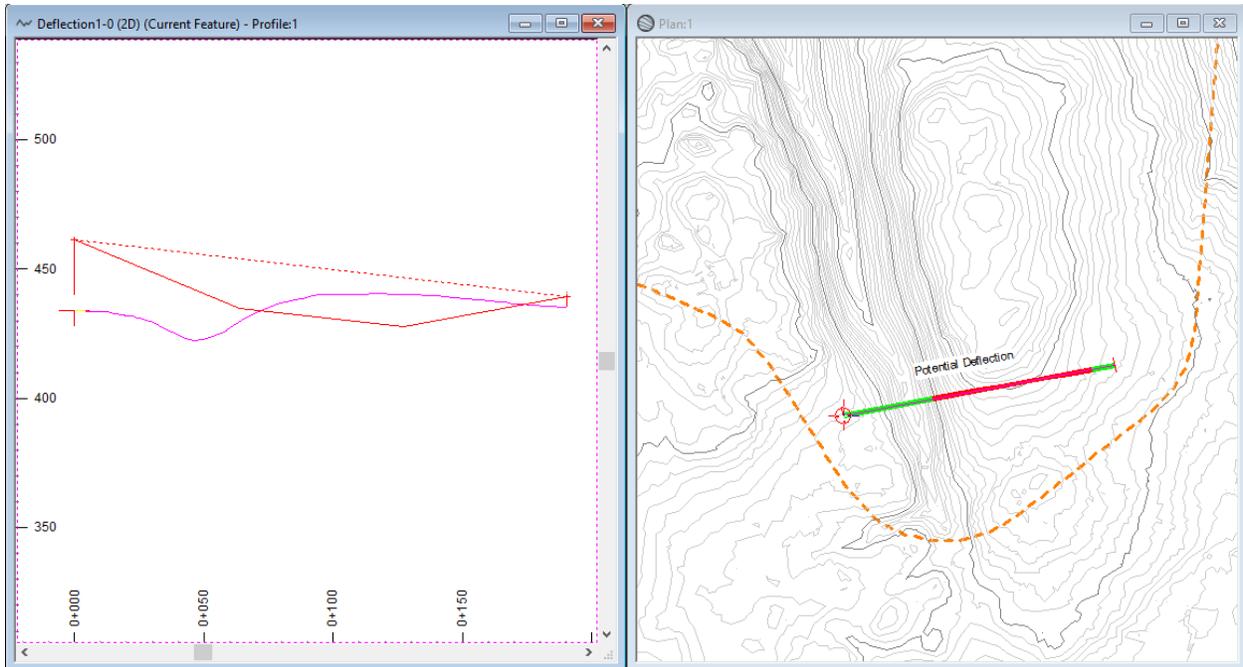


Figure 12-10: Profile and plan views showing the analyzed D-Line configuration

7. To modify the displayed D-Line configuration press  *Edit* in the *Cable-Analysis* ribbon.
8. In the D-Line System dialogue box, press *Auto-calc Tail Station* to set the haulback block at the furthest station where the deflection line clears the ground. Then press *OK*.

The resulting view in the main screen should be similar to the image in Figure 12-11 below.

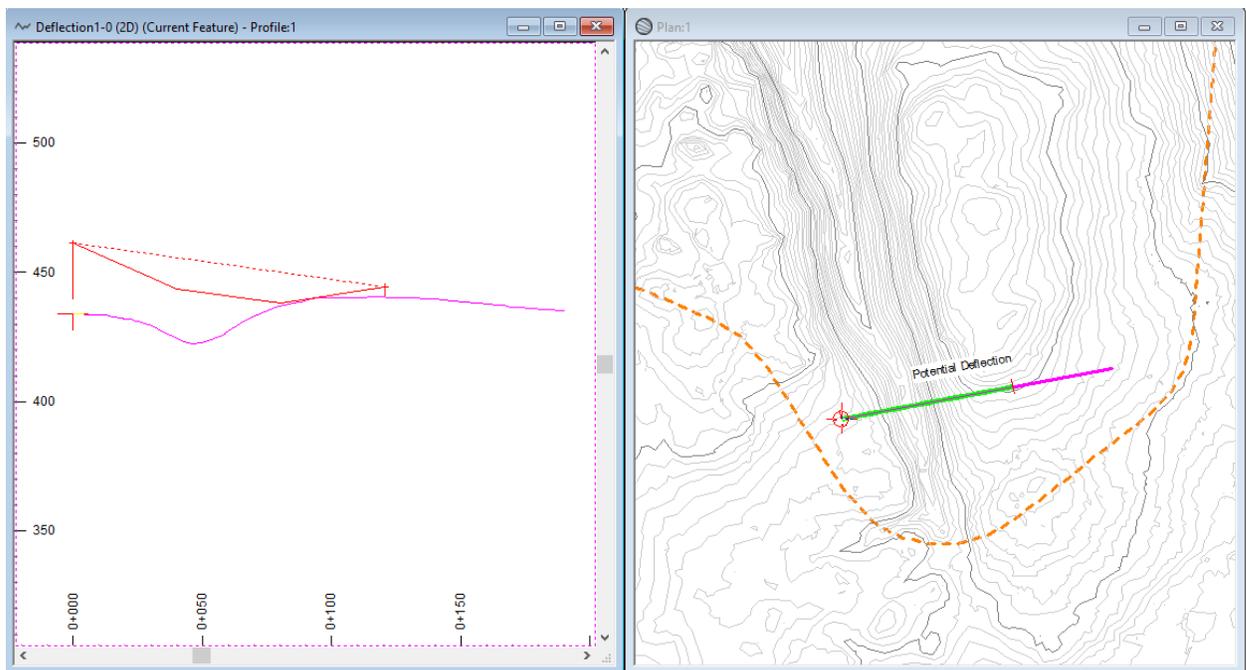


Figure 12-11: Profile and plan views showing the re-analyzed D-Line configuration.

It is possible to move or duplicate the feature in the Plan window to examine the deflection at other locations.

9. *Optional:* Move the end points of the Deflection1-0 feature and notice how the Profile updates to show the new ground profile.
 - Press  *Edit* in the *Cable-Analysis* ribbon.
 - Press *Auto-calc Tail Station*.
 - Press *OK* to see the new tail position.

Note: The example above uses simple third point deflection to approximate cable deflection, but 3 other analysis methods are available for cable analysis in the software. The functionality of the four methods is summarized below:

Maximum Flying Load Given Clearance

You define the carriage clearance from ground (which defines the deflection at each calculation point) and the computer calculates the maximum load that can be lifted at each point. The load is limited by the working tensions in the cables.

This analysis shows the largest payload that can be lifted to a given height above ground. Although a large load may be lifted near the tail hold, it may not be possible to transport it back to the landing.

Note that no load can be lifted above the tight skyline position (chord) so some points may be impossible to calculate and will be left out of the results.

Minimum Deflection Given Load

You define the load and the computer finds the minimum deflection possible to lift the load without exceeding the working tensions of the cables.

This analysis is used to simulate the transport of the load to the landing when the skyline or haulback is dynamically adjusted; appropriate for a *running skyline*. The carriage location shows the maximum possible clearance.

Deflection for Fixed Skyline Given Load

You specify the midspan deflection and load, the computer calculates the cable tensions and actual deflection for all the calculation points. Cables are allowed to exceed their working tensions.

This analysis is used to simulate the transport of the load to the landing when the skyline is fixed. The carriage location information shown in the Profile window is similar to the results of a chain and board analysis.

Simple Third Point Deflection

A specified deflection is applied at the two third points on the proposed D-Line to produce a simple geometric representation of the system. There is no calculation of tensions or loads.

10. *Optional:* Experiment with some of the other calculation types:

- Press  *Edit* in the *Cable-Analysis* ribbon.
- Press the *Calculation Parameters* button.
- Set a *Type of analysis* and modify parameters of interest.
- Press *OK* to see the new calculation.

11. Choose  *File* | *New*, do not save changes

Exploring Multiple Areas of Deflection

The *Explore Deflection* tool was created to explore multiple cable roads from a single point (usually a landing). This tool builds upon the concepts previously introduced and can be used to instantly analyze deflection in multiple directions from a single point. The following example will show you how to configure and use the *Explore Deflection* tool.

1.  *File* | *Open* <Terrain>\Cable\CableAnalysis - 1.terx.
2. In the *Cable-Analysis* tab press the  *Enable* button (this button is only available if the Plan window is active – click in the Plan title bar to activate). The *D-Line Explore Options* dialogue box will appear as shown below.

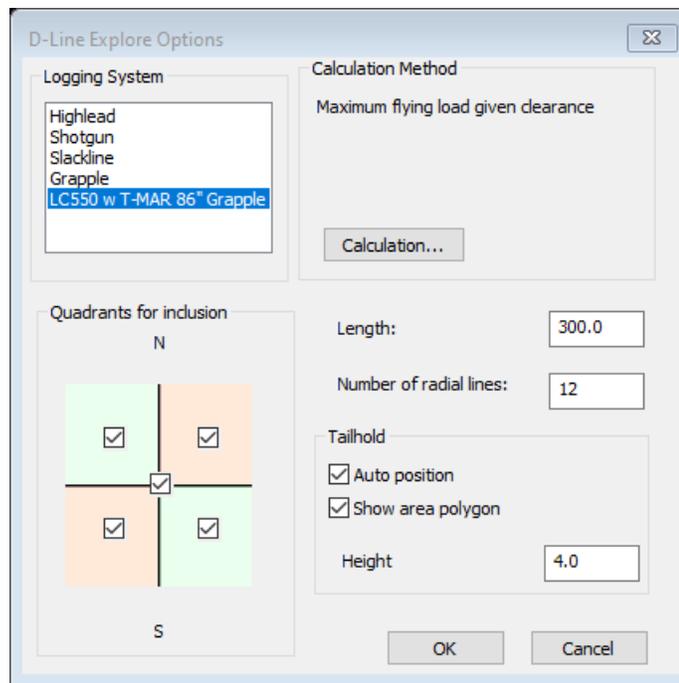


Figure 12-12: The *D-Line Explore Options* dialogue box.

3. Ensure the settings match those shown above:
 - Select the *Logging System*.
 - Set *Length* to **300**, the *Number of radial lines* to **12**.
 - Set both *Auto position* and *Show area polygon*.

Set the *Tailhold Height* to **4.0**.

Note: The D-Line Explore Options can be customized to suit your project.

The *Logging System* list shows the systems previously defined (See Adding Custom Equipment and Logging Systems). Select whichever logging system is appropriate.

The *Quadrants for inclusion* indicate where to draw exploratory D-Lines. If you turn off a check box, the associated quadrant will not contain D-Lines.

The *Length* is the maximum distance from the landing D-Lines may extend.

The *Number of radial lines* indicates the number of D-Lines that will be drawn from the landing (assuming lines are to be drawn in all quadrants).

The *Tailhold* options have 3 components, *Auto position*, *Show Area Polygon*, and *Height*.

The *Auto position* checkbox indicates where the tailhold will be located. If the box is checked the tailhold will be placed at the last station along the proposed line where minimum clearance is maintained (clearance can be set by pushing the associated \pm button). If it is not checked, the tailhold will be placed at the end of the proposed D-Line (defined by *Length*).

If the *Show area polygon* box is checked a polygon will be drawn connecting the points where ground clearance exists back to the landing on the proposed lines. This may be used to approximate the yardable area.

The *Height* option indicates the height above ground where the tailhold will be attached.

4. Press the *Calculation* button and the *D-Line Calculation Options* dialogue box will appear as shown in Figure 12-13:

Figure 12-13: The *D-Line Calculation Options* dialogue box

5. In the *D-Line Calculation Options* dialogue box, change the type of analysis to *Minimum deflection given load* and set the load to 20000 lbs. as shown above. Leave the remaining settings as their default values.
6. Press *OK* to return to the *D-Line Explore Options* dialogue box; press *OK* again to return to the main screen.

- In the Plan view, the cursor symbol ✱ will have changed. Click near the center of the top surface to see radial D-Lines extending out from that point as shown in Figure 12-14.

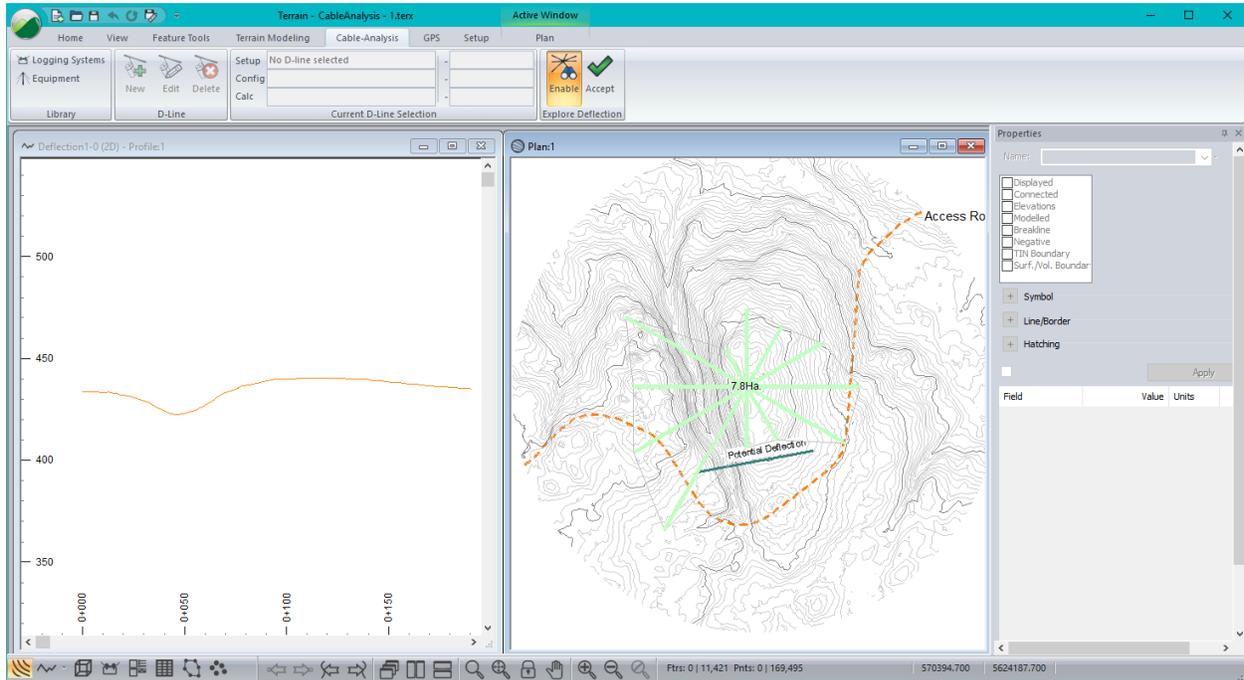


Figure 12-14: View of the Explore Deflection tool in use.

In the Plan view, the green lines extending out from the chosen point indicate the maximum distance that clearance is maintained while using the assigned parameters. You can click again at another location and the radial lines are updated to reflect the conditions at the new site.

- Click again near the edge of the surface so that some of your 300m D-Line features fall off the model. You will be prompted with the message below (unless you have already disabled it). Set the *Don't display this message again* check box, then press OK, to prevent future warnings in this session.

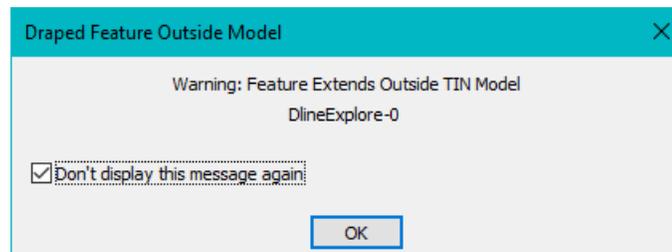


Figure 12-15: Draped feature warning

- Continue clicking in the Plan window until you find a location you would like to save. Then press the  Accept button in the Cable-Analysis ribbon.

This will save the radial lines as new features in the terrain file and they will no longer appear faded. All the new features are named "DL_Explore" and are numbered sequentially from the easternmost ray in a counter-clockwise direction. An example is shown below in Figure 12-16.

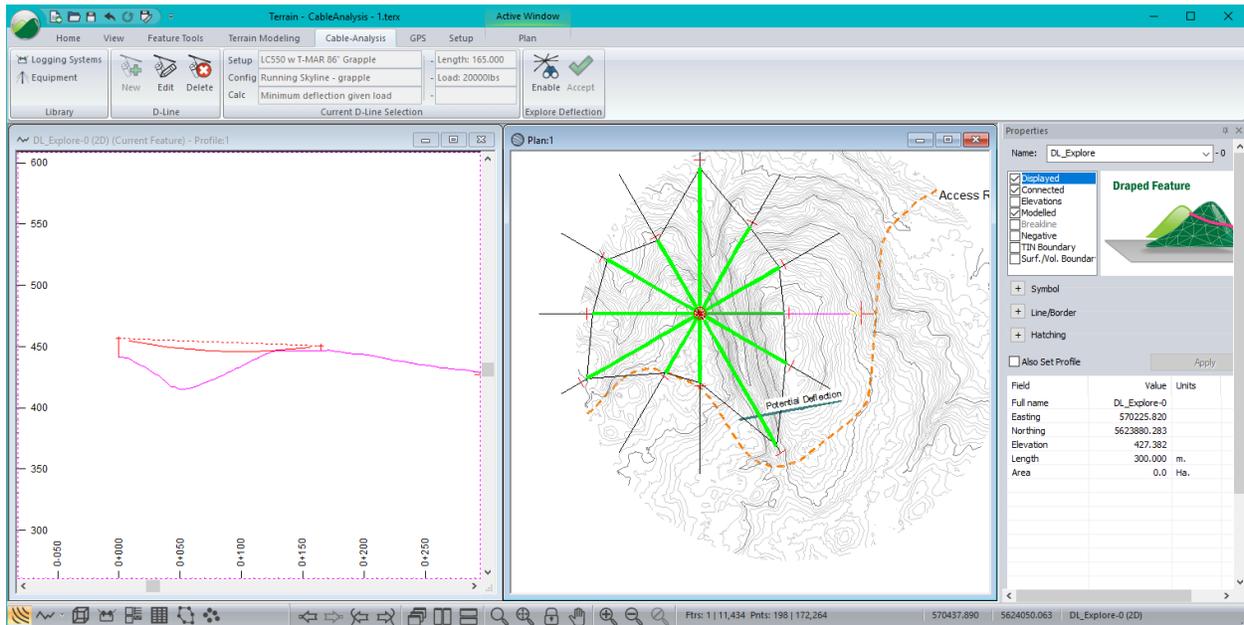


Figure 12-16: Radial lines as they are displayed after accepting an *Explore* operation.

10. Select one of the new radial lines. Click on a feature using the selection  cursor or use *Select - By name* found in the *Home* ribbon.

Note: Avoid selecting the end point of a feature that is outside the topo surface as this will scroll the Profile off the screen. Use the *Previous* and *Next Point* buttons  to scroll all windows to show this point. These buttons can be found in the status bar at the bottom of the screen or in the *Profile* or *Plan* ribbon tabs.

11. *Right-click* in the Profile window and select *Active window (profile) options*. This will open the dialogue box shown in the figure below.

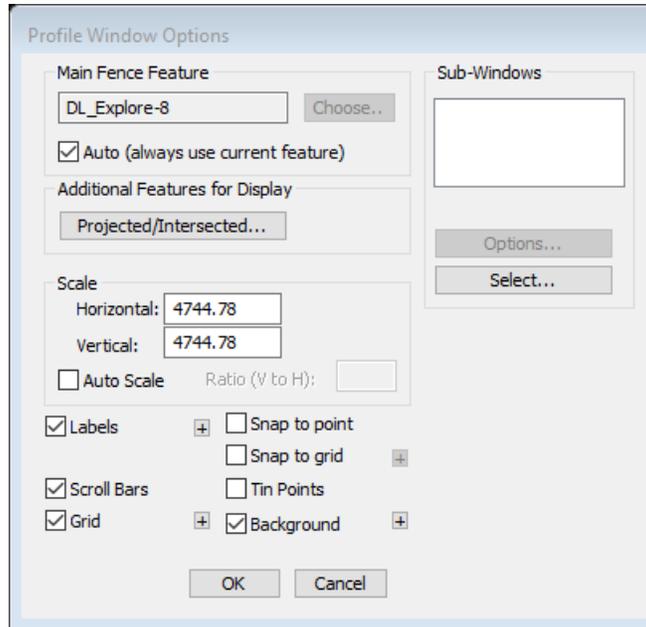


Figure 12-17: Profile Window Options dialogue box with Auto checked for the Main Fence Feature.

12. In this example, the *Auto (always use current feature)* checkbox is set. Press *OK* to return to the main screen.

13. Select another *DL_Explore* feature and the Profile window will update to show it.

If you wish to edit the cable system used in one or more D-Lines, you must select the associated feature(s) then press the  *Edit* button in the *Cable-Analysis* ribbon.

14. Choose  *File* | *New*, do not save changes.

The Cable Data window and Profile Sub-windows

More detailed calculation information can be displayed in the Cable Data window and Profile *Sub-Windows*. In this example we are using the *Minimum deflection given load* calculation type (figure **Error! Reference source not found.**) so values such as cable tension are calculated.

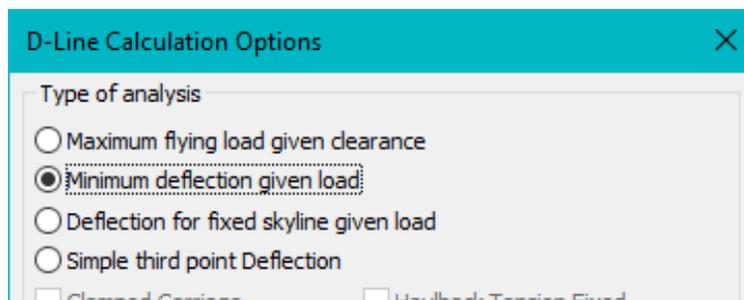


Figure 12-18: D-Line Calculation Options dialogue showing the four calculation types

If you choose *Simple third point Deflection*, only geometric values such as ground clearance are calculated.

Configuring the Cable Data Window

The Cable Data window shows numeric D-Line information in a tabular format. The following steps show how to create and configure a Cable Data window.

1.  *File* | *Open* <Terrain>\Cable\CableAnalysis - 2.terx.
2. To add a cable data window, select the *View* ribbon, click the *New Window* drop down and select *Cable Data*. A blank Cable Data window will appear.
3. Right click in the new Cable Data window and select *Active Window (Cable Data) Options*. The D-Line Data Options dialogue will appear as shown in the figure below.

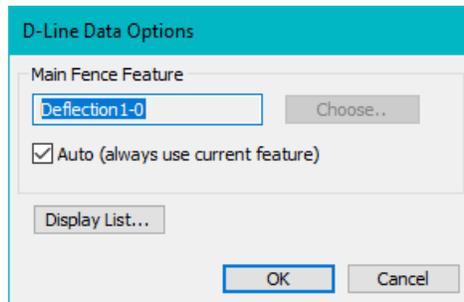


Figure 12-19: D-Line Data Options dialogue with Auto checked for the Main Fence Feature.

4. To automatically show data for the selected D-Line, ensure the Auto (always use current feature) check box is set (similar to the Profile window options).
5. Press the Display Lists button to show the dialogue box below.

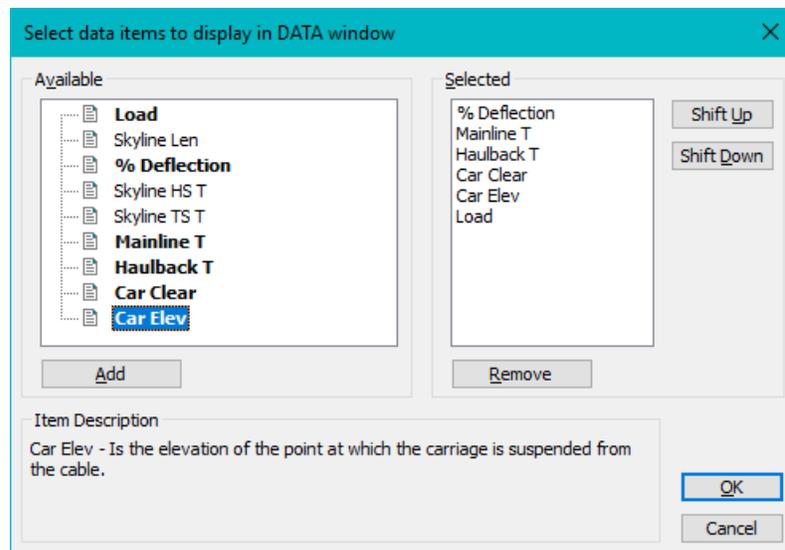


Figure 12-20: Example configuration in Select data items to display in DATA window.

6. Select the items shown in the figure above:
 - Select an item in the *Available* list then press the *Add* button to add it to the *Selected* list (or just double click in the *Available* list)
 - Press the *Shift Up* or *Shift Down* buttons to change the order displayed.
 - Select an item in the *Selected* list then press the *Remove* button to delete it (or just double click in the *Selected* list).
7. Press *OK* twice to return to the main screen.

The *Cable Analysis Data* window will appear with the data items appearing as rows and the columns showing the sampled stations. The station columns are based on the calculation points specified in *D-Line Calculation Options*.

Station (m.)	8.4	24.9	41.3	57.8	74.3	90.7	107.2	123.7	140.1	156.6
% Deflection	1.9	3.1	3.7	4.1	4.3	4.3	4.1	3.8	3.1	1.9
Mainline T (lbs)	70000	69000	69000	68000	68000	68000	67000	67000	66000	66000
Haulback T (lbs)	67000	67000	67000	67000	67000	67000	67000	67000	67000	67000
Car Clear (m.)	14.8	20.9	31.2	31.8	24.2	16.3	8.4	1.2	1.1	3.1
Car Elev (m.)	454.5	451.6	449.4	447.7	446.5	446.0	446.0	446.5	447.7	449.4
Load (lbs)	20000	20000	20000	20000	20000	20000	20000	20000	20000	20000

Figure 12-21: Cable Data window w

Note: Tensions and load are rounded to the nearest 1000.

In this example, the maximum tensions for the Mainline and Haulback are 70,000lbs and 67000lbs respectively (defined using the *Cable Analysis* ribbon, *Equipment* button). For *Minimum deflection given load* analysis, the load is constant, and the maximum tension allowed in the Mainline or Haulback is applied to minimize deflection. In the first sample at (station 8.4), both cables are at maximum tension; for the rest of the samples, the Haulback maximum tension is the limiting the system.

Adding Profile Sub Windows

Some of the information displayed in the data table above can also be displayed graphically as *Sub Windows* in the Profile view. The following steps will add sub windows to your Profile.

8. Right click in the profile window and select *Active Window (Profile) Options* and the *Profile Window Options* dialogue box will appear as shown in Figure 12-22 below.

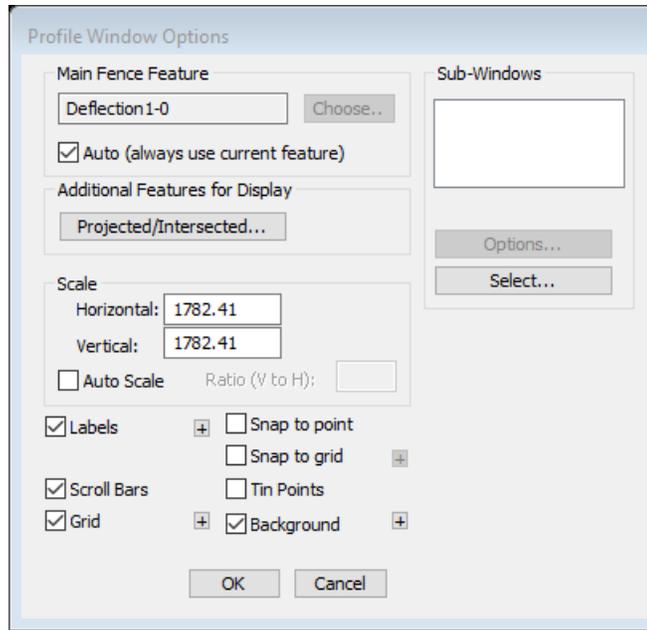


Figure 12-22: The Profile Window Options dialog box.

9. In the Sub-Windows portion of the dialog box press Select to open the dialog box shown below in Figure 12-23

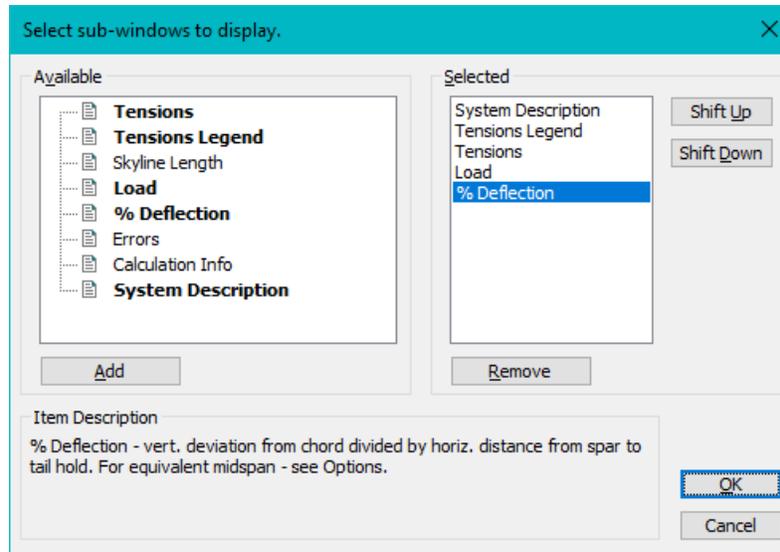


Figure 12-23: The Select sub-windows to display dialog box.

10. Select the five items shown in the figure above.
11. Press OK twice to return to the main screen.

The resulting profile window should appear similar to the window shown in Figure 12-24 below.

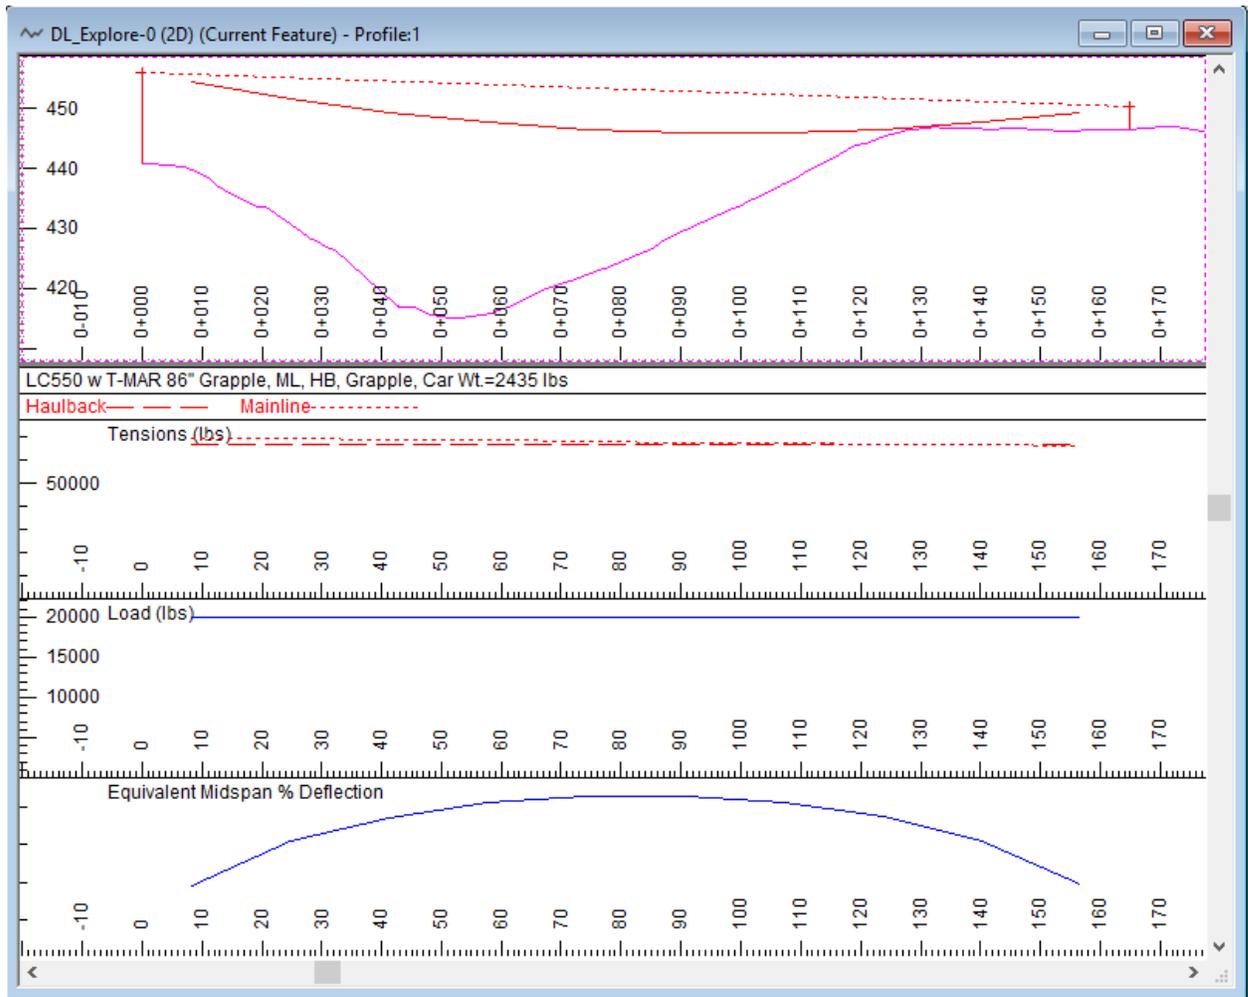


Figure 12-24: The Profile Window with Sub-Windows displayed.

12. Resize the main Profile window to make room for the Sub-Windows:

- Move your mouse cursor over the grey divider bar under the main Profile window and above the Sub-Windows; the cursor will change to a vertical double-headed arrow.
- Click and drag to change the position of the divider.

13. Right click in the Profile window and select *Active Window (Profile) Options* to re-open the *Profile Window Options* dialogue below.

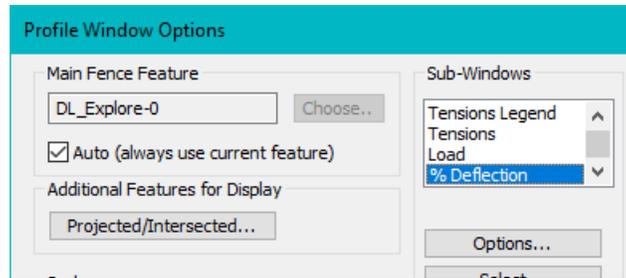


Figure 12-25: The *Profile Window Options* dialogue box with a *Sub-Window* selected.

Many *Sub-Windows* have additional display options.

14. Select *% Deflection* in the *Sub-Windows* list (scroll to the bottom) then press the *Options* button to open the dialogue box shown below.

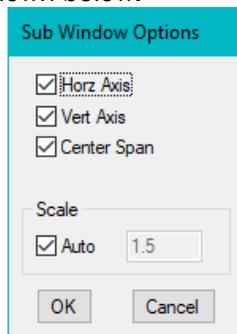


Figure 12-26: *Sub Window Options* dialogue box for *% Deflection*.

Note: The check boxes for *Horz Axis* and *Vert Axis* turn axis labeling on and off; as the horizontal axis is the same for the main profile and all the graphical *Sub-Windows*, you may want to turn it off.

When *Center Span* is set (the default), the value reported is the equivalent center span deflection for the calculated skyline length at the sample point. In other words, the deflection you would get if you took the same cable length and put the load at the center of the span. This is essentially an alternate measure of cable length between tower and tail (see also *Skyline Length Sub-Window*).

When *Center Span* is clear, the actual deflection at the sample point is reported.

15. Make any changes you want and then press *OK* twice to return to the main screen.
16. *Optional:* Experiment with different calculation types and settings (*Cable Analysis* ribbon,  *Edit, Calculation Parameters* button).
17. Choose menu  *File | New*, do not save changes

Single Deflection Line Output Sheets

So far, we have covered how to analyze cable roads and explore multiple areas for deflection but we have not covered producing formatted drawings to communicate the D-line analysis to others. This example will address how to produce drawings which include illustrations of several view windows, and/or data tables. We will use the *Multi-plot* functionality to produce drawings.

New Multi-plot layouts can be created from scratch (see Chapter 3), however in this example you will create a D-Line output sheet using a previously created multiplot screen layout.

1.  File | Open <Terrain>\Cable\CableAnalysis - 3.terx.
2. In the View ribbon, Screen Layout area, choose Training\Training Single DLine MP.ilt.

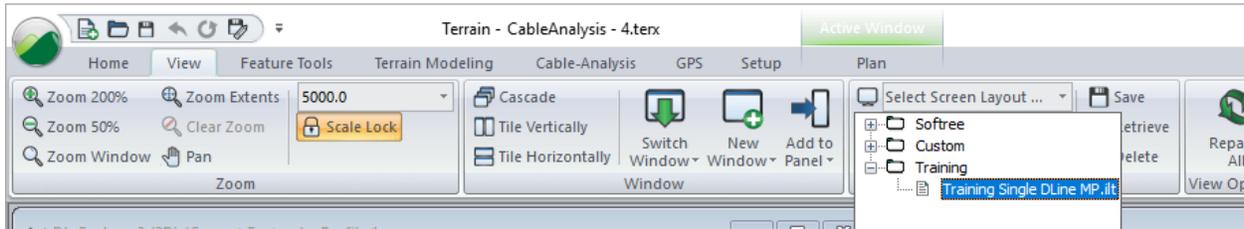


Figure 12-27: Screen layout drop down showing the training folder created during Tutorials install.

When you open a Terrain screen layout, window positions and display options are read from the layout file. In this case:

- Profile Sub-Windows were set up.
- A Cable Data window was created and configured.
- A 3D window was created.
- A Multi-plot window was created and configured
- Windows were arranged in a tile pattern.

Your screen will now appear similar to Figure 12-28.

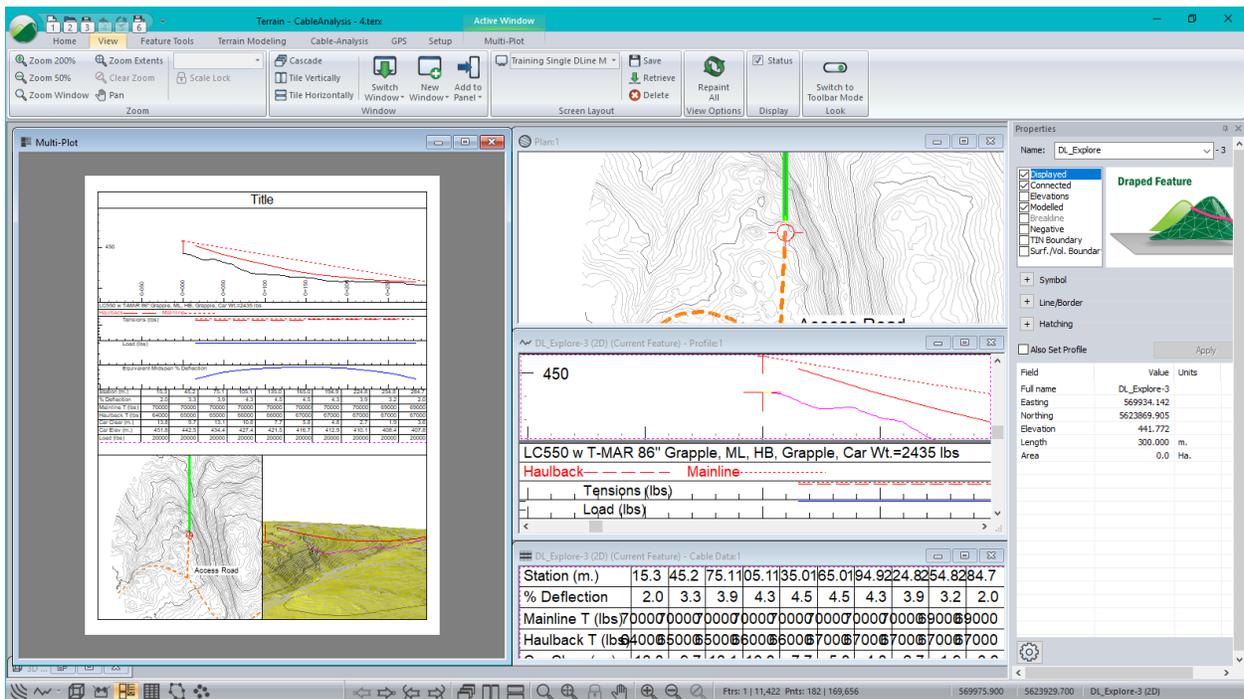


Figure 12-28: Multi-plot window set u using Example Single DLine MP.ilt screen layout.

Note: Screen layout files are designed to be used in different projects; some settings may need to be customized before you are ready to print.

18. If your page does not match the shape of the Multi-plot contents, choose  *File | Print Setup* and change your *Printer* and/or printer *Properties* to use a *Letter* (or *A4*) sized page in *Portrait* mode.

The Profile sub-view does not include the entire deflection line being analysed. In the following steps, you will adjust the Profile display.

19. Select the main Profile window (on the right-hand side of the screen) scroll or pan and note that the corresponding Sub-view in the Multi-plot window also scrolls. Try to get the D-Line centered in the window.
20. Right click in the Profile Sub-view in the Multi-plot window (on the left-hand side of the screen) and choose *Profile 1 Sub-view Options* from the context menu (double click also works). The options dialogue box below will appear.

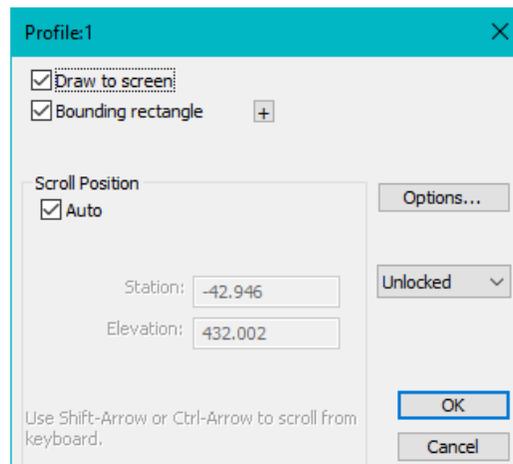


Figure 12-29: Profile Multi-plot Sub-view options

21. Clear the *Auto* check box and note that you can now define *Station* and *Elevation*. This will make the Multi-plot profile independent.
22. Press the *Options* button to show all the options shared with the main Profile window. Press *Cancel* to close this dialogue box

Note: The *Sub-views* in the Multi-plot window display the same settings as the corresponding main window; the options are shared. You can access the shared options from the *Options* button in the Sub-view Options dialogue box or directly from the main window options.

23. Press the *OK* button to close the *Profile Sub-view options*.

Now you can scroll the main Profile window without affecting the Multi-plot. It is also possible to scroll the Multi-Plot Profile window using the keyboard:

24. Click in the Multi-Plot window to select the Profile Sub-view. Then type *<shift-arrow>* and notice that the Profile Sub-view scrolls (direction depends on which arrow key you type).

Similar controls exist for the Plan Sub-view.

25. Click in the Multi-Plot window to select the Plan Sub-view. Then type <shift-arrow>. You will be prompted with the message shown below:

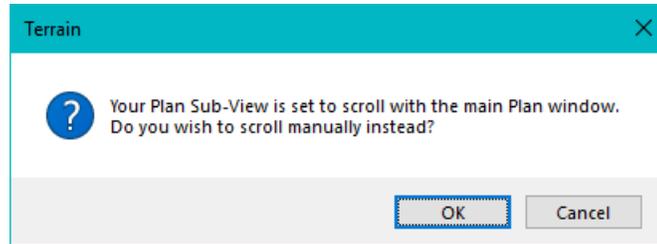


Figure 12-30: Prompt to turn off Auto Scroll Position in a Plan Sub-view.

26. Respond *OK*; this is the same as clearing *Auto Scroll Position* in the *Plan Sub-view options* dialog box.
27. Scroll the deflection line to the center of the window using <shift-arrow> keys.
28. Type <ctrl-arrow> a few times and note that you can also *rotate* the Plan Sub-view.

You may want to display a North arrow in the Plan window if you change the rotation.

Note: It is not recommended that you save a Multi-Plot screen layout with explicit *Scroll Position* settings; use *Auto* instead. If the screen layout were saved at this point, the *Profile* Sub-view would be saved with an explicit *Station* and *Elevation*, similarly the *Plan* Sub-view would be centered on a particular (X, Y) coordinate. If you opened such a screen layout in another project, it is likely that the *Profile* and *Plan* Sub-views would be empty.

In this example screen layout, the Multi-plot title is just a placeholder.

29. Change the title to something more appropriate:
 - *Double-click* on “Title” in the Multi-plot or use the right click context menu to open the *Rectangle* Sub-view options.
 - Change the text to something appropriate. Note the other options available for the *Rectangle* Sub-view.
 - Press *OK* to close the dialogue box.
30. To print or export, select the Multi-plot window and choose  *File | Print Active Window*. Then select your desired printer or PDF writer. Press *Cancel* to exit the *Print dialogue* box.
31. Choose  *File | New*, do not save changes.

Multiple Deflection Lines on a Single Output Sheet

Often users prefer to show several deflection lines on one output sheet. This can be accomplished by creating several *Profile* windows displayed in *Multi-plot*:

1.  *File | Open* <Terrain>\Cable\CableAnalysis - 2.terx
2. In the *View* ribbon, *Screen Layout* area, choose *Training\ Training Multiple DLine MP.ilt*.

Your screen will now look similar to the figure below.

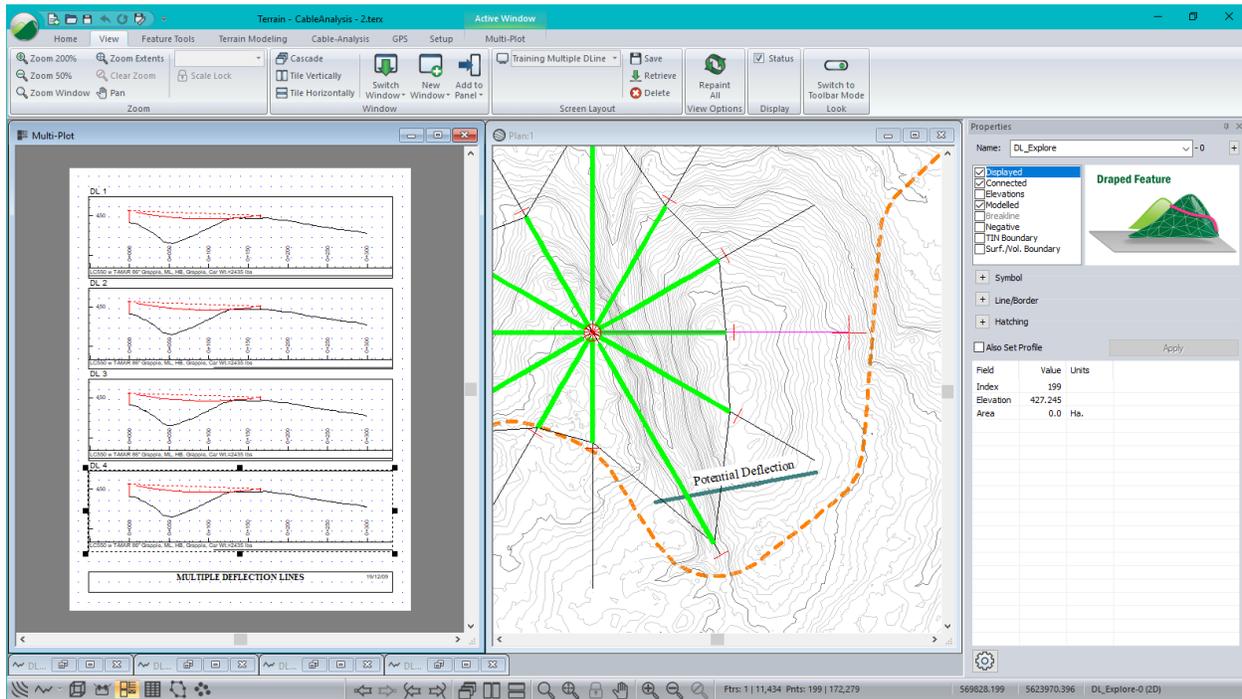


Figure 12-31: Right after reading the Training Multiple DLine MP.ilt screen layout

- If your page does not match the shape of the Multi-plot contents, choose  **File | Print Setup** and change your *Printer* and/or printer *Properties* to use a *Letter* (or *A4*) sized page in *Portrait* mode.

Note that there are four *Profile* Sub-views in the Multi-plot and there are four corresponding Profile windows minimized at the bottom of the screen. Also note that all the Profiles are the same; they are all set up to display the current feature (if there was nothing selected, they would be blank). It is impractical to save a screen layout with Profile feature names defined as these names will change from project to project. Refer to the exercise above, Single Deflection Line Output Sheets, for more information on Multi-plot screen layouts.

In the following steps we will choose which deflection line features are displayed in the four Profile windows.

- The D-Line feature pointing due East (DL_Explore-0) should already be selected. If it is not, select it by clicking with the selection  cursor in the Plan window or by using the *Select - By name* function found in the *Home* ribbon.
- Right click on the top *Profile* Sub-view and choose menu *Profile 1 Sub-View Options* (or double click) to open the Profile Multi-plot Sub-view options dialogue box.
- Press the *Options* button to open the shared *Profile Window Options* dialogue (Figure 12-32 below).

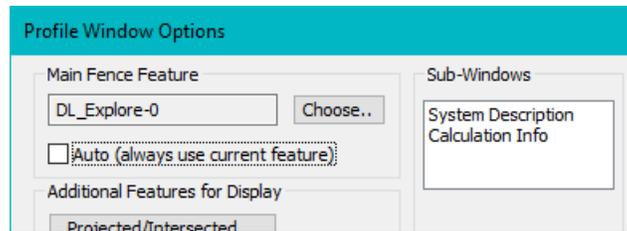


Figure 12-32: Profile Window Options with an explicit fence feature.

7. Clear the *Auto* check box to lock in the *Main Fence Feature* name (as shown in the figure above). If you don't have the right feature selected, you can press the *Choose* button to select the feature by name.
8. Press *OK* to return to the Sub-view options dialogue box.

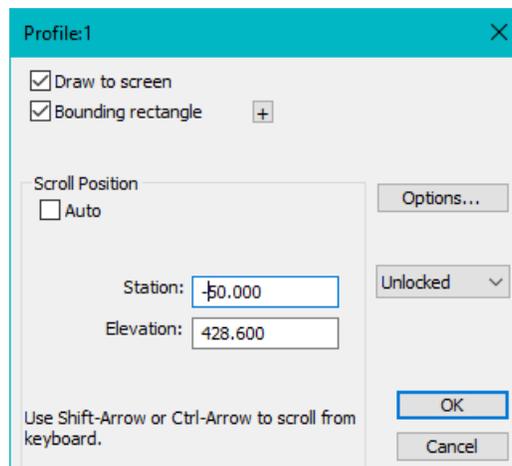


Figure 12-33: Profile Multi-plot Sub-view options with an explicit Scroll Position

9. Clear the Scroll Position *Auto* check box and set the *Station* to **-50** as shown above.
10. Press *OK* to return to the main screen.

Now you have the first Profile set up.

11. Repeat the previous steps to set the other *Profile* Sub-views to display the three D-Line features counterclockwise from the first one (DL_Explore-1, DL_Explore-2 and DL_Explore-3).

As in the **Single Deflection Line Output Sheets** example above, you may want to modify settings or content for other sub-windows before printing.

12. Choose  *File* | *New*, do not save changes.

Approximating Multi-Span Cable Yarding Scenarios

For some terrain, cable yarding with intermediate supports is the best solution. The Cable Analysis module does not handle such multi-span setups directly. However, it can be used to illustrate an approximation of a proposed multi-span logging configuration. To do that, each span is treated as an individual logging system and the two displays are overlaid using the Multi-plot window. This method uses several techniques introduced previously, most prominently creating a new logging setup and displaying multiple deflection lines in a multiplot. The example below provides more details regarding the necessary workflow to illustrate a multi-span cable logging configuration.

1.  **File | Open <Terrain>\Cable\CableAnalysis - 4.terx.**

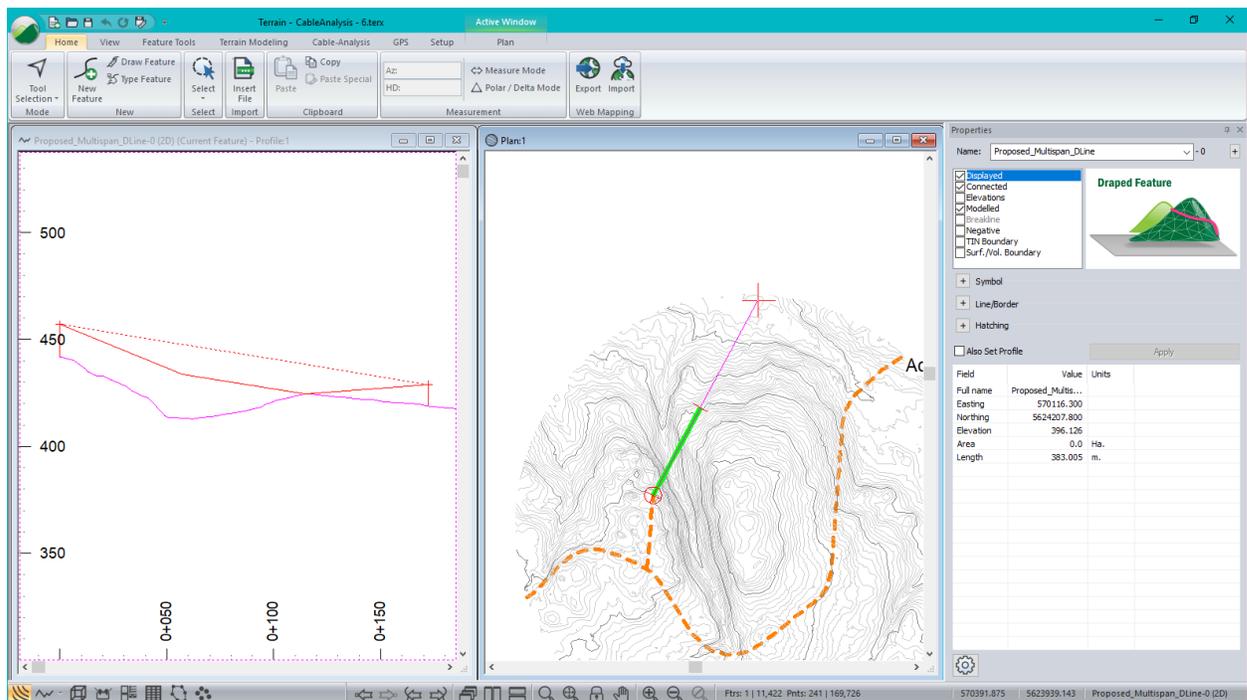


Figure 12-34: Terrain document containing proposed multi-span deflection line road.

This file already contains a proposed cable road named Proposed_Multispan_DLine-0. The Profile window shows this feature with a simple third-point deflection analysis using 8% sag and a backspar height of 10m.

2. Add a new piece of *Equipment* to represent the intermediate support for the multi-span setup:
 - Press the  Equipment icon in the *Cable-Analysis* ribbon to open the *Equipment* dialogue box.
 - Press *Add* to open the *Equipment Edit* dialogue.
 - Change the *Name* to **10m Intermediate support** and the *Spar Ht.* to **32.8 ft (10m)**.

Note: The software will not account for the effect the interim support will have on forces in the proposed cable logging system, for that reason it is recommended that only simple third-point deflection is used in this approximation. If simple 3-point deflection is used, the only equipment variable that effects the analysis is the spar height.

- Press *OK* twice to return to the main screen.
3. Create a new *Logging System* to represent the intermediate support:
 - Press the  *Logging System* button in the *Cable-Analysis* ribbon to open the *Logging Systems* dialogue box.
 - Select the *LC550 w T-MAR 86" Grapple* system then press the *Add* button to open the *Edit Logging System* dialogue box with a copy of the selected system.
 - Change the *System name* to **10m Intermediate support syst.**
 - Change the *Equipment* to the recently added *10m intermediate support*.
 - Press *OK* twice to return to the main screen.
 4. Lock the feature name for the existing Profile fence (as in the Multiple Deflection Lines on a Single Output Sheet example):
 - Right click in the Profile window and choose menu *Active Window (Profile) Options*.
 - Clear the *Auto* check box to set the *Main Fence Feature* to **Proposed_Multispan_DLine-0**
 - Press *OK* to go back to the main screen.

Only one D-Line analysis can be attached to a feature. For that reason, a duplicate of the feature must be created to show multiple analysis scenarios on the same profile. In this example the second scenario will represent the second span in our multi-span analysis.

5. Make a copy of the D-Line feature:
 - Make sure that feature *Proposed_Multispan_DLine-0* is the only feature selected.
 - In the plan view, right click and *Copy* this feature.
 - Right click *Paste*.

All the new feature attributes will be copied from the original, but the feature name will change to *Proposed_Multispan_DLine-1*. Now we need a new Profile window to display this feature.

6. Create a new Profile window and check the display options:
 - Choose View ribbon, *New Window* and select *Profile*.
 - Right click in the new Profile window and choose menu *Active Window (Profile) Options*.

Note: When you create a new Profile window it copies the options as the previous Profile window, but it displays the *current* feature (in this case *Proposed_Multispan_DLine-1*)

- Confirm that the *Profile Window Options* match those in the figure below.
- Press OK to close and return to the main screen.

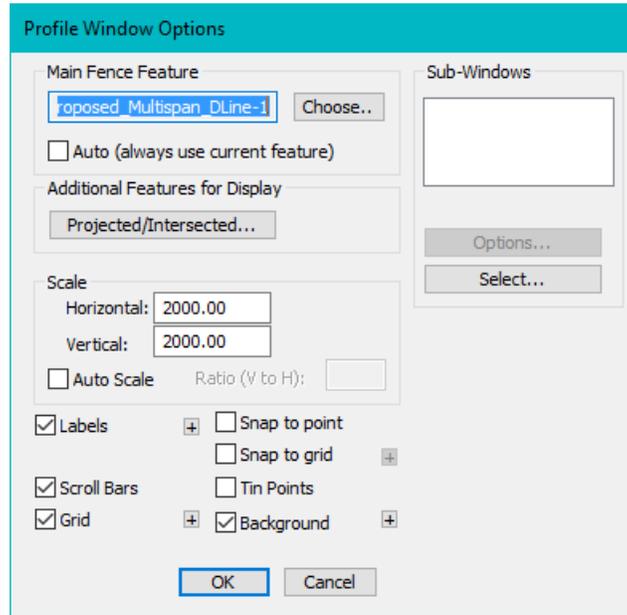


Figure 12-35: Profile Window Options for the second Profile window.

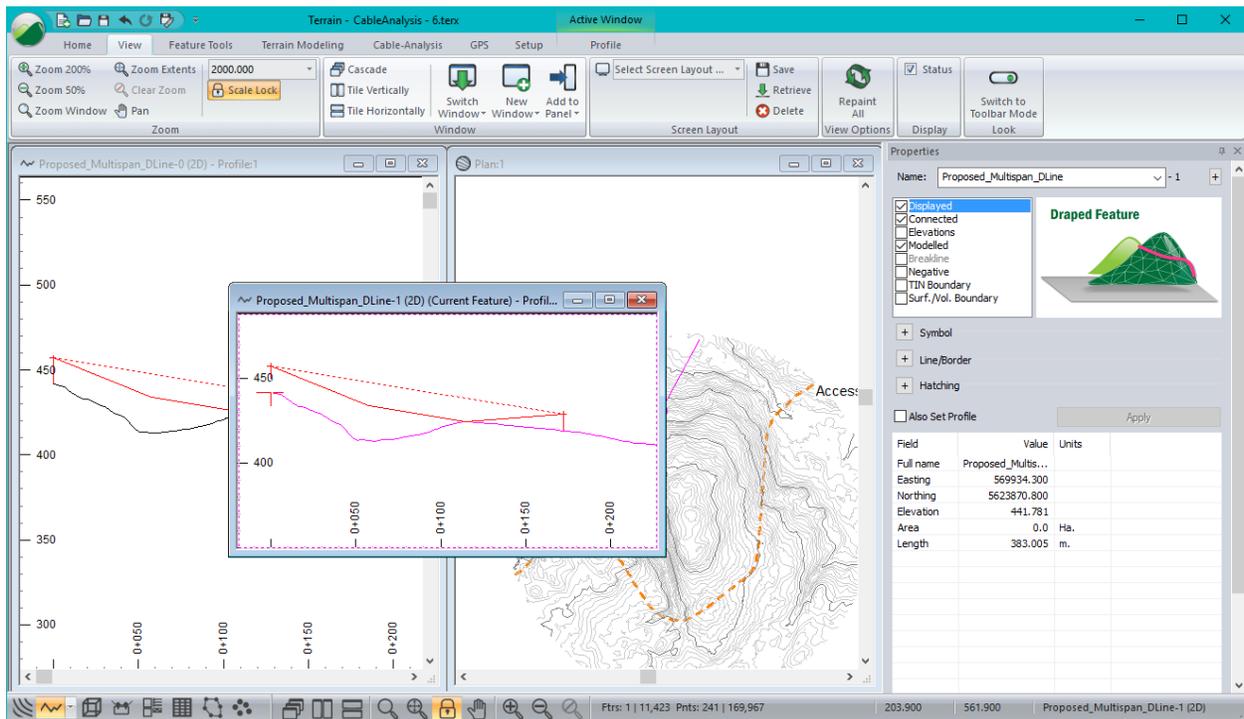


Figure 12-36: The original and duplicate D-Line features shown in two separate Profile windows.

You now have another Profile window showing the duplicate feature. Let's modify it to represent the second half of the multi-span system.

7. Change the Cable Analysis properties for the new feature:

- With *Proposed_Multispan_DLine-1* selected
- Press  *Edit* in the *Cable-Analysis* tab of the ribbon bar to open the dialogue box below.
- Change the *Logging System* to *10m Intermediate support*,
- Copy the *Haulback Block Station* into the *Head Spar (Landing)* station,
- Change the *Haulback Block Height* to **4.0** m.
- Press *Auto-calc Tail Station* to update the *Haulback Block Station*.

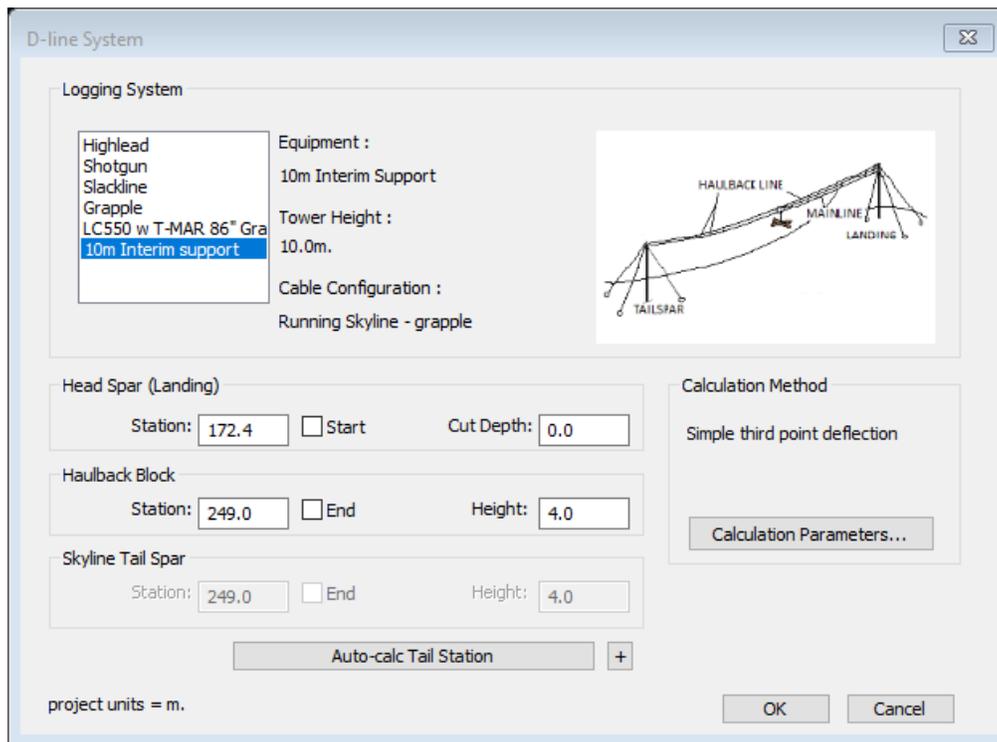


Figure 12-37: The *D-line System* dialogue box after the setting are changed as described above.

The settings in should now appear identical to the settings shown in Figure 12-37 above.

8. Press OK to return to the main screen.

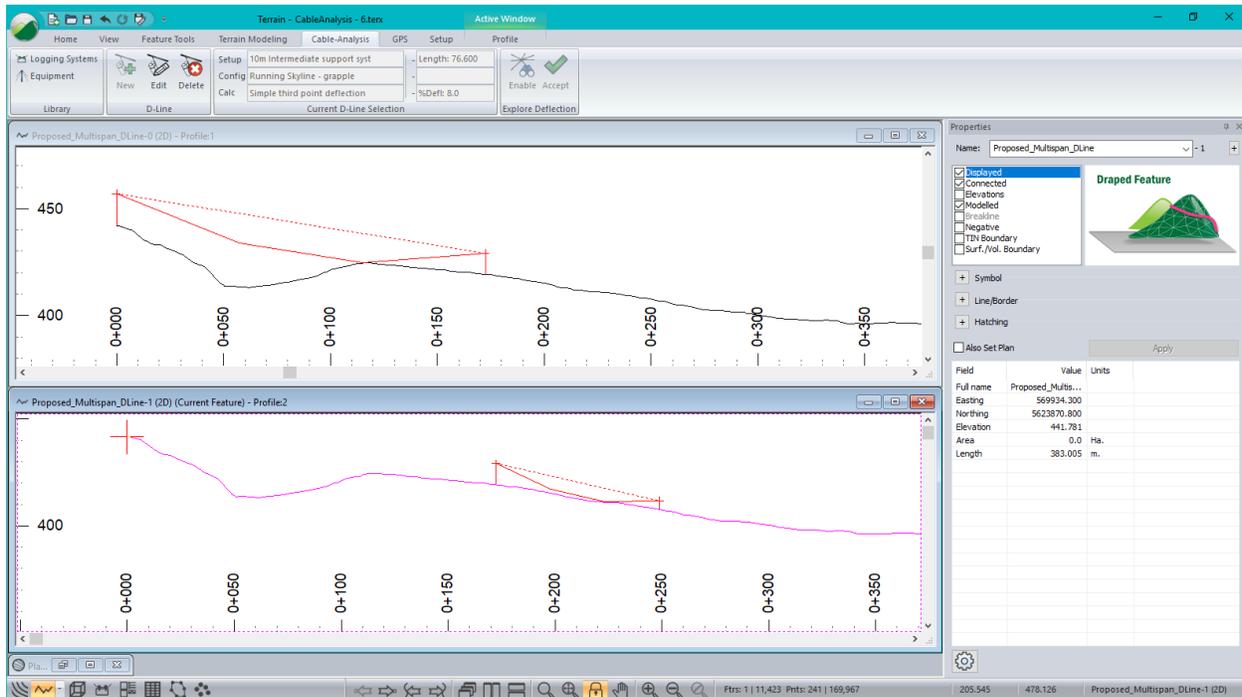


Figure 12-38: Profile windows arranged to show the two parts of the multi-span system.

Now we will use the Multi-Plot window to overlay the two profiles.

9. Press the multi-plot icon  in the bottom left of the main screen (or use View ribbon, New Window). A blank multi-plot window will appear.
10. If you want to change the page size or orientation, choose  File | Print Setup to open Printer Properties. Screen captures below use a Letter (or A4) sized page in Portrait mode.
11. Turn on snap to grid in Multi-plot. This will allow us to align the two Profile windows.
 - In the multi-plot window, right click and choose *Multi-plot Options*.
 - Check *Snap to grid* and *Show grid*. Set the *Spacing* to **10** mm.
 - Press OK to return to the main screen.
12. In the *Multi-plot* ribbon, press the *New Sub-view* button and add *Profile 1*.
13. Move and size it to the top of the page as shown in Figure 12-39 below (click and drag in the interior to move , on the handles to size )
14. Set the Scroll Position to be explicit:
 - Double click *the* profile sub-view and the *Profile 1* dialogue box will appear.
 - Clear *Auto* and set the *Station* to **-50** and the *Elevation* to **420** as shown below.
 - Press OK to return to the main screen.

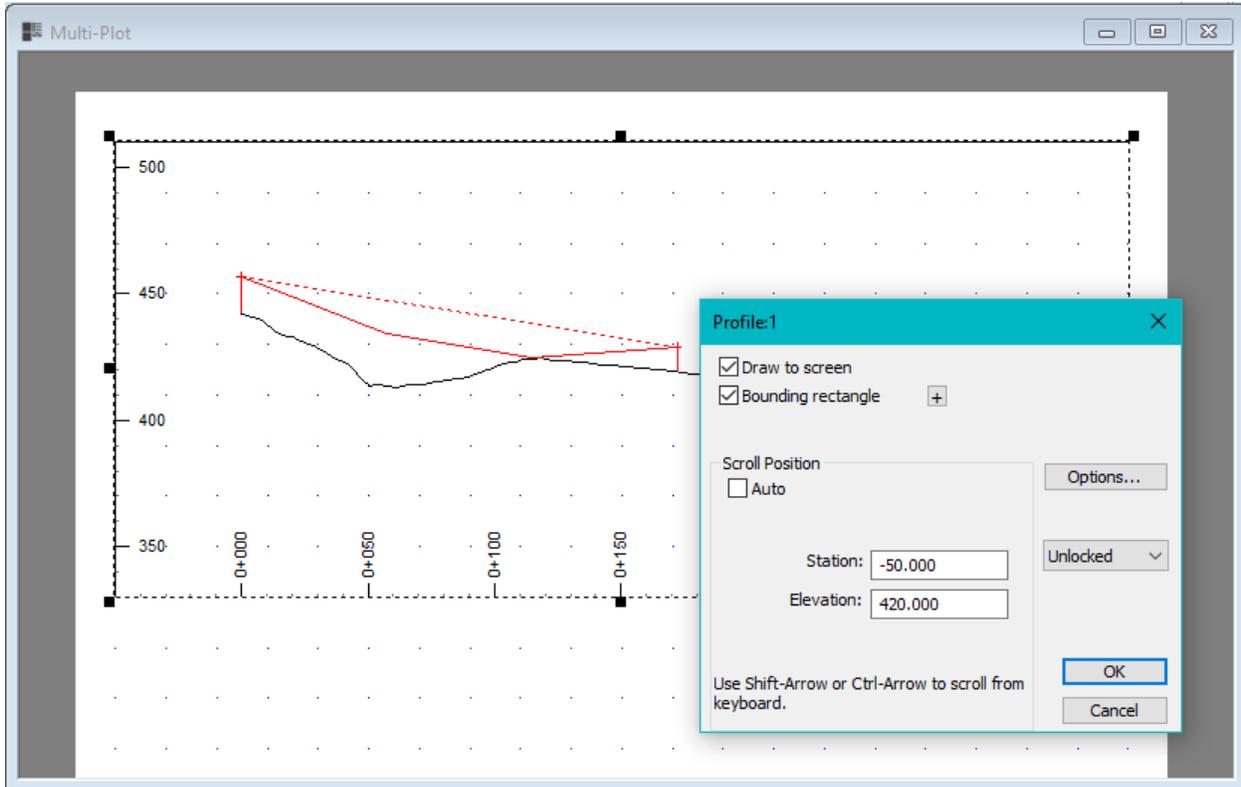


Figure 12-39: The Profile:1 Sub-view Options with explicit Scroll Position.

- Repeat steps above (starting at 12) to add Profile 2 Sub-view, overlap it with Profile 1 and configure the *Scroll Position*.

Note: If you have overlapping sub-views you will need to use the *Shuffle Front to Back* to access the window underneath. You can access this function from the right click context menu.

If you were successful at overlapping the two profile sub-windows, your multiplot screen should look like the figure below.

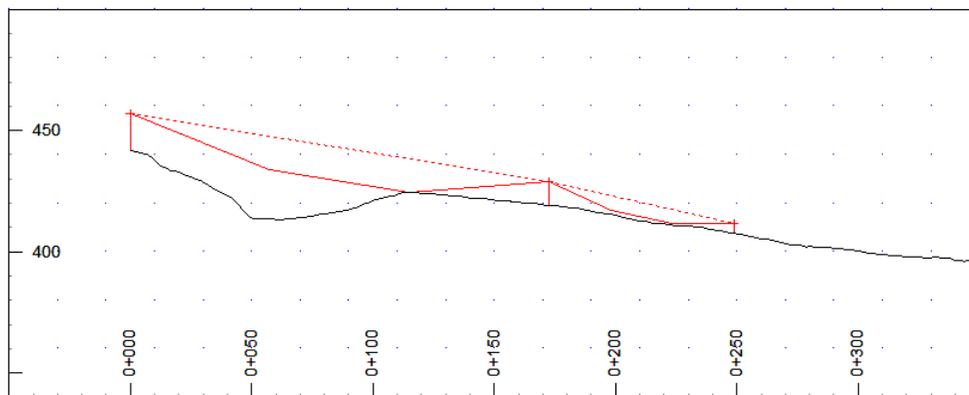


Figure 12-40: Overlapped multi-plot sub-views to illustrate a multi-span D-Line.

- Choose menu  *File* | *New*, do not save changes

Index

3

3D
window, 13
3D Viewing, 12

A

Add
button (for available symbols in the symbol items tab of symbol editor), 157
button (in the symbol items tab of the line-type editor), 163
button (in the text items tab of the line-type editor), 164
option (in symbol items editor), 156

Adding
in specialized fonts, 159

Advanced
button (in select feature(s)\by name dialog box), 148

Alphanumeric Id, 26

ASCII
import, 62
x,y,z,code, 63

Attributes, 13

Automatic
column width control for legends, 43

Automatic Labels
description, 36

Autoscale
(in profile window options), 146

Available
symbols (in symbol items tab of the symbol editor), 157
symbols (in the symbol items tab of the line-type editor), 163

B

Breakline
addition, 99

C

Cable Analysis, 166
Calculate
terrain model, 151

Changing
line-types, 35

chord azimuth
entering, 70

chord distance
entering, 70

Column Assignments, 64

Contour
generation from a radial survey, 151

Contour Generation, 12

Control + down arrow
keys to make bitmap image smaller, 55

Control + up arrow
keys to make the bitmap image bigger, 55

coordinates
entering via the keyboard, 69

Creating
symbols, 153

Ctrl + B
to move to previous survey station, 146

Ctrl + N
to move to next survey station, 146

Current Feature, 16

Current Point, 16

curve radius
entering, 70

D

Deflection Line Analysis, 166

Delete
key (to delete a point), 25
option (in symbol items editor), 157
point, 25

Description
(in line-type tab of line-type editor), 162
in legend sub-view options, 43

Digital Terrain Model, 12

Draw
transparent option (in the text items tab of the line-type editor), 164

Drawing Features
with the mouse, 19

DTM
digital terrain model, 12

duplicate
feature, 34
symbol, 34

Duplicate
button (in the line-type tab of line-type editor), 162

DXF
file type, 91
import file, 92
importing, 57
layers, 58

E

Edit
calculate terrain model, 151
option (in symbol items editor), 157

Editing Features
with the mouse, 19

Esc
key (to restore a point to its original location), 25

F

F1
on line help, 7, 64

feature
naming, 26
selection, 26

features
definition, 26

Features, 13

Fill
option (in the symbol items tab of symbol editor), 157

First
option (in the symbol items tab of the line-type editor), 163

Floating Labels
description, 36

Footprint of road, 13

Functional Overview
modules, 11

G

Generating
contours for the site, 151

Getting Started, 6

Grading, 12

H

Horizontal
scale (in profile options), 146

I

images
BMP, 46
importing, 46
JPG, 46
scaling, 46

Import
menu item, 92

Import ASCII Options, 64, 65, 66

Import DXF Options
dialog box, 92

Import Options, 68

Items
button (in mult-plot sub-view options\legend), 43

L

label
sizing and scaling, 17

Labels
adding, 36
description, 36

Last
option (in the symbol items tab of the line-type editor), 163

Layers
description, 29

Legal Survey
procedure for entering, 68

Legend
adding, 42

Line-types
changing, 31

Location Module, 13
overview, 13

lock scale, 17

M

Magnification
double, 19

half, 19
 Mapping and Drafting, 17
 Max side length, 95
 Menu Customization, 7
 Metric Units, 8
 Middle Mouse
 zoom and pan, 113

Modify
 selected feature(s), 35
 selected feature(s)\labels, 150
 selected feature(s)\line-types, 149
 selected Feature(s)\Move/size, 55
 selected feature(s)\properties, 56, 150

Module
 setup units, 63

Modules
 functional overview, 11
 location, 11, 13
 survey/map, 11
 terrain, 11, 12

Move
 cursor, 55

Multi-plot
 description, 40
 sub-view options, 44
 window, 13

N

New
 button (in symbols tab of symbol editor), 156, 158
 feature button, 129
 sub-view (in Multi-Plot), 41
 sub-view\legend, 42
 sub-view\scale bar, 44
 window\Multi-Plot, 20

Numeric Id, 26

O

On-line Help
 F1, 7

Options
 button (in import feature set), 92

Orientation handle, 38

P

Pan

button, 113
 toolbar buttons, 113

Panning, 113

Perp
 offset option (in the symbol items tab of the symbol editor), 157

Plan
 window, 12, 13, 92

Points, 13
 window, 13

Position Handle
 label, 38

Profile
 window, 12, 13

R

Redraw
 button (in symbol items editor), 157

Reset
 button (in symbol items editor), 157

Retrieve
 screen layout, 99, 148

S

Scale
 change (in the symbol items tab of symbol editor), 157

Scale Bar
 adding, 42

scales
 natural, 17
 setting, 17

Scanned
 images, 53

Select
 button (in select feature(s)\by name dialog box), 148
 feature(s)\by name, 100

Selecting
 features, 27

Selection
 cursor, 32, 38, 55, 150

Shape
 importing, 59

Shift + arrows
 to scroll around in multi-plot plan sub-view, 41
 to select multiple features in Plan, 32

Shift + Ctrl + Arrow

keys for fine adjustments to the size of the bitmap image, 55

Smoothing contours, 94

Snap to grid (in symbol items editor), 156

status window, 12

Status window, 27

Survey Format entering coordinates in, 72

Survey Notes, 11

Survey/Map Module, 11 overview, 11

Symbol items tab of symbol editor, 158

Symbols adding, 32

T

Terrain Module, 12 overview, 12 *setup*, 63

Text items tab (in the line-type editor), 164

Thickness (in symbol items tab of the symbol editor), 157

Toolbar

zoom, pan buttons, 113

Triangular Irregular Network (TIN model), 91

Tutorial files, 6

Tutorial Units setup, 8

U

Un-select All button (in select feature(s)\by name dialog box), 148

V

Vertical scale (in profile options), 146

Void area modification, 95

Volume Calculations, 12

W

Wild Card, 65

Z

Zoom toolbar buttons, 113

Zoom Tools toolbar, 113

Zooming, 17, 113